

---

---

## Highly Integrated Small Form Factor USB Type-C<sup>®</sup> Power Delivery 3.0 Port Controller

---

---

### Highlights

- Companion PD Controller for Microchip USB Hub / SoC
- Small Form Factor QFN Package
- Integrated Analog Discrete Components Reduce Bill of Materials and Design Footprint
- USB Power Delivery 3.0 Compliant MAC
- USB Type-C<sup>(1)</sup> Connector Support with Connection Detection and Control
- I<sup>2</sup>C/SPI<sup>(2)</sup> Interface for CPU/SoC Communication
- USB Type-C<sup>®</sup> Alternate Mode Support
- Dual Role Port (DRP) and Fast Role Swap (FRS) Support with DRP offload mode

### Target Applications

- Notebook Computers
- All-in-One/Desktop PCs
- Smartphones
- Tablets
- Monitors
- Docking Stations
- HDTVs
- Printers
- Automotive Breakout Boxes
- Multi-port Chargers

### Key Benefits

- Integrated Analog Discrete Components
  - VCONN FETs with Rp/Rd Switching
  - Dead Battery Rd termination
  - Programmable Current Sense for Overcurrent Conditions
  - Voltage Sense for Overvoltage Conditions
- Integrated 3.3V Power Switch
  - Provides Dead Battery Support<sup>(2)</sup>
  - Automatically Switch between VBUS and Main +3.3V

- USB Power Delivery MAC
  - Compliant with USB Power Delivery Specification Revision 3.0
  - Power Delivery Packet Framing
  - CRC Checking/Generation
  - 4B/5B Encoding/Decoding
  - BMC Encoding/Decoding
  - EOP/SOP Generation for PD Frames
  - SOP Detection and SOP Header Processing
  - Separate RX/TX FIFOs
  - Automatic GoodCRC Message Generation
  - Automatic Retry Generation
  - Error Handling
  - Low Standby Power Support
- USB Type-C Cable Detect Logic
  - Auto Cable Attach & Orientation Detection
  - Routes Baseband Communication to Respective CC Pin per Detected Orientation
  - VCONN Supply Control for Active Cable
  - Configurable Downstream Facing Port (DFP) and Upstream Facing Port (UFP) Modes
  - Charging Current Capability Detection
  - Detection of Debug Accessory Mode, Audio Adapter Accessory Mode
- I<sup>2</sup>C/SPI Interface Supports Communication/Configuration via Microchip USB Power Delivery hub or supported embedded controller<sup>(2)</sup>
- Alternate Mode Support
  - DisplayPort<sup>™</sup> and other Major Protocols
- CFG\_SEL Pin for Selection of Device Mode and I<sup>2</sup>C addresses<sup>(2)</sup>
- Power and I/Os
  - Integrated 1.8V Voltage Regulator
  - 10 Configurable General Purpose I/O Pins
- Package
  - 28-QFN (4.0mm x 4.0mm)
- Environmental Product Options
  - Commercial (0°C to +70°C)
  - Industrial (-40°C to +85°C)
  - Automotive AEC-Q100 Grade 3 (-40°C to +85°C)

- 
1. USB Type-C<sup>®</sup> and USB-C<sup>®</sup> are trademarks of USB Implementers Forum.
  2. Available only in select UPD350 configurations.

## TO OUR VALUED CUSTOMERS

It is our intention to provide our valued customers with the best documentation possible to ensure successful use of your Microchip products. To this end, we will continue to improve our publications to better suit your needs. Our publications will be refined and enhanced as new volumes and updates are introduced.

If you have any questions or comments regarding this publication, please contact the Marketing Communications Department via E-mail at [docerrors@microchip.com](mailto:docerrors@microchip.com). We welcome your feedback.

### Most Current Documentation

To obtain the most up-to-date version of this documentation, please register at our Worldwide Web site at:

<http://www.microchip.com>

You can determine the version of a data sheet by examining its literature number found on the bottom outside corner of any page. The last character of the literature number is the version number, (e.g., DS30000000A is version A of document DS30000000).

### Errata

An errata sheet, describing minor operational differences from the data sheet and recommended workarounds, may exist for current devices. As device/documentation issues become known to us, we will publish an errata sheet. The errata will specify the revision of silicon and revision of document to which it applies.

To determine if an errata sheet exists for a particular device, please check with one of the following:

- Microchip's Worldwide Web site; <http://www.microchip.com>
- Your local Microchip sales office (see last page)

When contacting a sales office, please specify which device, revision of silicon and data sheet (include -literature number) you are using.

### Customer Notification System

Register on our web site at [www.microchip.com](http://www.microchip.com) to receive the most current information on all of our products.

## Table of Contents

|   |     |
|---|-----|
| 1.0 Preface .....                                       | 4   |
| 2.0 Introduction .....                                  | 7   |
| 3.0 Pin Descriptions and Configuration .....            | 9   |
| 4.0 Register Map .....                                  | 18  |
| 5.0 I2C Slave Controller (UPD350-A/UPD350-C Only) ..... | 19  |
| 6.0 SPI Slave Controller (UPD350-B/UPD350-D Only) ..... | 25  |
| 7.0 Clocks, Resets, and Power Management .....          | 30  |
| 8.0 System Control .....                                | 35  |
| 9.0 Cable Plug Orientation and Detection .....          | 67  |
| 10.0 Baseband CC Interface (BCI) .....                  | 108 |
| 11.0 Power Delivery MAC .....                           | 113 |
| 12.0 Power Switch .....                                 | 173 |
| 13.0 HDMI/DisplayPort Hot Plug Detect (HPD) .....       | 187 |
| 14.0 Watchdog Timer (WDT) .....                         | 194 |
| 15.0 Operational Characteristics .....                  | 198 |
| 16.0 Package Information .....                          | 204 |
| Appendix A: Data Sheet Revision History .....           | 207 |
| The Microchip Web Site .....                            | 209 |
| Customer Change Notification Service .....              | 209 |
| Customer Support .....                                  | 209 |
| Product Identification System .....                     | 210 |

# UPD350

## 1.0 PREFACE

### 1.1 Glossary of Terms

TABLE 1-1: GLOSSARY OF TERMS

| Term      | Definition  |
|-----------|---|
| ADC       | Analog to Digital Converter   |
| AFE       | Analog Front End  |
| BCI       | Baseband CC Interface   |
| Billboard | USB Billboard Device. A required USB device class for UFPs which support Alternate Modes in order to provide product information to the USB Host. |
| BIST      | Built-In Self Test  |
| BMC       | Bi-phase Mark Coding  |
| Byte      | 8-bits  |
| CC        | Generic reference to USB Type-C <sup>®</sup> Cable / Connector CC1/CC2 pins   |
| CSR       | Control and Status Register   |
| DB        | Dead Battery  |
| DFP       | Downstream Facing Port (USB Type-C <sup>®</sup> Specification definition)   |
| DP        | DisplayPort (a VESA standard interface)   |
| DPM       | Device Policy Manager (PD Specification definition)   |
| DRP       | Dual Role Power (USB Type-C <sup>®</sup> Specification definition)  |
| DWORD     | 32-bits   |
| EC        | Embedded Controller   |
| EP        | USB Endpoint  |
| FIFO      | First In First Out buffer   |
| FW        | Firmware  |
| FS        | Full-Speed  |
| Host      | External system (Includes processor, application software, etc.)  |
| HPD       | Hot-Plug Detect functionality as defined by DisplayPort and DisplayPort Alternate Mode specifications   |
| HS        | High-Speed  |
| HW        | Hardware (Refers to function implemented by the device)   |
| IC        | Integrated Circuit  |
| IFC       | InterFrame Gap  |
| LDO       | Linear Drop-Out regulator   |
| MAC       | Media Access Controller   |
| Microchip | Microchip Technology Incorporated   |
| N/A       | Not Applicable  |
| OCS       | Over-Current Sense  |
| PCS       | Physical Coding Sublayer  |
| PD / UPD  | USB Power Delivery  |
| PIO       | General Purpose I/O   |
| PMIC      | Power Management Integrated Circuit   |
| POR       | Power-On Reset  |
| PRBS      | Pseudo Random Binary Sequence   |
| QWORD     | 64-bits   |
| SA        | Source Address  |

**TABLE 1-1: GLOSSARY OF TERMS (CONTINUED)**

| Term              | Definition  |
|-------------------|---|
| <b>SBU</b>        | SideBand Use  |
| <b>SCSR</b>       | System Control and Status Register                                      |
| <b>SPM</b>        | System Policy Manager (PD Specification definition)                     |
| <b>SS</b>         | SuperSpeed  |
| <b>SVDM</b>       | Standard/Vendor Defined Message (PD Specification definition)           |
| <b>SVID</b>       | Standard/Vendor IDentity (PD Specification definition)                  |
| <b>TCPC</b>       | USB Type-C Port Controller  |
| <b>UFP</b>        | Upstream Facing Port (USB Type-C <sup>®</sup> Specification definition) |
| <b>USB</b>        | Universal Serial Bus  |
| <b>USB Type-C</b> | USB Type-C Cable / Connector  |
| <b>VDO</b>        | Vendor-defined Object (PD Specification definition)                     |
| <b>VSM</b>        | Vendor Specific Messaging   |
| <b>WORD</b>       | 16-bits   |
| <b>ZLP</b>        | Zero Length USB Packet  |

## 1.2 Buffer Types

**TABLE 1-2: BUFFER TYPES**

| Buffer Type | Description   |
|-------------|---|
| IS          | Schmitt-triggered input   |
| I2C         | I <sup>2</sup> C interface  |
| O8          | Output with 8 mA sink and 8 mA source   |
| OD8         | Open-drain output with 8 mA sink  |
| PU          | 70k (typical) internal pull-up. Unless otherwise noted in the pin description, internal pull-ups are always enabled.<br><br><b>Note:</b> Internal pull-up resistors prevent unconnected inputs from floating. Do not rely on internal resistors to drive signals external to the device. When connected to a load that must be pulled high, an external resistor must be added. |
| AIO         | Analog bidirectional  |
| P           | Power pin   |

**Note:** Digital signals are not 5V tolerant unless specified.

**Note:** Refer to [Section 15.5, "DC Characteristics," on page 200](#) for the electrical characteristics of the various buffers.

# UPD350

## 1.3 Register Nomenclature

TABLE 1-3: REGISTER NOMENCLATURE

| Register Bit Type Notation | Register Bit Description   |
|----------------------------|--|
| R                          | <b>Read:</b> A register or bit with this attribute can be read.  |
| W                          | <b>Write:</b> A register or bit with this attribute can be written.  |
| RO                         | <b>Read only:</b> Read only. Writes have no effect.  |
| RS                         | <b>Read to Set:</b> This bit is set on read.   |
| WO                         | <b>Write only:</b> If a register or bit is write-only, reads will return unspecified data.   |
| W1S                        | <b>Write One to Set:</b> Writing a one sets the value. Writing a zero has no effect.   |
| W1C                        | <b>Write One to Clear:</b> Writing a one clears the value. Writing a zero has no effect.   |
| WC                         | <b>Write Anything to Clear:</b> Writing anything clears the value.   |
| LL                         | <b>Latch Low:</b> Clear on read of register.   |
| LH                         | <b>Latch High:</b> Clear on read of register.  |
| SC                         | <b>Self-Clearing:</b> Contents are self-cleared after the being set. Writes of zero have no effect. Contents can be read.  |
| RO/LH                      | <b>Read Only, Latch High:</b> Bits with this attribute will stay high until the bit is read. After it is read, the bit will remain high, but will change to low if the condition that caused the bit to go high is removed. If the bit has not been read, the bit will remain high regardless of a change to the high condition. |
| NASR                       | <b>Not Affected by Software Reset.</b> The state of NASR bits do not change on assertion of a software reset.  |
| RESERVED                   | <b>Reserved Field:</b> Reserved fields must be written with zeros, unless otherwise indicated, to ensure future compatibility. The value of reserved bits is not guaranteed on a read.   |

## 1.4 References

- NXP I<sup>2</sup>C-Bus Specification (UM10204, April 4, 2014): [www.nxp.com/documents/user\\_manual/UM10204.pdf](http://www.nxp.com/documents/user_manual/UM10204.pdf)
- USB Power Delivery and USB Type-C<sup>®</sup> Specifications: [http://www.usb.org/developers/docs/usb\\_31\\_102015.zip](http://www.usb.org/developers/docs/usb_31_102015.zip)
- VESA DisplayPort Alternate Mode Specification 1.0: <http://www.vesa.org>

## 2.0 INTRODUCTION

### 2.1 General Description

The UPD350 is a highly integrated, small form factor USB Type-C® Power Delivery (PD) Port Controller designed to adhere to the *USB Type-C® Cable and Connector Specification* and *USB Power Delivery 3.0 Specification*. The UPD350 provides cable plug orientation and detection for a USB Type-C receptacle and implements baseband communication with a partner USB Type-C device via the integrated USB Power Delivery 3.0 MAC. The UPD350 is designed to function as a Companion Power Delivery Controller to an external Microchip MCU/SoC or USB hub using the integrated I<sup>2</sup>C/SPI interface. The device is capable of controlling up to 100W of Power Delivery current and voltage using an external power device. Alternatively, the UPD350 can operate as a standalone UFP basic Type-C (non-PD) controller. The device can function in Standalone UFP modes, or utilize the integrated I<sup>2</sup>C/SPI interface to connect to a companion CPU/SoC (dependent on device version, see [Section 2.2, "UPD350 Family Differences Summary"](#)).


The UPD350 integrates many of the analog discrete components required for USB Type-C PD applications, including two VCONN FETs with Rp/Rd switching, a power switch, and current and voltage sense circuitry for over-voltage/current detection. By integrating many of the analog discrete components required for USB Type-C PD applications, the UPD350 provides a low cost, low power, small footprint solution for consumer (notebooks, desktop PCs, smartphones, tablets, monitors, docking stations), industrial, and automotive applications.

To enable the UPD350 to efficiently support dead battery use cases, an integrated power switch is provided to select between two external 3.3V supplies (VBUS and main). This effectively allows connection detection and system wakeup without external processor intervention (external processor in sleep mode).

The UPD350 is capable of negotiating alternate modes over USB Type-C connectors using the Power Delivery 3.0 protocol. DisplayPort operation over USB Type-C connectors is supported in addition to other major protocols.


A system diagram utilizing the UPD350 is shown in [Figure 2-1](#). An internal block diagram of the UPD350 is shown in [Figure 2-2](#).

**FIGURE 2-1: SYSTEM BLOCK DIAGRAM**

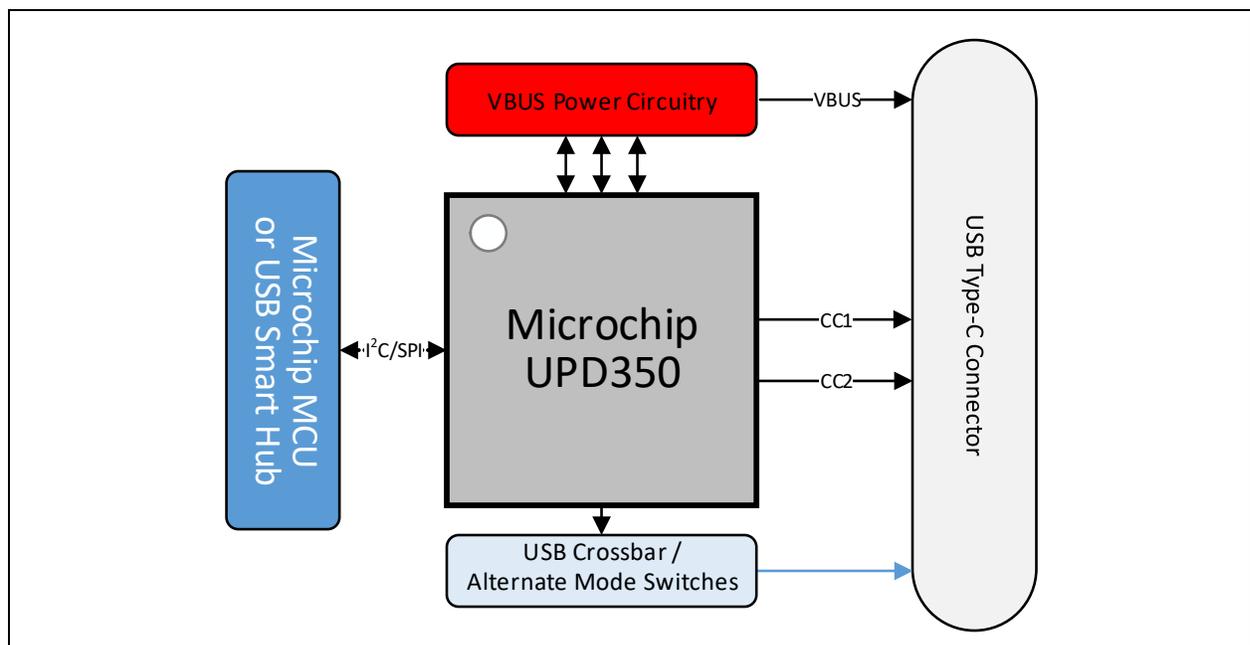

# UPD350

FIGURE 2-2: INTERNAL BLOCK DIAGRAM

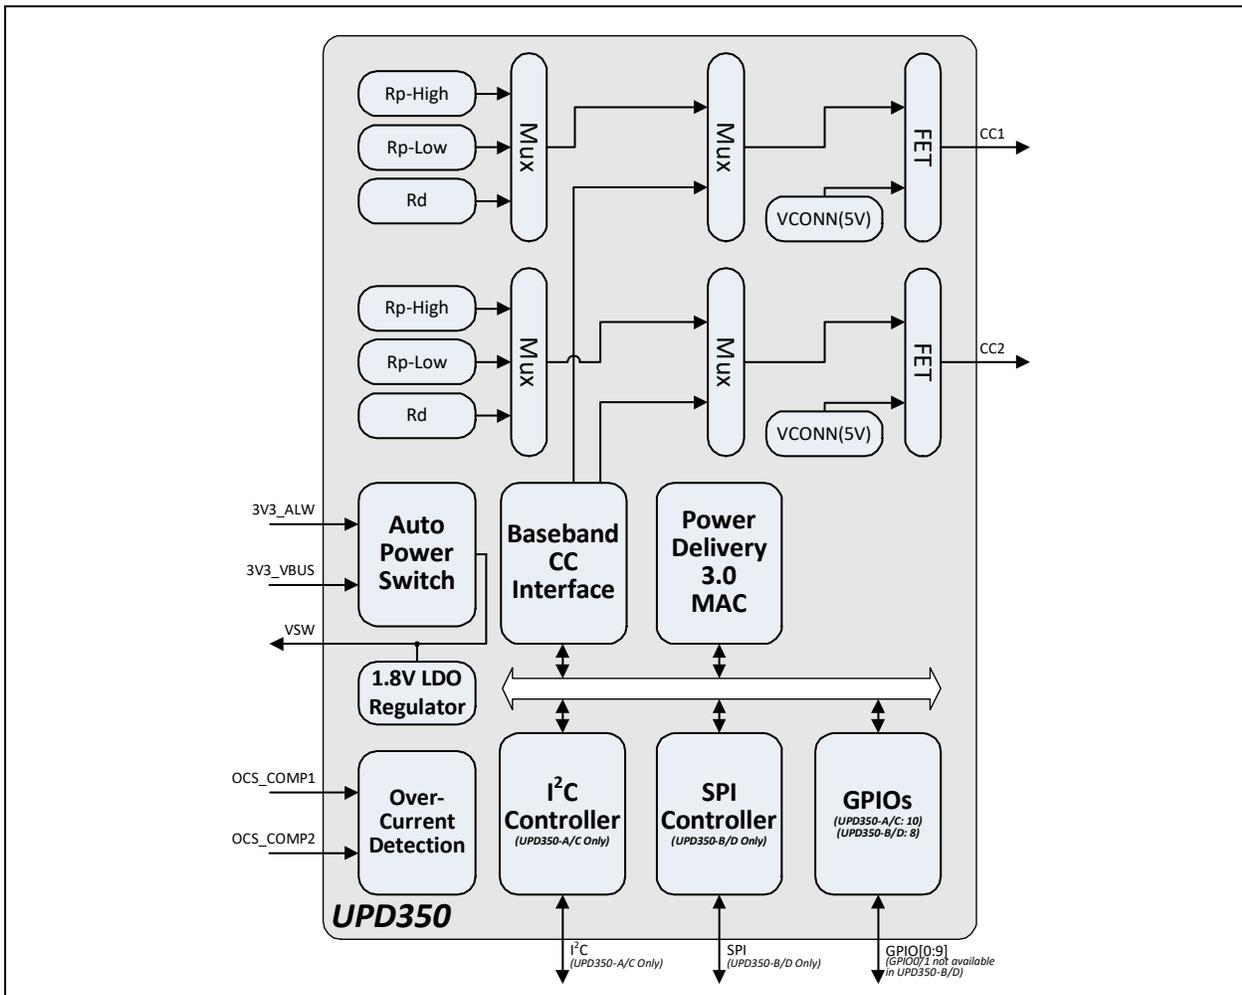

## 2.2 UPD350 Family Differences Summary

The UPD350 is available in four versions:

- UPD350-A
- UPD350-B
- UPD350-C
- UPD350-D

A summary of the differences between these versions is provided in [Table 2-1](#). Device specific features that do not pertain to the entire UPD350 family are called out independently throughout this document. For ordering information, refer to the [Product Identification System on page 210](#).

TABLE 2-1: UPD350 FAMILY DIFFERENCES

| Device   | +1.8V-3.3V<br>I <sup>2</sup> C Interface | SPI<br>Interface | Standalone<br>UFP/DFP Mode | Dead Battery<br>Support |
|----------|--|------------------|----------------------------|-------------------------|
| UPD350-A | X  |                  | X                          | X                       |
| UPD350-B |  | X                |                            | X                       |
| UPD350-C | X  |                  | X                          |                         |
| UPD350-D |  | X                |                            |                         |



## 3.0 PIN DESCRIPTIONS AND CONFIGURATION


### 3.1 Pin Assignments

The pin assignments for the UPD350-A / UPD350-C are detailed in [Section 3.1.1, "UPD350-A / UPD350-C Pin Assignments," on page 9](#). The pin assignments for the UPD350-B / UPD350-D are detailed in [Section 3.1.2, "UPD350-B / UPD350-D Pin Assignments," on page 11](#). For information on the differences between the UPD350 family of devices, refer to [Section 2.2, "UPD350 Family Differences Summary," on page 8](#).

#### 3.1.1 UPD350-A / UPD350-C PIN ASSIGNMENTS

The pin assignments of the UPD350-A and UPD350-C devices are identical. The device pin diagram for the UPD350-A / UPD350-C can be seen in [Figure 3-1](#). [Table 3-1](#) provides a UPD350-A / UPD350-C pin assignment table. Pin descriptions are provided in [Section 3.2, "Pin Descriptions"](#).

**FIGURE 3-1: UPD350-A / UPD350-C PIN ASSIGNMENTS (TOP VIEW)**

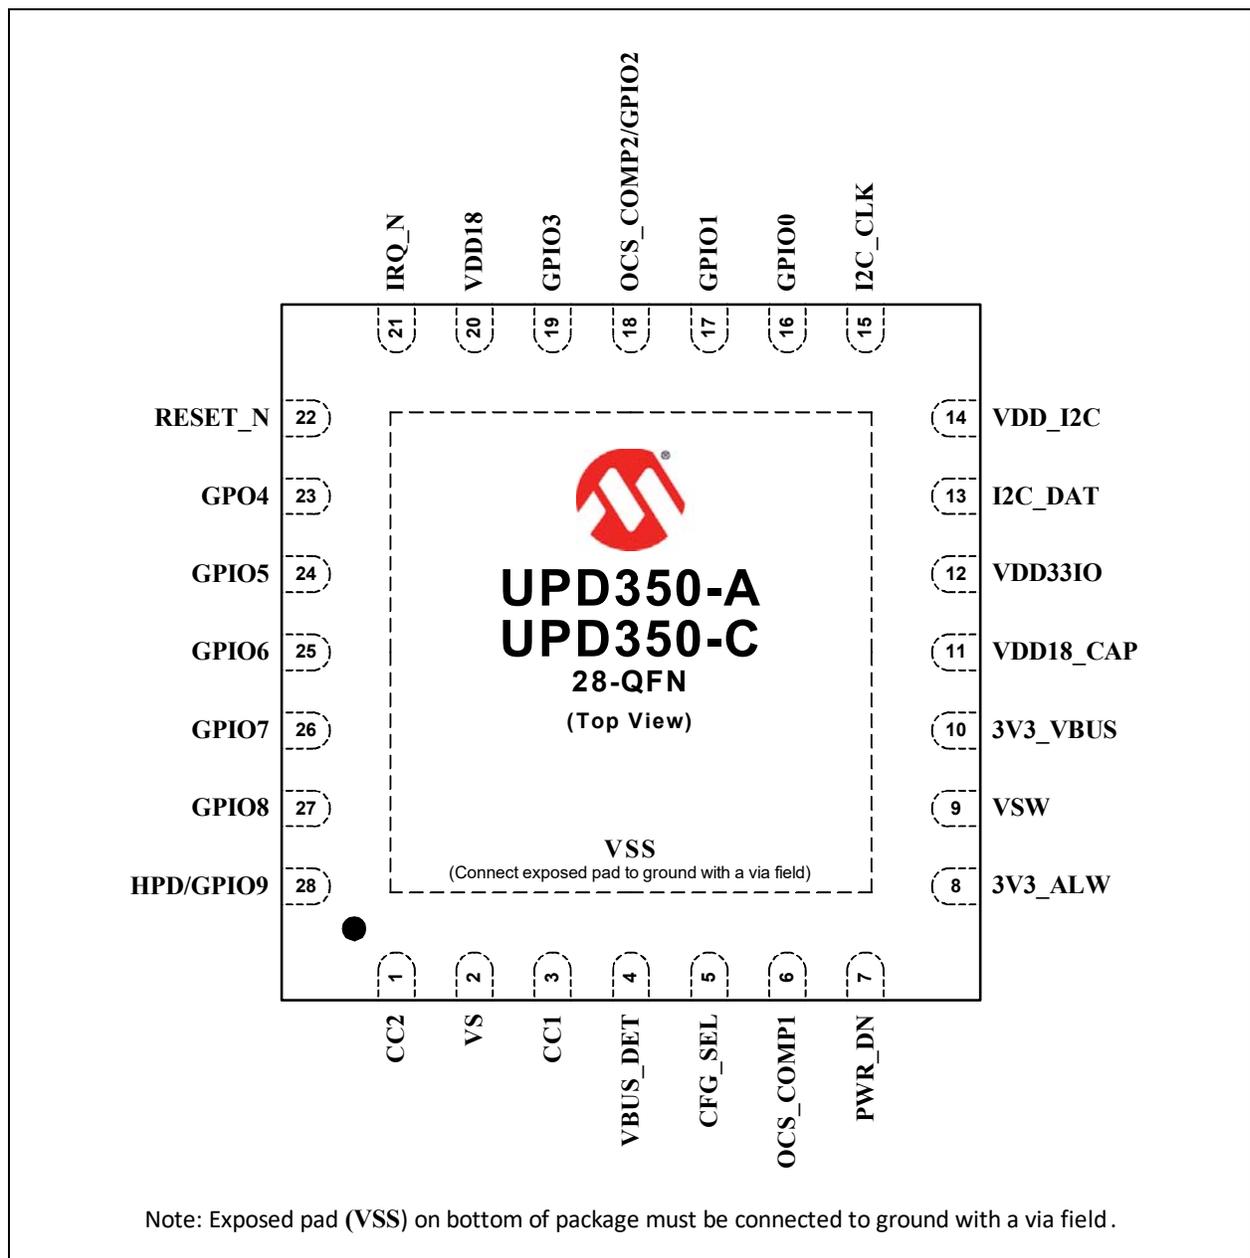

# UPD350

**TABLE 3-1: UPD350-A / UPD350-C PIN ASSIGNMENTS**

| Pin | Pin Name  | Pin | Pin Name                   |
|-----|-----------|-----|----------------------------|
| 1   | CC2       | 15  | I2C_CLK                    |
| 2   | VS        | 16  | GPIO0(Notes 3-1)           |
| 3   | CC1       | 17  | GPIO1(Notes 3-1)           |
| 4   | VBUS_DET  | 18  | OCS_COMP2/GPIO2(Notes 3-1) |
| 5   | CFG_SEL   | 19  | GPIO3(Notes 3-1)           |
| 6   | OCS_COMP1 | 20  | VDD18                      |
| 7   | PWR_DN    | 21  | IRQ_N                      |
| 8   | 3V3_ALW   | 22  | RESET_N                    |
| 9   | VSW       | 23  | GPO4                       |
| 10  | 3V3_VBUS  | 24  | GPIO5(Notes 3-1)           |
| 11  | VDD18_CAP | 25  | GPIO6(Notes 3-1)           |
| 12  | VDD33IO   | 26  | GPIO7(Notes 3-1)           |
| 13  | I2C_DAT   | 27  | GPIO8(Notes 3-1)           |
| 14  | VDD_I2C   | 28  | HPD/GPIO9(Notes 3-1)       |

**Note 3-1** This pin provides alternate functions when in Standalone DFP and/or Standalone UFP Mode. Refer to [Section 3.1.1.1, "UPD350-A / UPD350-C GPIO Functions in Standalone DFP/UFP Modes"](#) for additional information.

### 3.1.1.1 UPD350-A / UPD350-C GPIO Functions in Standalone DFP/UFP Modes

When the UPD350-A / UPD350-C is configured in Standalone DFP or Standalone UFP mode, the following GPIO pins are assigned specific alternate functions, as detailed in [Table 3-2](#).


**TABLE 3-2: UPD350-A / UPD350-C ALTERNATE GPIO FUNCTIONS IN STANDALONE DFP/UFP MODE**

| Pin | I <sup>2</sup> C Companion Mode | Standalone DFP Mode | Standalone UFP Mode |
|-----|---------------------------------|---------------------|---------------------|
| 16  | GPIO0                           | ERR_RECOVER         | GPIO0               |
| 17  | GPIO1                           | PWR_EN              | GPIO1               |
| 18  | GPIO2                           | ORIENTATION         | ORIENTATION         |
| 19  | GPIO3                           | ATTACH              | ATTACH              |
| 23  | GPO4                            | DISCHARGE           | GPO4                |
| 24  | GPIO5                           | PORT_POWER          | GPIO5               |
| 25  | GPIO6                           | OCS_IN              | SINK_5V_LEGACY_N    |
| 26  | GPIO7                           | OCS_OUT             | SINK_5V_1A5_N       |
| 27  | GPIO8                           | PWR_CAP0            | SINK_5V_3A0_N       |
| 28  | GPIO9                           | PWR_CAP1            | GPIO9               |

## 3.1.2 UPD350-B / UPD350-D PIN ASSIGNMENTS

The pin assignments of the UPD350-B and UPD350-D devices are identical. The device pin diagram for the UPD350-B / UPD350-D can be seen in [Figure 3-2](#). [Table 3-3](#) provides a UPD350-B / UPD350-D pin assignment table. Pin descriptions are provided in [Section 3.2, "Pin Descriptions"](#).

**FIGURE 3-2: UPD350-B / UPD350-D PIN ASSIGNMENTS (TOP VIEW)**

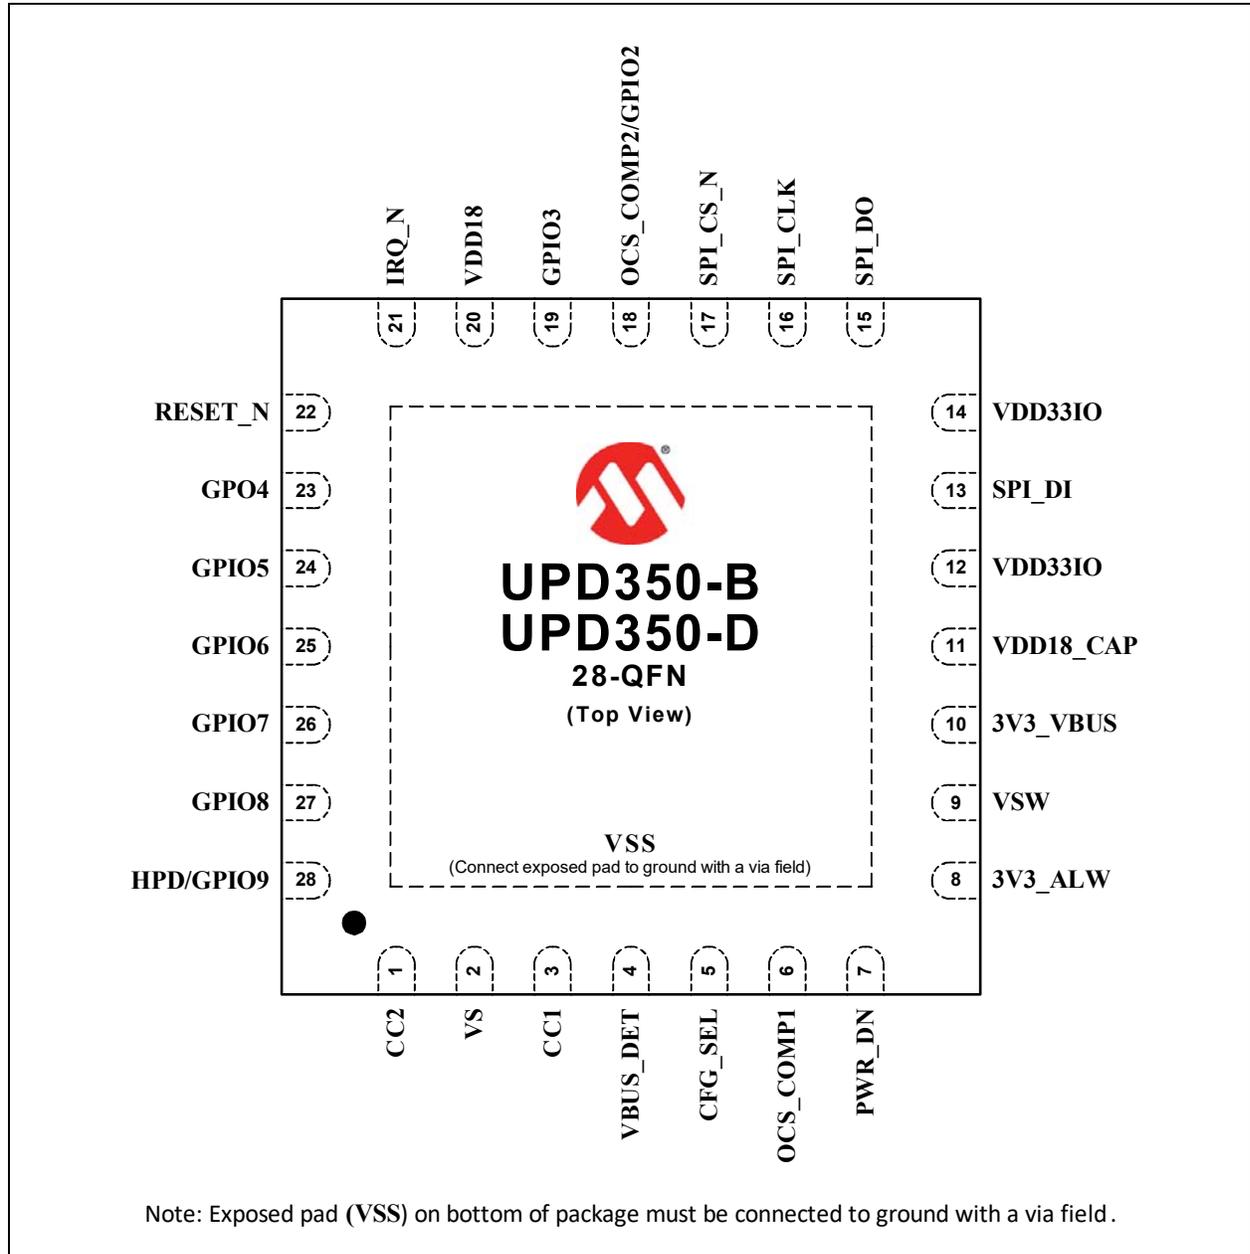

# UPD350

---

---

**TABLE 3-3: UPD350-B / UPD350-D PIN ASSIGNMENTS**

| Pin | Pin Name  | Pin | Pin Name        |
|-----|-----------|-----|-----------------|
| 1   | CC2       | 15  | SPI_DO          |
| 2   | VS        | 16  | SPI_CLK         |
| 3   | CC1       | 17  | SPI_CS_N        |
| 4   | VBUS_DET  | 18  | OCS_COMP2/GPIO2 |
| 5   | CFG_SEL   | 19  | GPIO3           |
| 6   | OCS_COMP1 | 20  | VDD18           |
| 7   | PWR_DN    | 21  | IRQ_N           |
| 8   | 3V3_ALW   | 22  | RESET_N         |
| 9   | VSW       | 23  | GPO4            |
| 10  | 3V3_VBUS  | 24  | GPIO5           |
| 11  | VDD18_CAP | 25  | GPIO6           |
| 12  | VDD33IO   | 26  | GPIO7           |
| 13  | SPI_DI    | 27  | GPIO8           |
| 14  | VDD33IO   | 28  | HPD/GPIO9       |

## 3.2 Pin Descriptions

This sections details the functions of the various device signals.

**TABLE 3-4: PIN DESCRIPTIONS**

| Name   | Symbol    | Buffer Type | Description   |
|--|-----------|-------------|---|
| <b>USB Type-C®</b>   |           |             |   |
| Configuration Channel 1                                    | CC1       | AIO         | Configuration Channel (CC) used in the discovery, configuration and management of connections across a USB Type-C cable. Refer to Section “CC Comparator” for additional information.   |
| Configuration Channel 2                                    | CC2       | AIO         | Configuration Channel (CC) used in the discovery, configuration and management of connections across a USB Type-C cable. Refer to Section “CC Comparator” for additional information.   |
| <b>I<sup>2</sup>C Interface (UPD350-A / UPD350-C Only)</b> |           |             |   |
| I <sup>2</sup> C Clock                                     | I2C_CLK   | I2C         | +1.8/3.3V I <sup>2</sup> C clock signal   |
| I <sup>2</sup> C Data                                      | I2C_DAT   | I2C         | +1.8/3.3V I <sup>2</sup> C data signal  |
| <b>SPI Interface (UPD350-B / UPD350-D Only)</b>            |           |             |   |
| SPI Clock  | SPI_CLK   | IS          | SPI clock.<br>The maximum supported SPI clock frequency is 25 MHz.  |
| SPI Data Out   | SPI_DO    | O8          | SPI output data.  |
| SPI Data In  | SPI_DI    | IS          | SPI input data.   |
| SPI Chip Enable  | SPI_CS_N  | IS          | Active low SPI chip enable input.   |
| <b>Power Delivery Control</b>                              |           |             |   |
| Hot Plug Detect  | HPD       | IS/O8       | DisplayPort Hot Plug Detection. Refer to Section “DisplayPort Hot Plug Detect (HPD) for additional information.   |
| VBUS Discharge   | DISCHARGE | O8          | VBUS discharge.<br><b>Note:</b> This signal is not available in the UPD350-B / UPD350-D.  |
| Type-C Attach  | ATTACH    | O8          | In the Standalone UFP and Standalone DFP mode ( <i>UPD350-A / UPD350-C only</i> ), this signal indicates that the USB Type-C receptacles at the near and far end of the cable both have a plug-in. This pin is autonomously driven by the device in DFP standalone mode.<br><br>0b: Nothing attached<br>1b: USB Type-C port has an end-end attached<br><b>Note:</b> Float this signal when unused.<br><b>Note:</b> This signal is not available in the UPD350-B / UPD350-D. |

# UPD350

**TABLE 3-4: PIN DESCRIPTIONS (CONTINUED)**

| Name                   | Symbol             | Buffer Type | Description  |
|------------------------|--------------------|-------------|--|
| Type-C Orientation     | <b>ORIENTATION</b> | O8          | <p>In the Standalone UFP and Standalone DFP mode (<i>UPD350-A / UPD350-C only</i>), this signal is used to indicate which CC pin is terminated by the attached device. This pin is autonomously driven by the device in DFP standalone mode.</p> <p>DFP:<br/>           0b: CC1 pin is terminated by Rd.<br/>           1b: CC2 pin is terminated by Rd.</p> <p>UFP:<br/>           0b: CC1 pin is pulled to a higher voltage than CC2.<br/>           1b: CC2 pin is pulled to a higher voltage than CC1.</p> <p><b>Note:</b> Float this signal when unused.<br/> <b>Note:</b> This signal is not available in the UPD350-B / UPD350-D.</p> |
| VBUS Power Enable      | <b>PWR_EN</b>      | IS          | <p>In the Standalone DFP mode (<i>UPD350-A / UPD350-C only</i>), this signal is used as a port power switch enable for USB hubs.</p> <p><b>Note:</b> In UFP mode, this signal should be pulled-up when unused.<br/> <b>Note:</b> This signal is not available in the UPD350-B / UPD350-D.</p>  |
| Power Capability 0     | <b>PWR_CAP0</b>    | IS          | <p>In the Standalone DFP mode (<i>UPD350-A / UPD350-C only</i>), these signals define the charging current supported by the device.</p> <p>00b: USB 2.0 Default Current<br/>           01b: USB 3.0 Default Current<br/>           10b: 1.5 A<br/>           11b: 3.0 A</p> <p><b>Note:</b> It is not valid to change the state of <b>PWR_CAP0</b> and <b>PWR_CAP1</b> pins after reset is de-asserted.<br/> <b>Note:</b> These signals are not available in the UPD350-B / UPD350-D.</p>  |
| Power Capability 1     | <b>PWR_CAP1</b>    | IS          |  |
| Over-current Sense Out | <b>OCS_OUT</b>     | OD8         | <p>In Standalone DFP mode (<i>UPD350-A / UPD350-C only</i>), this active-low output pin indicates an OCS event occurred to the partner hub.</p> <p><b>Note:</b> It is recommended this signal be augmented with a weak pull-up at all times.<br/> <b>Note:</b> This signal is not available in the UPD350-B / UPD350-D.</p>  |
| Over-current Sense In  | <b>OCS_IN</b>      | IS          | <p>In Standalone DFP mode (<i>UPD350-A / UPD350-C only</i>), this active-low input pin indicates an OCS event occurred at the partner hub. This signal maps to the PPC_INT interrupt.</p> <p><b>Note:</b> It is recommended this signal be augmented with a weak pull-up at all times.<br/> <b>Note:</b> This signal is not available in the UPD350-B / UPD350-D.</p>  |

**TABLE 3-4: PIN DESCRIPTIONS (CONTINUED)**

| Name                 | Symbol           | Buffer Type | Description  |
|----------------------|------------------|-------------|--|
| Port Power           | PORT_POWER       | O8          | In Standalone DFP mode ( <i>UPD350-A / UPD350-C only</i> ), this pin is used to enable the external Port Power Controller (PPC).<br><b>Note:</b> This signal is not available in the UPD350-B / UPD350-D.  |
| Error Recovery       | ERR_RECOVER      | IS          | In Standalone DFP mode ( <i>UPD350-A / UPD350-C only</i> ), this pin determines whether or not the USB Type-C logic shall attempt to auto-recover from an OCS or other error.<br><br>0b: When operating as a standalone DFP, do not attempt to auto-recover from any OCS conditions.<br><br>1b: When operating as a standalone DFP, the Type-C FSM shall attempt to auto-recover from an OCS condition sources from either the external Port Power Switch or VCONN FET.<br><b>Note:</b> This signal is not available in the UPD350-B / UPD350-D. |
| Sink Legacy Current  | SINK_5V_LEGACY_N | OD8         | In the Standalone UFP mode ( <i>UPD350-A / UPD350-C only</i> ), this pin asserts autonomously when a source has been detected that provides legacy USB current.<br><b>Note:</b> Float this signal when unused.<br><b>Note:</b> This signal is not available in the UPD350-B / UPD350-D.  |
| Sink 1.5A Current    | SINK_5V_1A5_N    | OD8         | In the Standalone UFP mode ( <i>UPD350-A / UPD350-C only</i> ), this pin asserts autonomously when a source has been detected that provides 1.5A USB current.<br><b>Note:</b> Float this signal when unused.<br><b>Note:</b> This signal is not available in the UPD350-B / UPD350-D.  |
| Sink 3A Current      | SINK_5V_3A0_N    | OD8         | In the Standalone UFP mode ( <i>UPD350-A / UPD350-C only</i> ), this pin asserts autonomously when a source has been detected that provides 3.0A USB current.<br><b>Note:</b> Float this signal when unused.<br><b>Note:</b> This signal is not available in the UPD350-B / UPD350-D.  |
| <b>Miscellaneous</b> |                  |             |  |
| Interrupt            | IRQ_N            | OD8         | Active low interrupt signal.<br><b>Note:</b> Float this signal when unused.  |
| VBUS Detection       | VBUS_DET         | AIO         | Scaled down version of VBUS. Tie this signal to VBUS via a resistor divider.   |
| Configuration Select | CFG_SEL          | AIO         | This multi-level configuration signal is sampled after a system reset to select the device's default mode of operation based on the connected 1% precision resistor value.<br><b>Note:</b> This pin is used to determine the default I <sup>2</sup> C slave address and operating mode in the UPD350-A / UPD350-C. For the UPD350-B / UPD350-D, this pin can be used for customer specific purposes to provide a discrete value (0-15) based upon the attached resistor value.   |

# UPD350

**TABLE 3-4: PIN DESCRIPTIONS (CONTINUED)**

| Name                            | Symbol   | Buffer Type    | Description   |
|---------------------------------|--|----------------|---|
| General Purpose I/O 0-9         | <b>GPIO0, GPIO1, GPIO2, GPIO3, GPO4, GPIO5, GPIO6, GPIO7, GPIO8, GPIO9</b> | IS/O8/OD8 (PU) | <p>The general purpose I/O signals are fully programmable as either a push-pull output, an open-drain output, or a Schmitt-triggered input (except GPO4). A programmable pull-up may optionally be enabled.</p> <p><b>Note:</b> The functionality of these GPIOs is defined and controlled by USB Power Delivery firmware executed external to the UPD350 (in the Microchip USB hub or embedded controller).</p> <p><b>Note:</b> <b>The GPO4 general purpose signal must be augmented with a weak pull-down in order to prevent the device from entering a test mode on start-up.</b></p> <p><b>Note:</b> In companion mode, these signals should be tied to ground when unused.</p> <p><b>Note:</b> External pull-ups and pull-downs shall be placed on GPIO pins to ensure that when in the reset state the inputs to external devices are driven to a valid state.</p> <p><b>Note:</b> <b>GPIO0</b> and <b>GPIO1</b> are not available in the UPD350-B / UPD350-D.</p> <p><b>Note:</b> In Standalone DFP/UFP mode (<i>UPD350-A / UPD350-C only</i>), select GPIOs have alternate dedicated functions, as defined in <a href="#">Section 3.1.1.1, "UPD350-A / UPD350-C GPIO Functions in Standalone DFP/UFP Modes,"</a> on page 10.</p> |
| System Reset                    | <b>RESET_N</b>   | IS             | <p>Active low system reset.</p> <p><b>Note:</b> If this signal is unused, it must be pulled up to <b>VDD33IO</b>.</p>   |
| Power Down                      | <b>PWR_DN</b>  | AI             | <p>When asserted, this signal places the device into the power-down state.</p> <p><b>Note:</b> Tie this signal to ground when unused.</p>   |
| Over-Current Sense Comparator 1 | <b>OCS_COMP1</b>   | AI             | <p>This pin is used by the integrated OCS comparator to detect for error conditions.</p> <p><b>Note:</b> Tie this signal to ground when unused.</p>   |
| Over-Current Sense Comparator 2 | <b>OCS_COMP2</b>   | AI             | <p>This pin is used by the integrated OCS comparator to detect for error conditions.</p> <p><b>Note:</b> Tie this signal to ground when unused.</p>   |
| <b>Power/Ground</b>             |  |                |   |
| +3.3V Voltage Switch Supply     | <b>VSW</b>   | P              | <p>+3.3V power supply output from the integrated power switch.</p> <p><b>Note:</b> This pin also provides capacitance for the integrated power switch and must be connected to a 1 uF (&lt;100 Mohm ESR) capacitor to ground.</p>   |
| +3.3V VBUS Supply               | <b>3V3_VBUS</b>  | P              | <p>+3.3V main power supply input derived from VBUS to the integrated power switch.</p> <p><b>Note:</b> The 2.2 uF capacitor is only required for the UPD350-A and UPD350-B.</p>   |



**TABLE 3-4: PIN DESCRIPTIONS (CONTINUED)**

| Name  | Symbol    | Buffer Type | Description  |
|---|-----------|-------------|--|
| +3.3V<br>Always Supply                              | 3V3_ALW   | P           | +3.3V main power supply input to the integrated power switch.<br><b>Note:</b> This pin must be connect to a 2.2 uF capacitor to ground.  |
| +3.3V I/O<br>Power Supply<br>Input                  | VDD33IO   | P           | +3.3V I/O power supply input.  |
| +3.3/1.8V I <sup>2</sup> C<br>Power Supply<br>Input | VDD_I2C   | P           | +3.3/1.8V I <sup>2</sup> C power supply input. Tie this pin to VDD33IO for +3.3V I <sup>2</sup> C interfaces. Tie this pin to VDD18 for +1.8V I <sup>2</sup> C interfaces.<br><b>Note:</b> This pin is not available in the UPD350-B / UPD350-D. |
| +1.8V Core<br>Voltage Power<br>Supply Input         | VDD18     | P           | +1.8V core voltage power supply input.   |
| +1.8V Digital<br>Core Power<br>Supply<br>Capacitor  | VDD18_CAP | P           | +1.8V digital core power supply capacitor. This signal must be connected to a 1uF capacitor to ground for proper operation.  |
| +5V<br>VS Power<br>Supply Input                     | VS        | P           | +5V VCONN FET power source.  |
| Ground  | VSS       | P           | Ground pins.   |

# UPD350

## 4.0 REGISTER MAP

This chapter provides the device register map, summarizing the various directly addressable System Control and Status Registers (CSRs). All CSRs are directly accessible via the device's internal [I2C Slave Controller \(UPD350-A/UPD350-C Only\)](#) or [SPI Slave Controller \(UPD350-B/UPD350-D Only\)](#). Detailed descriptions of the System CSRs are provided in the chapters corresponding to their function. [Table 4-1](#) provides a summary of all directly addressable CSRs and their corresponding addresses.

**Note:** Register bit type definitions are provided in [Section 1.3, "Register Nomenclature,"](#) on page 6.

**TABLE 4-1: DEVICE REGISTER MAP**

| Address     | Registers   |
|-------------|---|
| 3400h-FFFFh | RESERVED  |
| 3000h-33FFh | <a href="#">Watchdog Timer Registers</a>                  |
| 2C00h-2FFFh | RESERVED  |
| 2800h-2BFFh | <a href="#">Baseband CC Interface Registers</a>           |
| 2000h-27FFh | RESERVED  |
| 1C00h-1FFFh | <a href="#">Power Switch Registers</a>                    |
| 1800h-1BFFh | <a href="#">Power Delivery MAC Registers</a>              |
| 1400h-17FFh | RESERVED  |
| 1000h-13FFh | <a href="#">Clocks and Power Management Registers</a>     |
| 0C00h-0FFFh | <a href="#">DisplayPort HPD Registers</a>                 |
| 0800h-0BFFh | <a href="#">Cable Orientation and Detection Registers</a> |
| 0400h-07FFh | RESERVED  |
| 0000h-03FFh | <a href="#">System Control Registers</a>                  |

**Note:** RESERVED address space must not be written under any circumstances. Failure to heed this warning may result in untoward operation and unexpected results.

## 5.0 I<sup>2</sup>C SLAVE CONTROLLER (UPD350-A/UPD350-C ONLY)

This chapter details the integrated I<sup>2</sup>C slave controller (I2C\_DAT and I2C\_CLK) available in the UPD350-A and UPD350-C. The I<sup>2</sup>C slave controller can be used for Host CPU serial management and data transfer, and allows host access to all device Configuration and Status Registers.

### 5.1 I<sup>2</sup>C Overview

I<sup>2</sup>C is a bi-directional 2-wire data protocol. A device that is currently sending data is defined as the “transmitter” and a device that is currently receiving data is defined as the “receiver”. The bus is controlled by a master which generates the SCL clock, controls bus access, and generates the start and stop conditions. The master and slave will operate as transmitter or receiver, bit-by-bit, as determined by the master. Since the device I<sup>2</sup>C controller is a slave only, the terms “host” and “master” are synonymous, both referring to the external side of the interface.


Both the clock (SCL) and data (SDA) signals have analog input filters that reject pulses that are less than 50 ns. The data pin is driven low when either interface sends a low, emulating the wired-AND function of the I<sup>2</sup>C bus. Since the slave interface never drives the clock pin, the wired-AND is not necessary.

The following bus states exist:

- **Idle:** Both I2C\_DAT and I2C\_CLK are high when the bus is idle.
- **Start & Stop Conditions:** A start condition (S) is defined as a high to low transition on the SDA line while SCL is high. A stop condition (P) is defined as a low to high transition on the SDA line while SCL is high. The bus is considered to be busy following a start condition and is considered free 4.7  $\mu$ s / 1.3  $\mu$ s / 0.5 $\mu$ s (for 100 kHz / 400 kHz / 1MHz operation, respectively) following a stop condition. The bus stays busy following a repeated start condition (Sr) in the absence of a stop condition. Stop/start sequences and repeated starts are otherwise functionally equivalent.
- **Data Valid:** Data is valid, following the start condition, when SDA is stable while SCL is high. Data can only be changed while the clock is low. There is one valid bit per clock pulse. Every byte must be 8 bits long and is transmitted MSB first.
- **Acknowledge:** Each byte of data is followed by an acknowledge bit. The master generates a ninth clock pulse for this bit, and the transmitter releases SDA (high). To provide a positive “acknowledge” (ACK), the receiver drives SDA low so that it remains valid during the high period of the clock, taking into account the setup and hold times. To provide a negative “no-acknowledge” (NACK or ACK), the receiver will allow the line to remain high during this bit time. The receiver may be the master or the slave depending on the direction of the data. Typically the receiver acknowledges each byte. If the master is the receiver, it does not generate an acknowledge on the last byte of a transfer. This informs the slave to not drive the next byte of data, freeing SDA so that the master may generate a stop or repeated start condition.

Figure 5-1 displays the various bus states of a typical I<sup>2</sup>C cycle.

**FIGURE 5-1: I<sup>2</sup>C CYCLES**

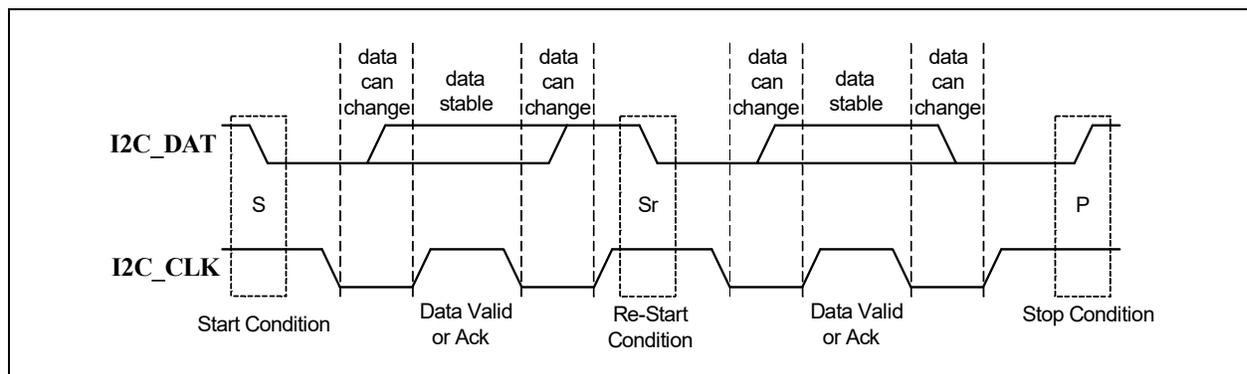

# UPD350

## 5.2 I<sup>2</sup>C Slave Operation

The I<sup>2</sup>C slave serial interface consists of a data wire (I<sup>2</sup>C\_DAT) and a serial clock (I<sup>2</sup>C\_CLK). The serial clock is driven by the master, while the data wire is bi-directional. Both signals are open-drain and require external pull-up resistors.

The I<sup>2</sup>C slave controller implements the low level I<sup>2</sup>C slave serial interface (start and stop condition detection, data bit transmission/reception and acknowledge generation/reception), handles the slave command protocol and performs system register reads and writes. It tolerates and also provides clock stretching, in particular for supporting a transparent Wake on Host Access (see Section 7.3, "Asynchronous I<sup>2</sup>C Wakeup (UPD350-A/UPD350-C Only)," on page 31).

The I<sup>2</sup>C slave controller conforms to the NXP I<sup>2</sup>C-Bus Specification (UM10204, April 4, 2014), and supports traffic as defined therein for the following modes:

- Standard-mode (Sm, 100 kbit/s)
- Fast-mode (Fm, 400 kbit/s)
- Fast-mode Plus (Fm+, 1 Mbit/s)

Refer to Section 15.6.2, "I<sup>2</sup>C Slave Interface (UPD350-A/UPD350-C only)," on page 202 for timing information.

### 5.2.1 I<sup>2</sup>C SLAVE COMMAND FORMAT


The I<sup>2</sup>C slave serial interface supports single register and multiple register Read and Write commands. A Read or Write command is started by the master first sending a Start condition, followed by a Control byte. The Control byte consists of a 7-bit slave address and a 1-bit Read/Write indication (R/~W). The default slave address used by the device is selected via the CFG\_SEL configuration strap. Assuming the slave address in the Control byte matches this address, the Control byte is acknowledged by the device. Otherwise, the entire sequence is ignored until the next Start condition. The I<sup>2</sup>C slave controller also supports the General Call Address. The I<sup>2</sup>C command formats can be seen in Figure 5-2, Figure 5-4, and Figure 5-5.

If the read/write indication (R/~W) in the Control byte is a 0 (Write), the next two bytes sent by the master are a register address, and these two bytes are mandatory. The upper (first) two bits of the address field are a Direction control (DIR), which indicates whether multi-byte accesses will increment, decrement, or fix (as static) the issued address (Section 5.2.2). After the address bytes are acknowledged by the device, the master may send data bytes, which will be written to successive registers starting at this address. It may instead send another Start condition (to start the reading of data) or a Stop condition (only setting the address). The latter two will terminate the current Write before writing any data, but will have the effect of setting the internal register address which will be used for subsequent Reads.

If the read/write indication (R/~W) in the Control byte is a 1 (Read), the device will start sending data following the Control byte acknowledge bit. Read commands cannot designate an address by themselves, but may optionally be prefixed with a Write command to set it (see Figure 5-4, prefixes in gray). If however the Read immediately follows a Multiple Register Write or Read, the address may have been incremented or decremented internally according to its DIR field, so this Read will start its access at the next successive byte address. Also, regardless of the previous access, a multiple-byte Read will continue the Increment/Decrement internally, as determined by the previously-issued DIR field (Section 5.2.2).

The length of the register address field is always two full bytes. Some high-order bits are don't-care. Don't-care register address bits should be sent as '0' always, for upward compatibility.

FIGURE 5-2: I<sup>2</sup>C SLAVE ADDRESSING

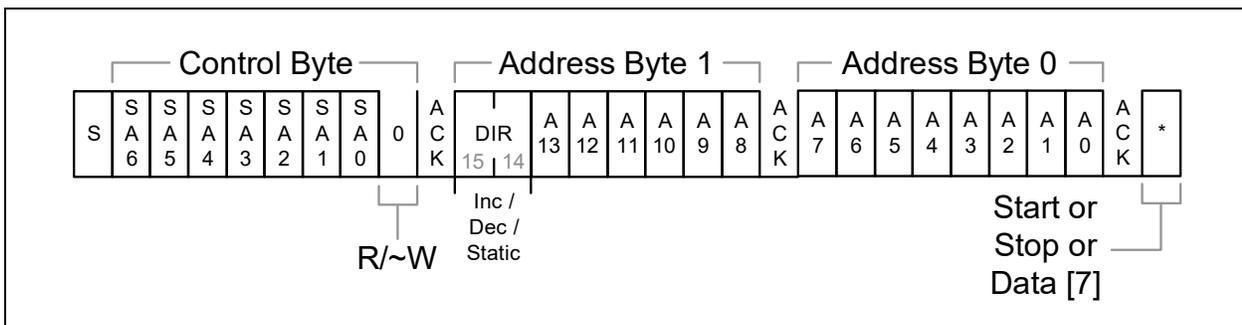

**Note:** Within bytes (address and data), the bits are transferred most-significant bit first. Addresses are transferred Most-Significant Byte first. All registers are accessed in units of bytes, and register data is transferred in increasing byte address order. Refer to the device register layout to determine the effect of this on the significance order of any multi-byte value.

## 5.2.2 MULTIPLE-BYTE REGISTER ADDRESS SEQUENCING

The DIR subfield in Address field bits [15:14] determines how multiple-byte sequences will be interpreted. This field is held internally whenever issued with an address, but is not applied in I<sup>2</sup>C except in multiple-byte transfers, Read or Write. The DIR field definitions are as follows:

- **DIR = 00b:** Selects auto-incrementing of the internally-held register address for subsequent byte accesses in a multiple-byte packet.
- **DIR = 10b:** Selects auto-decrementing of the internally-held register address for subsequent byte accesses in a multiple-byte packet.
- **DIR = 11b:** Select a fixed address. No modification of the internal register address will occur, meaning that all subsequent accesses, single- or multiple-byte, are made to the same register.
- **DIR = 01b:** Reserved for future use.

Note that the DIR field is altered only by issuing an address. It remains, affecting any subsequent multiple-byte Read packets, until altered.


## 5.2.3 GENERAL CALL ADDRESS

The device supports the I<sup>2</sup>C General Call Address. The intent of this feature is to enable global I<sup>2</sup>C writes to topologies that have multiple UPD350 slaves. This minimizes the I<sup>2</sup>C transactions for device reset, via the [Hardware Control Register \(HW\\_CTL\)](#), as well as for various common configuration registers. This mode of operation is intended for topologies that consist solely of UPD350 slaves. This mode of operation may not be compatible with non-UPD350 slaves coexisting on the I<sup>2</sup>C bus.

Only the case where the least significant bit, “B”, of the General Call address is set to one is supported. The device will ignore the case when the least significant bit, “B”, of the General Call address is set to zero. For the latter case, the device will ACK the first byte, General call address. The device will ignore and silently discard all subsequent bytes and not acknowledge them. The second byte of the General Call address is also ignored and not acknowledged by the device.

Figure 5-3 illustrates the supported General Call Address format.

**FIGURE 5-3: I<sup>2</sup>C GENERAL CALL ADDRESS**

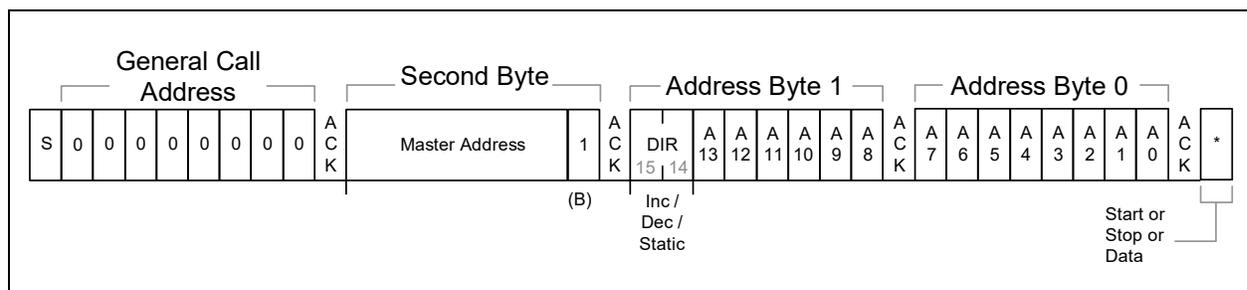

## 5.2.4 DEVICE INITIALIZATION

Until the device has initialized itself to the point where the various configuration inputs are valid, the I<sup>2</sup>C slave interface will not respond to or be affected by any external pin activity. The device should not be accessed by the master in this state. If, however, it is necessary to do so, this state will appear externally as a NACK (high) in the ACK bit time of the Control Byte, and of any further bytes transmitted by the master. The device will continue to act in this manner until the first Start condition is received after it is initialized internally. A Read transaction should not be attempted until an Address Write has been completed successfully (Figure 5-2), since the value(s) read may be unpredictable otherwise. Alternatively, an IRQ\_N pin assertion can be used to indicate the device is ready.

# UPD350

## 5.2.5 ACCESS DURING AND FOLLOWING POWER MANAGEMENT

During low-power modes, a Start condition will trigger the device to wake, and the device will also stretch the I<sup>2</sup>C clock low until its internal clocks are running and locked. It will then release the I<sup>2</sup>C clock, and process the incoming packet.

It performs these steps before receiving the Slave Address bits, meaning that if there are multiple devices of this type asleep on the same I<sup>2</sup>C bus segment then they will all stretch the clock, and they will all wake, regardless of whether they were actually addressed. In the event that the slave address of the I<sup>2</sup>C transaction does not match the value specified in the I<sup>2</sup>C Slave Address Register (I2C\_ADDR) (UPD350-A/UPD350-C Only), the device will power-down automatically.

## 5.2.6 I<sup>2</sup>C SLAVE READ SEQUENCE


Following the device addressing, as detailed in Section 5.2.1, a register is read from the device when the master sends a Start condition and Control byte with the R/~W bit set to '1'. Assuming the slave address in the Control byte matches the device address, the Control byte is acknowledged by the device. Otherwise, the entire sequence is ignored until the next Start condition. Following the acknowledge, the device sends 1 or more bytes of data, from successive register addresses according to the last-issued DIR address subfield (Section 5.2.2), until the master sends a no-acknowledge followed by the Stop condition. The no-acknowledge informs the device not to send any further bytes.

The internal register address is unchanged if only a single register byte is read, otherwise (a Multiple Register Read) the internal register address may be incremented or decremented (Section 5.2.2) after each byte including the final one. If the internal address reaches its maximum, it rolls over to 0. See the register map for the location of this boundary.

If the master sends an unexpected start or stop condition, the device will stop sending immediately and will respond to the next sequence as needed.

Figure 5-4 illustrates a typical single and multiple register read. An optional Write of an address is allowed to occur first, shown in gray. Note that this example shows an abbreviated case, where the Write does not have a Stop condition before the Read transfer's Starts. In this case, the Stop is still allowed, but not required.

**FIGURE 5-4: I<sup>2</sup>C SLAVE READS**

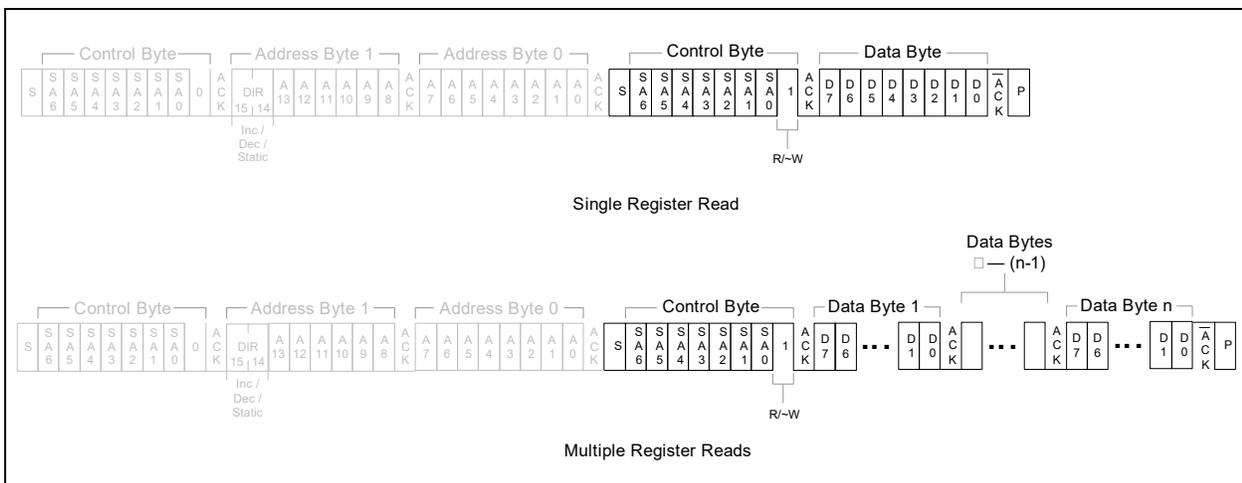

## 5.2.7 I<sup>2</sup>C SLAVE WRITE SEQUENCE

Following the device addressing, as detailed in Section 5.2.1, a register value is written to the device when the master continues to send data bytes. Each byte is acknowledged by the device. Following any data byte, after the acknowledge, the master may either send another start condition or halt the sequence with a stop condition. The internal register address is unchanged following a single-byte write.

Multiple writes are performed when the master sends additional data bytes following the first. The internal address is automatically incremented and the next register is written. Once the internal address reaches its maximum value, it rolls over to 0. See the device register map for this boundary. The multiple write is concluded when the master sends another start or stop condition. In performing a multiple write, the internal register address may be incremented or decremented


(Section 5.2.2) for each write including the final. This is not relevant for subsequent writes after a new Start condition, since a new register address (with its DIR subfield) must then be included. However, this would affect the address used by any subsequent read without first resetting the register address.

For both single and multiple writes, if the master sends an unexpected start or stop condition, the device will stop immediately and will respond to the next sequence as needed.

The data write to a multi-byte register may be delayed until after all bits are input. In the event that the full register is not written (master sends a start or a stop condition occurs unexpectedly), the write may be considered invalid and the register not affected. Multiple registers may be written in a multiple write cycle, each one being written in sequence. I<sup>2</sup>C writes must not be performed to unused register addresses.

Figure 5-5 illustrates a typical single and multiple register write.

**FIGURE 5-5: I<sup>2</sup>C SLAVE WRITES**

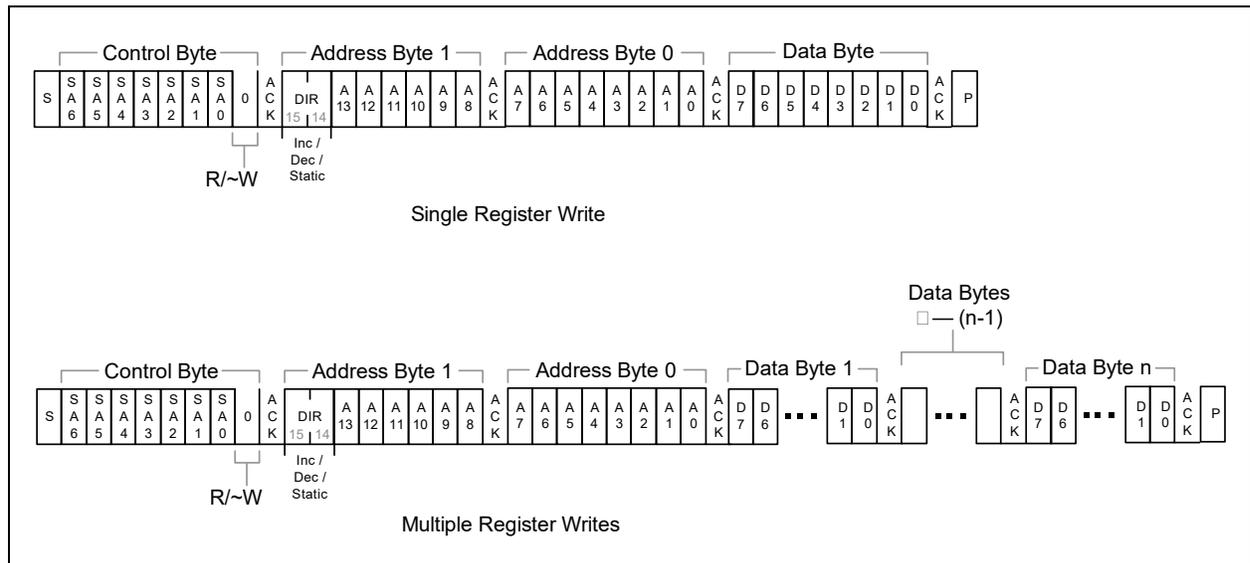

## 5.2.8 SPECIAL CSR HANDLING

### 5.2.8.1 Live Bits

Register values are latched (registered) at the beginning of each register read to prevent the host from reading a changing value. The latching occurs individually per register in a multiple register read sequence.

### 5.2.8.2 Change-on-Read Registers and FIFOs

Any single-byte register that triggers a side-effect from a read operation (for example, containing “clear on read” bits, or advancing a FIFO structure) triggers only after the host has begun accessing the value. The value seen by the master will always be the original value and never the updated result of the side-effect.

For a multiple-byte register that is considered a single unit, the change may be delayed until all bytes of the register have been read. In the event that the host sends a no-acknowledge on one of the first bytes of a multi-byte register, or a start or stop condition occurs unexpectedly before the acknowledge of the full register, the read may be considered invalid and the side-effect not triggered.

Registers read in multiple-register read access will trigger multiple side-effects, occurring as they are read. The following registers have read side-effects:

# UPD350

---

## 5.2.8.3 [Watchdog Count Register \(WDT\\_COUNT\)](#) Live Bits that are also Change-on-Read

As described above, the current value from a register with live bits (as is the case of any register) is captured and latched as output data, and Change on Read bits are then changed in the original register. To prevent loss of a hardware event that occurs following the data capture but before the Change on Read, these hardware events are held pending until after the read action and after any change due to the read. This sequence also ensures an edge in the bit due to the hardware event.



---

---

## 6.0 SPI SLAVE CONTROLLER (*UPD350-B/UPD350-D ONLY*)

This chapter details the integrated SPI slave controller (**SPI\_DI**, **SPI\_DO**, **SPI\_CLK**, and **SPI\_CS\_N**) available in the UPD350-B and UPD350-D. The SPI slave controller can be used for Host CPU serial management and data transfer, and allows host access to all device Configuration and Status Registers.

### 6.1 SPI Overview

The SPI Slave module provides a low pin count synchronous slave interface that facilitates communication between the device and a host system. The SPI slave allows access to the System CSRs and internal FIFOs and memories. It supports single and multiple register read and write commands with incrementing, decrementing and static addressing. Only a Single bit lane is supported in SPI mode at up to 25 MHz.

The following is an overview of the functions provided by the SPI Slave:

- **Fast Read:** 4-wire (clock, select, data in and data out) reads. Serial command, address and data. This is called "Fast" Read for historical reasons, and is the only Read command supported. There is a single Dummy byte required for first access. Single and multiple register reads with incrementing, decrementing or static addressing.
- **Write:** 4-wire (clock, select, data in and data out) writes at up to 25 MHz. Serial command, address and data. Single and multiple register writes with incrementing, decrementing or static addressing.

### 6.2 SPI Slave Operation

A SPI frame starts on the falling edge of **SPI\_CS\_N**, and ends with **SPI\_CS\_N** rising. At the edges of **SPI\_CS\_N**, the **SPI\_CLK** clock may be at its reset state of either low (Mode 0) or high (Mode 3), at the option of the Master.

Input data on the **SPI\_DI** pin (often called "MOSI") is sampled on the rising edge of the **SPI\_CLK** input clock. Output data is launched on the **SPI\_DO** pin (often called "MISO") with the falling edge of the clock. While the **SPI\_CS\_N** chip select input is high, the **SPI\_DI** and **SPI\_CLK** inputs are ignored and the **SPI\_DO** output is floating.

Each frame starts with an 8-bit instruction byte, transmitted by the Master, and it is accepted on **SPI\_DI** starting at the first rising edge of the input clock after **SPI\_CS\_N** goes active.

For both Write and (Fast) Read instructions, two address bytes follow the instruction byte. The address field expresses a byte address. Fourteen address bits specify the address. The remaining two bits [15:14] constitute the DIR subfield of the address field, which specifies whether the address is Auto-Incremented (00b) or Auto-Decremented (10b) for consecutive data bytes in the frame. A special Static address coding (11b) keeps the address static throughout the frame of data, causing a single byte address to be accessed repeatedly if multiple bytes are transferred in the frame. DIR subfield encoding 01b is reserved and should be decoded in implementation to be the same as 00b, for the sake of minimizing the effect of a software error that increments beyond the address space.

For the Fast Read instruction, one dummy byte follows the address bytes. The dummy byte occupies 8 bits, one per clock.

The device will normally not drive **SPI\_DO** during the Instruction, Address or Dummy byte cycles, but see [Section 6.2.2, "Access During and Following Power Management," on page 26](#) for a special case.

For Fast Read instructions, one or more 8-bit data fields follow the dummy byte. For Write instructions, they immediately follow the address bytes.

Individual bytes in instruction, address and data fields are transferred with the most-significant bit (msb) first. The two-byte Address field is transferred with the most-significant byte (MSB) first. Multi-byte data values are transferred in the order specified by the DIR subfield of the Address field (bits [15:14]), and so their order can be effectively selected by using Increment mode (starting from the lowest byte address) or Decrement mode (starting from the highest byte address).

The SPI interface supports a minimum time of 50ns between successive commands (a minimum **SPI\_CS\_N** inactive time of 50ns).

# UPD350

The instructions supported by the SPI slave controller are listed in [Table 6-1](#). Unsupported instructions are reserved and must not be used.

**TABLE 6-1: SPI INSTRUCTIONS**

| Instruction | Description               | Bus Bit Width | Inst. Code | Address Bytes | Dummy Bytes | Data bytes | Max Freq. |
|-------------|---------------------------|---------------|------------|---------------|-------------|------------|-----------|
| Read        |                           |               |            |               |             |            |           |
| FASTREAD    | Read, higher speed format | 1             | 0Bh        | 2             | 1           | 1 to ∞     | 25 MHz    |
| Write       |                           |               |            |               |             |            |           |
| WRITE       | Write                     | 1             | 02h        | 2             | 0           | 1 to ∞     | 25 MHz    |

## 6.2.1 DEVICE INITIALIZATION

Until the device has been initialized to the point where the various configuration inputs are valid, the SPI interface will not respond to or be affected by any external pin activity.

Once device initialization completes, the SPI interface will ignore the pins until a rising edge of **SPI\_CS\_N** is detected.

If the device initialization completes during an active cycle (**SPI\_CS\_N** low), the trailing end of the frame must be seen (**SPI\_CS\_N** returning high) before any internal registers are affected or the state of the SPI interface changes.

The first SPI access after device initialization must always be a dummy read to the [SPI Test Register \(SPI\\_TEST\)](#) (UPD350-B/UPD350-D Only).

### 6.2.1.1 SPI Slave Read Polling for Initialization Complete

With an external weak pull-up resistor present on **SPI\_DO**, a value of FFh will appear to have been read from any internal register while the device is uninitialized. By verifying the [SPI Test Register \(SPI\\_TEST\)](#) (UPD350-B/UPD350-D Only) has at least one “0” bit in it, it is possible to tell when the device is initialized.

## 6.2.2 ACCESS DURING AND FOLLOWING POWER MANAGEMENT

During any power management mode other than D0, Reads and Writes are ignored internally except to begin a Wake of the device internally on the falling edge of **SPI\_CS\_N**. The Wake event on SPI traffic is local to the specific device, and does not affect the states of other devices even on the same SPI bus. Until waking is complete (up to oscillator lock), the SPI interface holds the **SPI\_DO** pin low for the duration of the **SPI\_CS\_N** low time.


Until the device is awake, then, any Read access performed by the Master will appear to have returned all “1” bits. To determine when the device is awake and the SPI interface functional, the [SPI Test Register \(SPI\\_TEST\)](#) (UPD350-B/UPD350-D Only) should be repeatedly polled by the Master in separate frames (**SPI\_CS\_N** low then high). Once a correct, non-zero value is read, the interface can be considered functional. As an alternative to polling, an **IRQ\_N** pin assertion can be used to indicate the device is ready.

Once the power management mode changes back to ACTIVE, the SPI interface will still ignore the **SPI\_CLK** and **SPI\_DI** pins, following **SPI\_CS\_N** low with **SPI\_DO** low, until **SPI\_CS\_N** is seen high. At the next **SPI\_CS\_N** falling edge, SPI communication will continue normally.

At any time after performing SPI traffic, the device will not go back to a non-communicating power state until explicitly allowed to do so by a command from the SPI Master.

Figure 6-1 illustrates the sequence of waking from SPI traffic.

**FIGURE 6-1: POWER MANAGEMENT WAKE ON SPI TRAFFIC**

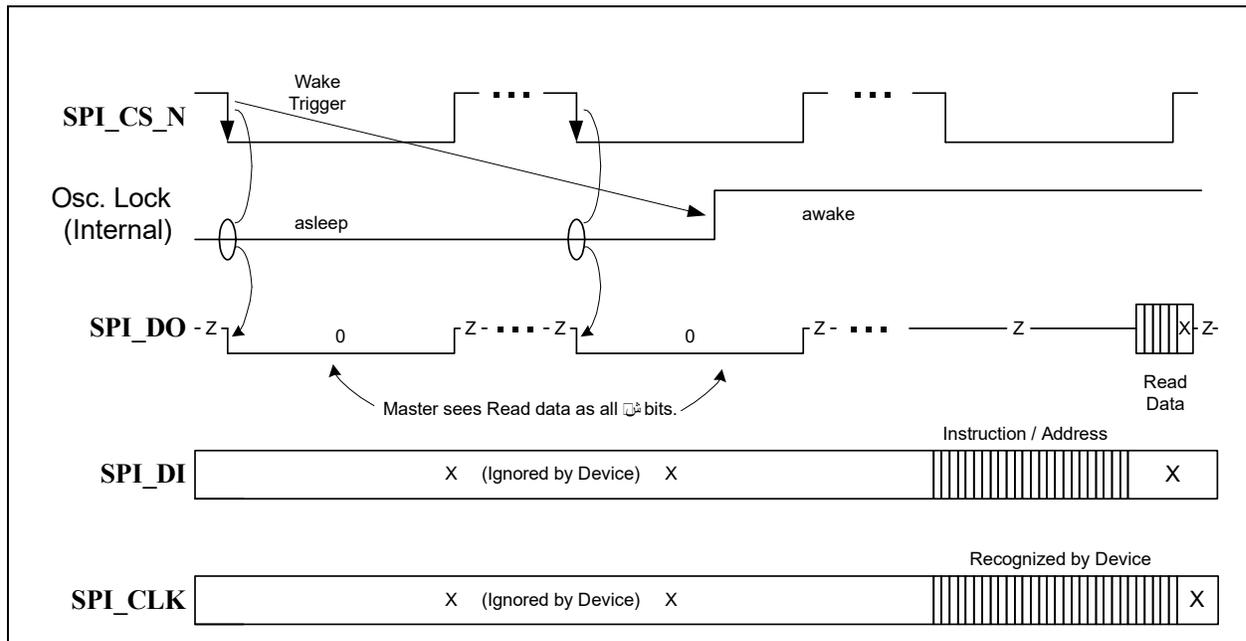

### 6.2.3 SPI READ COMMAND (FAST READ)

The Fast Read command is supported by the SPI slave. A single byte, or multiple bytes, may be read in a single frame (SPI\_CS\_N low).

Fast Read is the only form of Read access supported by the device. The instruction inputs the instruction code, the address and a dummy byte on SPI\_DI, and outputs the data one bit per clock on SPI\_DO.

The SPI slave interface is selected by first bringing SPI\_CS\_N active. The 8-bit FASTREAD instruction, 0Bh, is input into the SPI\_DI pin, followed by the two address bytes and 1 dummy byte. The address bytes specify a Byte register address within the device, and also specify how addresses are sequenced for successive bytes in a Multiple Byte Read (below). The contents of the dummy byte are don't-care.

On the falling clock edge following the rising edge of the last dummy bit, the SPI\_DO pin is driven starting with the most significant bit of the selected register byte. The remaining register bits are shifted out on subsequent falling clock edges. The SPI\_CS\_N input is brought inactive to conclude the cycle. The SPI\_DO pin is floated by the device in response.

#### 6.2.3.1 Multiple Byte Reads

Additional byte reads beyond the first are performed by the Master by continuing the clock pulses while SPI\_CS\_N is active. The upper two bits [15:14] (DIR subfield) of the address specify Auto-Incrementing (DIR=00b) or Auto-Decrementing (DIR=10b) or Static (fixed) (DIR=11b) for successive bytes read. Maintaining a Static internal address is provided for FIFO Read/Write or low-level register polling within a single frame, if the Master supports it.


Towards the end of the current one-byte output shift the address is incremented or decremented, if appropriate, and another synchronized capture sequence is done.

# UPD350

## 6.2.3.2 Fast Read

Figure 6-2 illustrates a typical single and multiple register fast read for SPI mode.

**FIGURE 6-2: SPI FAST READ**

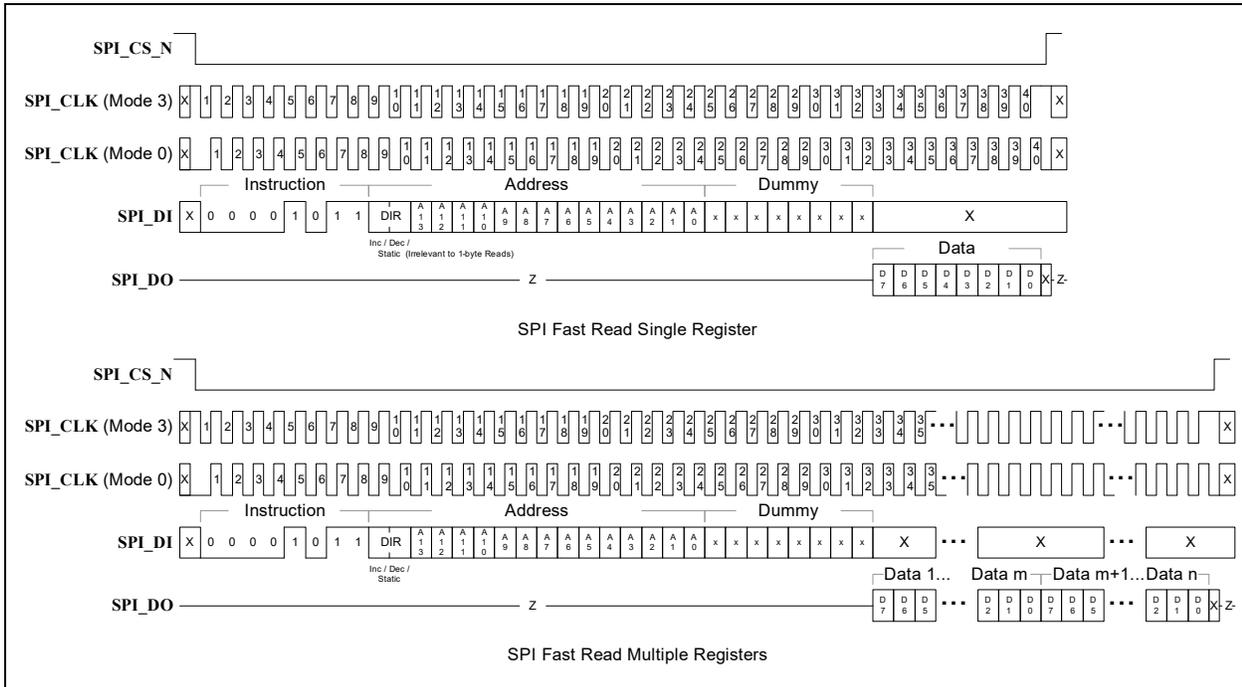

## 6.2.4 SPI WRITE COMMANDS

The following write commands are supported by the SPI slave controller:

- Write
- Multiple Writes

### 6.2.4.1 Write

The **Write** instruction provides the instruction code and address and data bytes on the **SPI\_DI** pin, one bit per clock.

The SPI transfer is started by the Master first driving **SPI\_CS\_N** active. The 8-bit **WRITE** instruction, **02h**, is given on the **SPI\_DI** pin, followed by the two address bytes. The address bytes specify a byte address within the device, and a Direction control subfield (DIR).

The data immediately follows the address bytes on the **SPI\_DI** pin, starting with the most significant bit of the first byte. The data is input from the **SPI\_DI** pin by the device, shifted in on each subsequent rising clock edge.

### 6.2.4.2 Multiple Writes


Multiple writes are performed by the Master by continuing the clock pulses and **SPI\_DI** data while **SPI\_CS\_N** remains active. The upper two bits [15:14] of the address constitute the DIR subfield, and specify auto-incrementing (DIR=00b) or auto-decrementing (DIR=10b) or Static addressing. The internal Byte address is incremented, decremented, or kept fixed (Static) based on these bits. Maintaining a fixed internal address may be useful for FIFO access, register “bit-banging” or other repeated activity.

The data write to the register occurs after the full register contents are input: this depends on the defined size of the register. In the event that the full register is not written when **SPI\_CS\_N** is returned high, the write is considered invalid and the register is not affected.

The **SPI\_CS\_N** input is then brought inactive to conclude the cycle.

Figure 6-3 illustrates a typical SPI single and multiple register write.

**FIGURE 6-3: SPI WRITE**

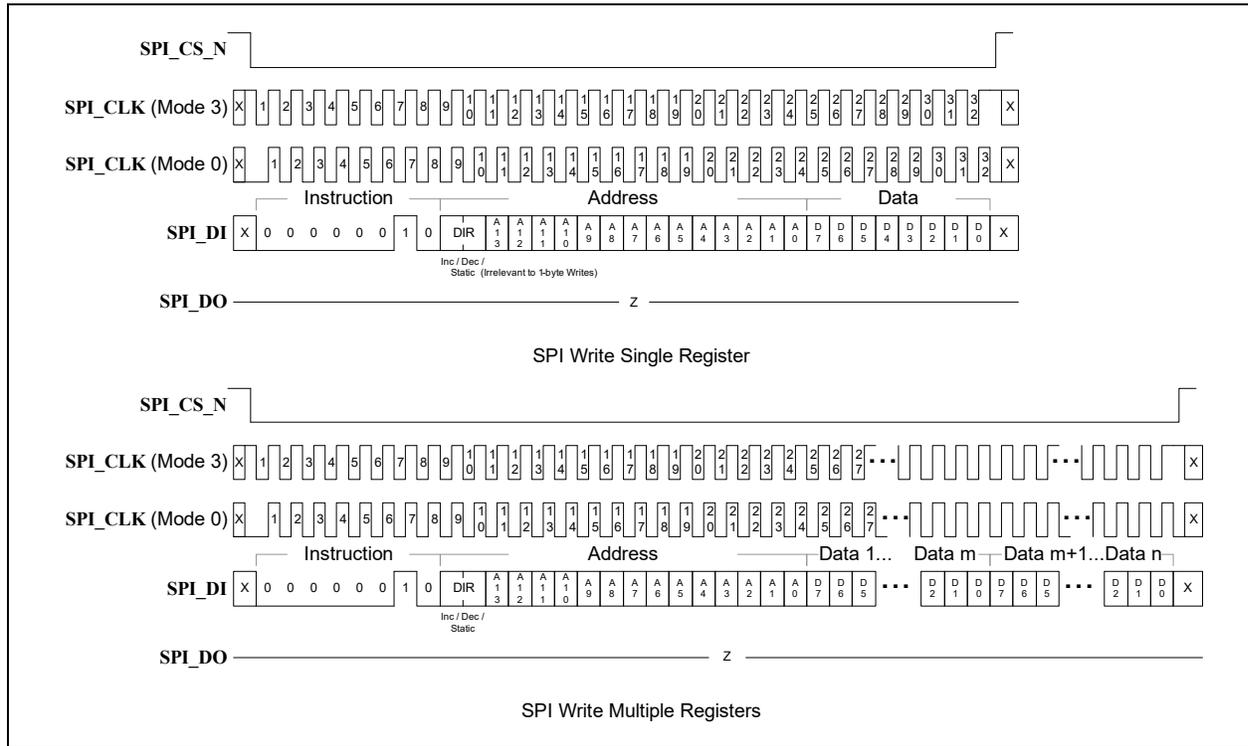

## 6.2.5 SPECIAL CSR HANDLING

### 6.2.5.1 Live Bits

Register values are latched (registered) at the beginning of each register read to prevent the host from reading a changing value. The latching occurs individually per register in a multiple register read sequence.

### 6.2.5.2 Change-on-Read Registers and FIFOs

Any single-byte register that triggers a side-effect from a read operation (for example, containing “clear on read” bits, or advancing a FIFO structure) triggers only after the host has begun accessing the value. The value seen by the master will always be the original value and never the updated result of the side-effect.

For a multiple-byte register that is considered a single unit, the change may be delayed until all bytes of the register have been read. In the event that the host sends a no-acknowledge on one of the first bytes of a multi-byte register, or a start or stop condition occurs unexpectedly before the acknowledge of the full register, the read may be considered invalid and the side-effect not triggered.

Registers read in multiple-register read access will trigger multiple side-effects, occurring as they are read. The following registers have read side-effects:

### 6.2.5.3 Watchdog Count Register (WDT\_COUNT) Live Bits that are also Change-on-Read

As described above, the current value from a register with live bits (as is the case of any register) is captured and latched as output data, and Change on Read bits are then changed in the original register. To prevent loss of a hardware event that occurs following the data capture but before the Change on Read, these hardware events are held pending until after the read action and after any change due to the read. This sequence also ensures an edge in the bit due to the hardware event.

# UPD350

---

## 7.0 CLOCKS, RESETS, AND POWER MANAGEMENT

This section details the various clocks, resets, and power managements states of the device:

### 7.1 Clocks

The following internal clocks are generated by the device:

- **48 MHz Relaxation Oscillator**
- **20 KHz Keep Alive Oscillator**
- **Ring Oscillator**

These oscillators can be manually enabled/disabled via software the [Clock Control Register \(CLK\\_CTL\)](#).

### 7.2 Power States

The device supports the following power states, as defined in their respective sub-sections:

- [SLEEP](#)
- [HIBERNATE](#)
- [STANDBY](#)
- [ATTACHED IDLE \(FRS Enabled\)](#)
- [ATTACHED IDLE \(FRS Disabled\)](#)
- [ACTIVE](#)

#### 7.2.1 SLEEP

This is the lowest power state of the device. The SLEEP state is entered via assertion of the **PWR\_DN** pin. Virtually all of the device is powered off in this mode with minimal circuitry in the 3.3V domain to detect deassertion of **PWR\_DN**.

This mode is intended to minimize power consumption when the device is not being used in battery powered applications. In these applications, a wake up event such as a button press, can cause the host CPU to deassert **PWR\_DN**.

#### 7.2.2 HIBERNATE

In this state, the port is disabled by the USB PD firmware and the **PWR\_DN** pin is low. Attach detection is disabled due to CC terminations in the high-impedance state.

#### 7.2.3 STANDBY

STANDBY is the lowest power functional state of the device. The majority of the device is powered off in this state. The internal CC comparator and 20 KHz oscillator are enabled in this state as well as requisite analog components (1.8V LDO, PORs, Biases, etc).

The CC lines are constantly monitored for an attach condition which shall result in an interrupt assertion to the host. If an attachment has been made, this state can detect a change in the partner's advertisement as well as a detach.

STANDBY is the power state that the UPD350 device will be in when in USB Type-C<sup>®</sup> Unattached.SRC/SNK.

#### 7.2.4 ATTACHED IDLE (FRS ENABLED)

In this state, a USB Type-C<sup>®</sup> device is connected and the USB PD bus is idle (no USB packets in transit). The CC signals are constantly being monitored for packet transmission and Fast Role Swap (FRS) signal detection is enabled.

#### 7.2.5 ATTACHED IDLE (FRS DISABLED)

In this state, a USB Type-C<sup>®</sup> device is connected and the USB PD bus is idle (no USB packets in transit). The CC signals are constantly being monitored for packet transmission and Fast Role Swap (FRS) signal detection is disabled.

The following asynchronous wake-ups are supported from this state:

- [Asynchronous I2C Wakeup \(UPD350-A/UPD350-C Only\)](#)
- [Asynchronous SPI Wakeup \(UPD350-B/UPD350-D Only\)](#)
- [Power Delivery MAC Wakeup](#)

## 7.2.6 ACTIVE

This state defines the condition of the device after an attachment occurred. In this state, Power Delivery communication is supported. This state is also used for any condition in which the 48 MHz Relaxation Oscillator must be enabled, such as when it is desired to debounce a GPIO within the micro-second range.

When transmitting a Power Delivery packet, an additional 5 mA may be consumed. Additional power consumption results from enabling the OCS comparator, VBUS comparator and other modules. When VCONN FETs are enabled, there is an additional 70 mW of power consumption.

## 7.3 Asynchronous I<sup>2</sup>C Wakeup (UPD350-A/UPD350-C Only)

The device supports asynchronous wakes on the I<sup>2</sup>C slave interface. Via clock stretching, the I<sup>2</sup>C transaction that caused the wakeup will not be lost and does not have to be repeated by the host. The device will not clock stretch for more than 3 us.

The following steps illustrate the I<sup>2</sup>C wake function. Initially the Ring Oscillator and 48 MHz Oscillator are disabled.

1. The Host initiates an I<sup>2</sup>C transaction to the device.
2. The device asynchronously detects reception of the Start Bit and enables clock stretching by pulling-down **I2C\_CLK** after the host drives SCL low. The Ring Oscillator is asynchronously enabled and used as a clock source for the power management logic.
3. After a delay of approximately 5 us the oscillator stabilizes and clocks the I<sup>2</sup>C controller.
4. Clock stretching is disabled and the I<sup>2</sup>C controller is enabled and begins processing the pending transaction.
5. The I<sup>2</sup>C transaction completes.
6. The Host checks the device status to see if there are any pending transactions. The I<sup>2</sup>C transaction may have initiated a PD transmission or conversely a coincident PD transaction may be in the process of being received.
7. After host confirms the device has no pending transactions, it power downs the device by disabling the Ring Oscillator and 48 MHz Relaxation Oscillator. via [Clock Control Register \(CLK\\_CTL\)](#).
8. The device is ready to accept future asynchronous I<sup>2</sup>C wake event.

## 7.4 Asynchronous SPI Wakeup (UPD350-B/UPD350-D Only)

UPD350 supports asynchronous wakes on the SPI interface. The SPI protocol for this device is defined such that there is no requirement that the SPI transaction must be repeated.

The following steps illustrate the SPI wake function. Initially the Ring Oscillator and 48 MHz Oscillator are disabled.

1. The device is powered down.
2. The Host initiates an SPI transaction to the [SPI Test Register \(SPI\\_TEST\) \(UPD350-B/UPD350-D Only\)](#) which, when the device is operational, returns a non-zero value. The device drives **SPI\_DO** to 0b while in power-down.
3. The device detects reception of an SPI message. The Ring Oscillator is asynchronously enabled and used as a clock source for the power management logic.
4. After a delay of approximately 5 us the oscillator stabilizes and clocks the SPI controller.
5. The device processes the next received SPI transaction.
6. The SPI transaction(s) complete(s).
7. The Host checks the device status to see if there are any pending transactions. The SPI transaction may have initiated a PD transmission or conversely a coincident PD transaction may be in the process of being received.
8. After the Host confirms the device has no pending transactions, it powers down the device by disabling the Ring Oscillator, and 48 MHz Relaxation Oscillator. via [Clock Control Register \(CLK\\_CTL\)](#).
9. The device drives **SPI\_DO** to 0b and awaits an asynchronous SPI wake.

# UPD350

---

## 7.5 Power Delivery MAC Wakeup

The PD MAC is capable of asynchronous wakeup upon reception of a PD packet. This enables the device to be placed in STANDBY mode and minimize power consumption.

The following steps illustrate the RX PD MAC wake function. Initially the Ring Oscillator and the 48 MHz Relaxation Oscillator are disabled. The 20 KHz Keep Alive Oscillator is enabled, but not used in the wake process.

1. In order to receive a PD message, the RX AFE is enabled via software and the trip point is set. via the [CC RX DAC Control Register \(CC\\_RX\\_DAC\\_CTL\)](#) and [CC RX DAC Filter Register \(CC\\_RX\\_DAC\\_FILT\)](#).
2. The PD MAC is configured and enabled via software.
3. The device is powered down. Software disables the 48 MHz Relaxation Oscillator, and Ring Oscillator if enabled via the [Clock Control Register \(CLK\\_CTL\)](#).
4. After some time elapses, the device receives a PD message from the attached partner.
5. The PD MAC asynchronously detects preamble activity on the CC line and enables the 48 MHz Relaxation Oscillator.
6. The oscillator is operational in approximately 5 us, at which point the PD MAC is operational.
7. The PD MAC receives the remainder of the preamble and stores the message into the RX FIFO, and in accordance with the PD protocol, responds with GoodCRC as required.
8. An interrupt is issued via assertion of the **IRQ\_N** pin.
9. Software services the interrupt via I<sup>2</sup>C, reads the PD message, and responds as required.
10. The device is then powered down. Software disables the 48 MHz Relaxation Oscillator and Ring Oscillator. via the [Clock Control Register \(CLK\\_CTL\)](#).
11. The device remains powered down until the next PD message is received.

## 7.6 Interrupt Assertion from STANDBY

When the device is in **STANDBY** it is able to detect a number of events that may be configured to assert the **IRQ\_N** pin upon being appropriately programmed via software. The logic detecting such events operates off of the 20 KHz Keep Alive Oscillator.

Upon the occurrence of an event, which is programmed to assert **IRQ\_N**, the 48 MHz Relaxation Oscillator and Ring Oscillator are enabled. Upon synchronization, the **IRQ\_N** pin shall assert.

After software services the source interrupt(s), it should disable the 48 MHz Relaxation Oscillator and Ring Oscillator via the [Clock Control Register \(CLK\\_CTL\)](#) to place the part back in **STANDBY**.

The following example sequence illustrates the steps for configuring the device to detect an OCS event on the **OCS\_COMP1** pin while in **STANDBY**.

1. Software enables the OCS Compare Interrupt. **OCS\_CMP\_INT** bit in the [Interrupt Enable Register \(INT\\_EN\)](#).
2. Software enables OCS detection, as defined in [Section 8.3, "External Over-current Detection"](#), to sample the **OCS\_COMP1** pin.
3. Software disables the 48 MHz Relaxation Oscillator and 1 MHz Ring Oscillator. via the [Clock Control Register \(CLK\\_CTL\)](#)
4. An OCS event occurs and is detected on **OCS\_COMP1**.
5. The Ring Oscillator is enabled and is used to as the device's operational clock.
6. The device enables the 48 MHz oscillator and waits about 5 us for the oscillator to stabilize.
7. The 48 MHz oscillator is stable.
8. After synchronization is complete, the **IRQ\_N** pin is asserted.
9. Software detects **IRQ\_N** assertion and services the interrupt.
10. Software disables the 48 MHz Relaxation Oscillator and Ring Oscillator. via the [Clock Control Register \(CLK\\_CTL\)](#) to place the part back in **STANDBY**.



## 7.7 Reset Operation

The following chip-level resets are supported by the device:

- Power-On-Reset (POR)
- Pin Reset (**RESET\_N**)
- Software Reset (**SRESET** in [Hardware Control Register \(HW\\_CTL\)](#))
- Watchdog Timer(**WDT\_STS**)

Chip-level resets trigger the sampling of the **CFG\_SEL** configuration strap (see [Section 9.9.1, "Configuration Selection," on page 82](#) for additional information). Chip-level reset completion can be determined by assertion of the **RDY\_INT** bit in the [Interrupt Enable Register \(INT\\_EN\)](#) and assertion of the **IRQ\_N** pin.

The following is a summary of steps that occur after a chip-level reset.

1. System level reset event (POR, **RESET\_N**, **SRESET**, **WDT\_STS**) occurs.
2. The device enables the 20 KHz Keep Alive Oscillator, 48 MHz Relaxation Oscillator, and 1MHz Ring Oscillator.
3. The device samples the **CFG\_SEL** pin.
4. The device configures itself in accordance with the **CFG\_SEL** pin and settings.
5. The device is enabled, the **RDY\_INT** bit in the [Interrupt Enable Register \(INT\\_EN\)](#) asserts, the **IRQ\_N** pin asserts.
6. The device disables the 48 MHz Relaxation Oscillator and the Ring Oscillator.

## 7.8 Clocks and Power Management Registers

This section details the clocks and power management registers. For an overview of the entire device register map, refer to [Section 4.0, "Register Map," on page 18](#).

**TABLE 7-1: CLOCKS AND POWER MANAGEMENT REGISTERS MAP**

| Address       | Register Name (Symbol)                           |
|---------------|--|
| 1000h         | <a href="#">Clock Control Register (CLK_CTL)</a> |
| 1001h – 13FFh | Reserved for future expansion                    |

**Note:** RESERVED address space must not be written under any circumstances. Failure to heed this warning may result in untoward operation and unexpected results.

# UPD350

---

## 7.8.1 CLOCK CONTROL REGISTER (CLK\_CTL)

Address: 1000h Size: 8 bits

| Bits | Description   | Type | Default                  |
|------|---|------|--------------------------|
| 7:3  | <b>RESERVED</b>   | RO   | -                        |
| 2    | <b>Ring Oscillator Enable</b><br>0: Oscillator is disabled.<br>1: Oscillator is enabled.              | R/W  | 0b                       |
| 1    | <b>48 MHz Relaxation Oscillator Enable</b><br>0: Oscillator is disabled.<br>1: Oscillator is enabled. | R/W  | <a href="#">Note 7-1</a> |
| 0    | <b>20 KHz Keep Alive Oscillator Enable</b><br>0: Oscillator is disabled.<br>1: Oscillator is enabled. | R/W  | 1b                       |

**Note 7-1** This bit will always appear asserted when read by software, as the 48 MHz Relaxation Oscillator must be enabled to facilitate I<sup>2</sup>C/SPI transactions.

---

---

## 8.0 SYSTEM CONTROL

This section details the following system controls:

- [System Interrupts](#)
- [General Purpose I/O](#)
- [External Over-current Detection](#)
- [System Control Registers](#)

### 8.1 System Interrupts

The device provides an active-low and open drain interrupt pin, **IRQ\_N**, which is asserted as a function of the System Control's Interrupt Status Register (**INT\_STS**) [Interrupt Status Register \(INT\\_STS\)](#) and Interrupt Enable Register (**INT\_EN**) [Interrupt Enable Register \(INT\\_EN\)](#). The following interrupts are supported:


- HPD Interrupt
- Power Switch Module Interrupt
- Watchdog Timer Assertion Interrupt
- Port Power Controller Interrupt
- Power Delivery MAC Interrupt
- OCS Comparator Interrupt
- PIO Override Interrupt
- PIO Interrupt
- CC Interrupt
- VBUS Interrupt
- Power Control Interrupt
- Device Ready Interrupt

In order to clear an interrupt status bit, the source of the asserted bit in [Interrupt Status Register \(INT\\_STS\)](#) must be cleared. This process typically involves dealing with the module (e.g. PD MAC, CC, Port Power Controller, Watchdog Timer, Power Switch, etc.) that triggered the interrupt or configuring the respective module's interrupt enable register to disable assertion.


The PIO interrupts are cleared by writing "1" to the asserted bit(s) in [PIO Interrupt Status Register \(PIO\\_INT\\_STS\)](#). The PIO Override interrupts are cleared by writing "1" to the asserted bit(s) in [PIO Override Interrupt Status Register \(PIO\\_OVR\\_INT\\_STS\)](#). The OCS interrupts are cleared by writing "1" to the asserted bit(s) in [OCS Comparator Change Status Register \(OCS\\_CMP\\_CHG\\_STS\)](#).

[Figure 8-1](#) illustrates the device's interrupt hierarchy. [Figure 8-2](#) illustrates the generation of the CC Interrupt **CC\_INT** bit in the [Interrupt Status Register \(INT\\_STS\)](#).

**FIGURE 8-1: SYSTEM INTERRUPT HIERARCHY**

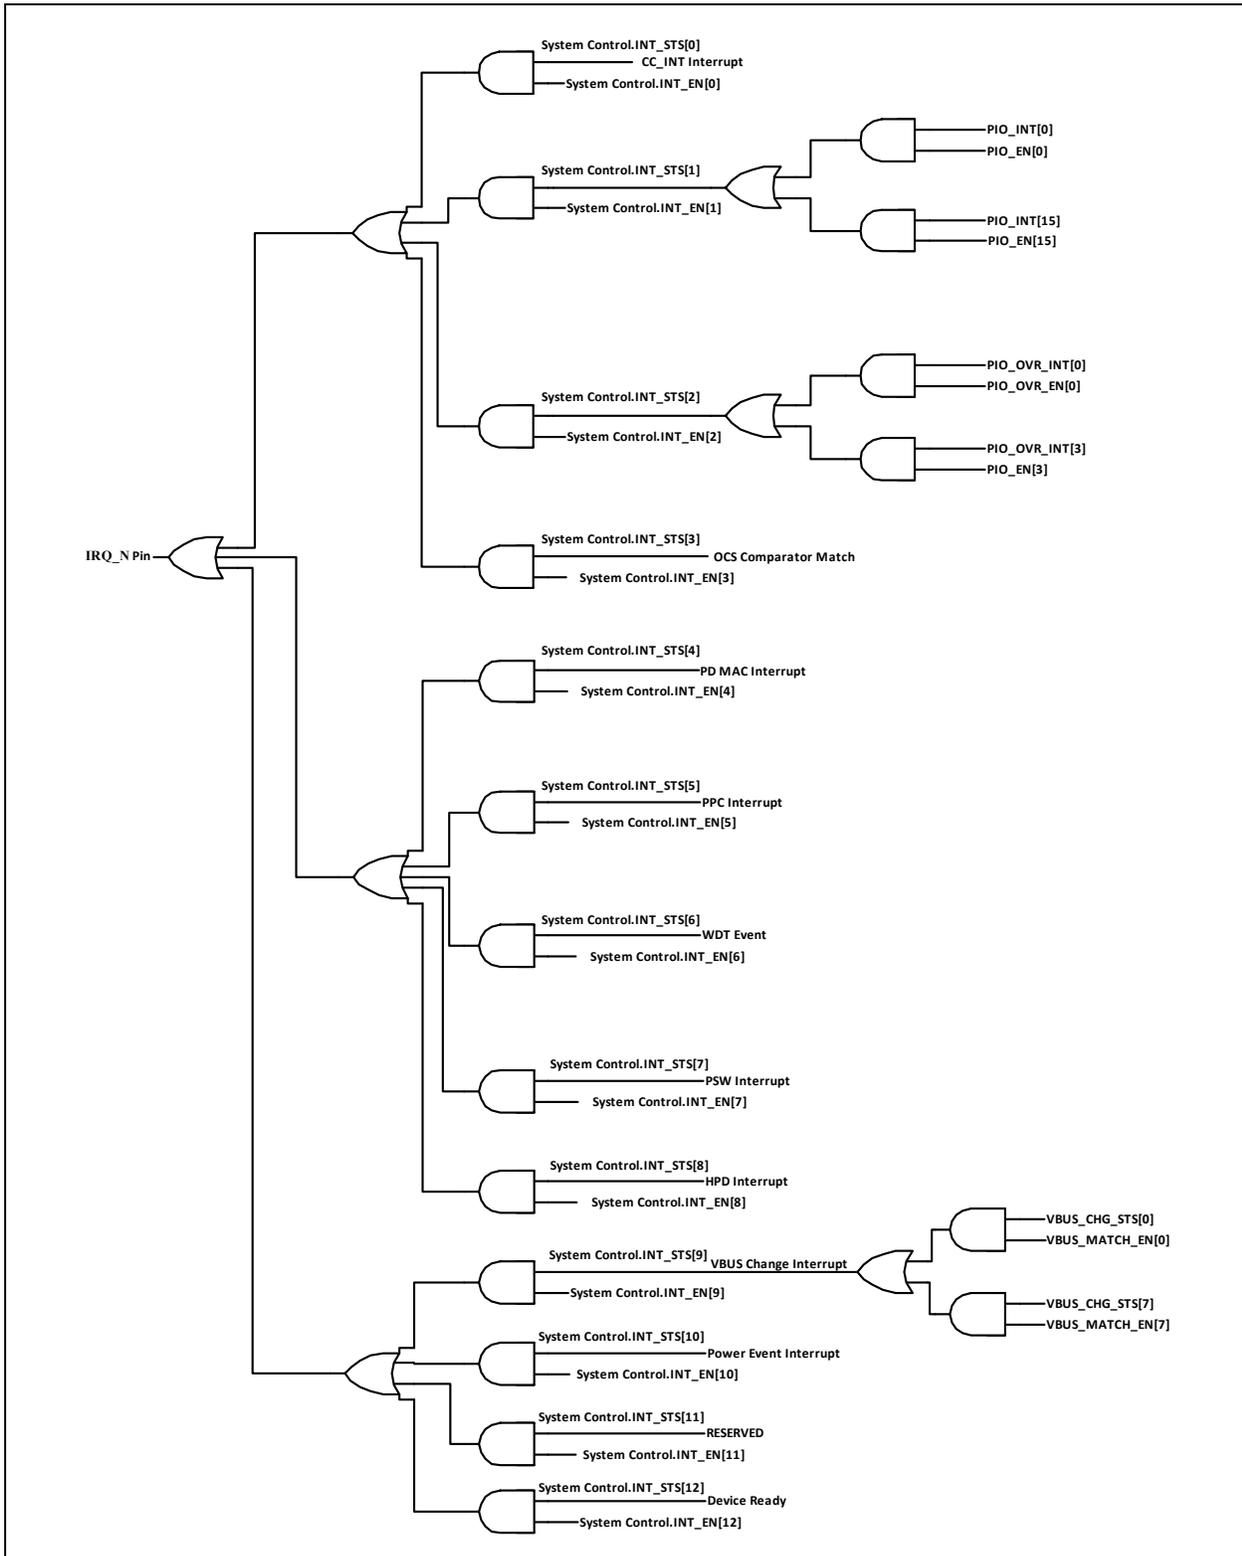

**FIGURE 8-2: CC\_INT INTERRUPT HIERARCHY**

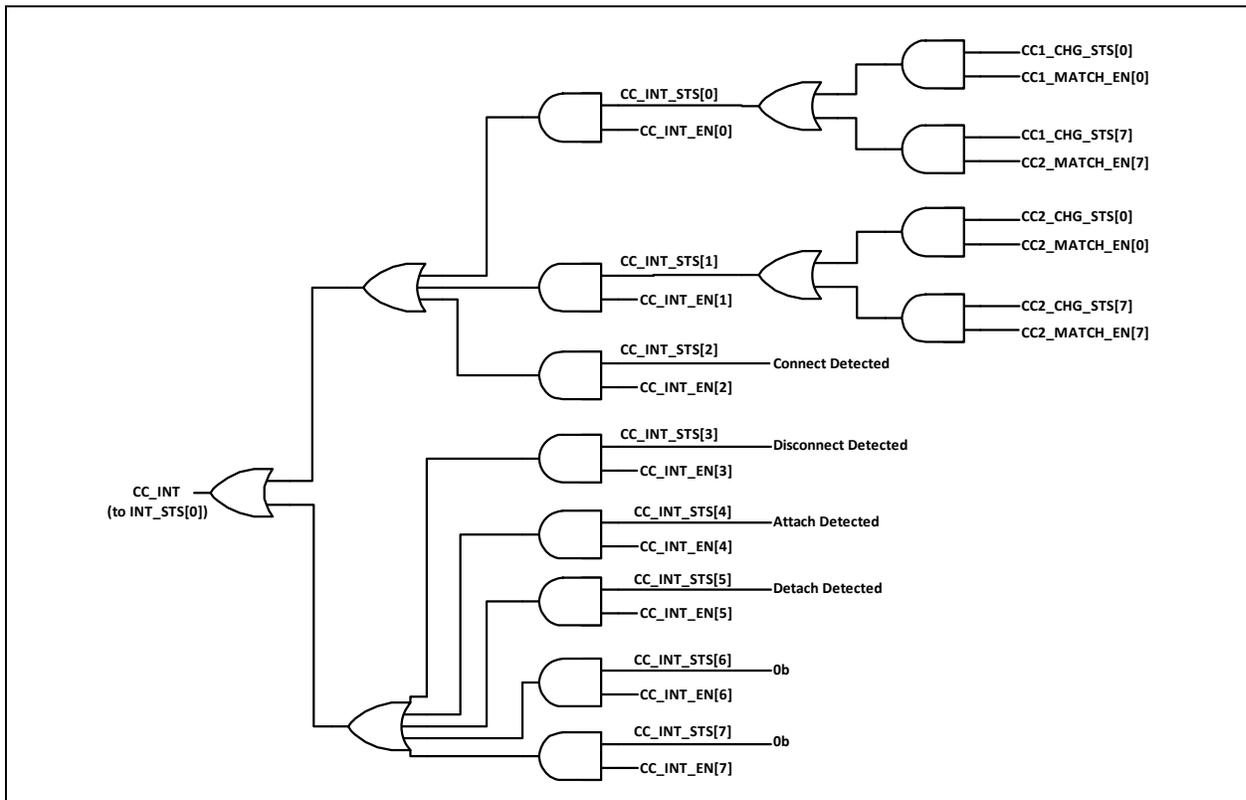

## 8.2 General Purpose I/O

A key function of the UPD350 is to manage external devices via up to ten PIOs. Usually this is accomplished via host software programming of the PIOs.

In some cases the UPD350 must automatically override the PIO state in response to an error condition. Features have been incorporated into the design to enable such operation. This is required in cases where the latency introduced by reliance on software to affect PIO state is either too long or not deterministic.

A PIO is configured via the respective [Configure PIOx Registers \(CFG\\_PIOx\)](#). A PIO may also be configured to assert [PIO\\_INT](#) in [Interrupt Status Register \(INT\\_STS\)](#). The state of a PIO is known by reading the [PIO Status Register \(PIO\\_STS\)](#).

A mechanism exists for multiple PIO outputs to be updated via a single register write. This is accomplished via the [Configure PIO Output Register \(CFG\\_PIO\\_OUT\)](#). Writes to this register that change the output value of a PIO are reflected in the [DataOutput](#) bit of the respective [Configure PIOx Registers \(CFG\\_PIOx\)](#). Likewise, writes to [DataOutput](#) in the [Configure PIOx Registers \(CFG\\_PIOx\)](#) will update the respective bit in the [Configure PIO Output Register \(CFG\\_PIO\\_OUT\)](#).

**Note:** The GPO1 and GPO10 general purpose signals can only function as outputs and must be kept in a low state coincident with de-asserting RESET\_N.

**Note:** GPIO0 and GPIO1 are not available in the UPD350-B / UPD350-D.

**Note:** In Standalone DFP/UFP mode (*UPD350-A/UPD350-C only*), certain GPIOs have alternate dedicated functions, as defined in [Section 3.1.1.1, "UPD350-A / UPD350-C GPIO Functions in Standalone DFP/UFP Modes,"](#) on page 10.

# UPD350

---

## 8.2.1 PIO SIMULTANEOUS UPDATE

A mechanism has been incorporated to enable multiple PIOs to be updated simultaneously. This is desirable to simplify software and prevent devices controlled by the UPD350 from entering an intermediary unknown state. Of particular concern would be devices responsible for managing power.

The [Configure PIOx Registers \(CFG\\_PIOx\)](#) CSR is updated by this function. When the simultaneous update request is accepted by hardware, the contents of the PIO registers are simultaneously updated.

The example below illustrates simultaneous PIO update operation:

1. Software changes [Configure PIOx Update Registers \(CFG\\_PIOx\\_UPD\)](#) as required.
2. Software changes [Configure PIO Output Update Register \(CFG\\_PIO\\_OUT\\_UPD\)](#) as required.

**Note:** The [Configure PIO Output Update Register \(CFG\\_PIO\\_OUT\\_UPD\)](#) and [Configure PIOx Update Registers \(CFG\\_PIOx\\_UPD\)](#) must be programmed consistently by software. If the output value bits are different between the two registers, then the value in [Configure PIOx Update Registers \(CFG\\_PIOx\\_UPD\)](#) will be used for updating the [Configure PIOx Registers \(CFG\\_PIOx\)](#) and the respective bit in [Configure PIO Output Register \(CFG\\_PIO\\_OUT\)](#).

3. Software sets the [Configure PIOx Update Registers \(CFG\\_PIOx\\_UPD\)](#) to initiate the update.
4. A pending PIO override blocks acceptance of the update request. Only after the pending PIO override is cleared will the device clear [PIO\\_UPD\\_REQ](#). The pending PIO override is cleared via the [PIO Override Enable Register \(PIO\\_OVR\\_EN\)](#).
5. After the update is accepted, [PIO\\_UPD\\_REQ](#) clears automatically.

**APPLICATION NOTE:** If a PIO override is pending, the PIO simultaneous update is blocked.

## 8.2.2 PIO OVERRIDE

### 8.2.2.1 Overview

A mechanism is defined in this section to enable the state of a PIO to be changed without software intervention. This provides a mechanism to instantaneously disable a power circuit, controlled by a UPD350 PIO, based upon a change in the state of a selected PIO input, OCS detection or other event.

### 8.2.2.2 Description

Four override functions are included in device. For each function, a PIO or other source must be selected for monitoring via the corresponding [PIO Override x Source Select Registers \(PIO\\_OVRx\\_SRC\\_SEL\)](#). The value to be monitored is set in the [PIO Override Monitor Value Register \(PIO\\_OVR\\_MON\\_VAL\)](#) and is compared with the state of the respective PIO. When these values match for an override, the enabled PIO outputs change their state accordingly.

PIO outputs controlled by an override are enabled by the [PIO Override x Output Enable Registers \(PIO\\_OVRx\\_OUT\\_EN\)](#). Each override has an instance in this register. A PIO may be used across multiple overrides.

Firmware can be notified that an override was executed via assertion of [PIO\\_OVERRIDE\\_INT](#) in the [Interrupt Status Register \(INT\\_STS\)](#), if [Interrupt Enable Register \(INT\\_EN\)](#) is appropriately configured.

## 8.3 External Over-current Detection

The device incorporates an analog comparator DAC circuit to detect an over-current condition. This feature is supported via the **OCS\_COMP1** and/or **OCS\_COMP2** pin.

This feature is enabled as follows:

1. Software clears the **OCS Comparator Control** bit in the **OCS Comparator Control Register (OCS\_CMP\_CTL)** to determine the OCS debouncer.
2. Software polls **OCS\_DB\_ACTIVE** until it clears, which indicates the OCS debouncer is disabled.
3. If **OCS\_COMP2** is desired, the shared PIO must be disabled via the **Configure PIOx Registers (CFG\_PIOx)**.
4. Software programs one or both of the **OCS Comparator x Threshold Registers (OCS\_CMPx\_THR)**, as required.
5. Software programs the **OCS Comparator Debounce Register (OCS\_CMP\_DEBOUNCE)**.
6. Software enables the **OCS\_COMPx** pin(s) via the **OCS Comparator Match Enable Register (OCS\_CMP\_MATCH\_EN)**.
7. Software enables the respective interrupt in the **Interrupt Enable Register (INT\_EN)**.
8. Software sets the **OCS Comparator Control** bit in the **OCS Comparator Control Register (OCS\_CMP\_CTL)** to enable comparison on **OCS\_COMP1** and/or **OCS\_COMP2**, as desired.
9. Detection of an over current event by the comparator results in the respective bit of the **OCS Comparator Change Status Register (OCS\_CMP\_CHG\_STS)** and **OCS\_CMP\_INT** asserts. The **IRQ\_N** pin will assert, if configured.
10. Software writes to the **OCS Comparator Change Status Register (OCS\_CMP\_CHG\_STS)** to clear **OCS\_CMP\_INT**. For a Lo-to-Hi transition, the respective bit in the **OCS Comparator Match Register (OCS\_CMP\_MATCH)** is set, while for a Hi-to-Lo transition the bit is cleared.

This feature is disabled when software clears the **OCS Comparator Control** bit in the **OCS Comparator Control Register (OCS\_CMP\_CTL)**. Either **OCS\_COMPx** pin may be used to trigger a PIO override.

## 8.4 General Purpose Timer

The device incorporates a low power general purpose timer that operates off a 20 kHz oscillator and implements a 16-bit one-shot down counter. When the timer underflows, it asserts the and interrupt **GP\_UFLOW** bit in **General Purpose Timer Interrupt Source Register (GP\_TIMER\_INT\_SRC)** and stops counting. This in turn causes the **GP\_TIMER\_INT** to assert in **Interrupt Status Register (INT\_STS)**. The interrupt persists until the **GP\_UFLOW** bit is cleared. If the respective bit is set in **Interrupt Enable Register (INT\_EN)**, the **IRQ\_N** pin will assert.

The timer's upper threshold is loaded via the **General Purpose Timer Load Register (GP\_TIMER\_LOAD)**. Setting **RESET** in the **General Purpose Timer Control Register (GP\_TIMER\_CTL)** causes the timer's internal counter to be loaded to this value.

The timer is enabled by setting **ENABLE** in the **General Purpose Timer Control Register (GP\_TIMER\_CTL)**. This causes the timer to decrement every 1 ms. The timer continues to decrement until it underflows or it is disabled.

**Note:** The underflow condition is defined as when the down counter transitions from 0x0000 to 0xFFFF.

Clearing the **ENABLE** bit in the **General Purpose Timer Control Register (GP\_TIMER\_CTL)** disables the timer and it stops counting.

The timer's current count can be read from **General Purpose Timer Count Register (GP\_TIMER\_COUNT)**. The timer should be halted by clearing **ENABLE** before reading it. After the count is read, the **ENABLE** may be set again and the counter will resume.

The **DIS\_ON\_UFLOW** bit in the **General Purpose Timer Control Register (GP\_TIMER\_CTL)** causes the timer to automatically disable upon underflow detection and assert **GP\_UFLOW**. In this case the assertion of **GP\_UFLOW** is delayed until the timer is fully disabled. in the 20 KHz clock domain.

**APPLICATION NOTE:** This timer enables clocking sources to be disabled in the host CPU which is useful for timing events such as DRP. This helps provide for a lower total power system solution.

The following steps illustrate the usage model for DRP implementation:

1. Software configures the device as a DFP or UFP. See [Section 9.4, "DRP Operation \(Legacy\)"](#) for further details.
2. Software enables the **GP\_TIMER\_INT** in the **Interrupt Enable Register (INT\_EN)**.

# UPD350

---

3. Software programs the [General Purpose Timer Load Register \(GP\\_TIMER\\_LOAD\)](#) to a random value that complies with the range for tDRP period as defined in the USB Type-C Specification.
4. Software sets the [ENABLE](#), [RESET](#) and [DIS\\_ON\\_UFLOW](#) bits in the [General Purpose Timer Control Register \(GP\\_TIMER\\_CTL\)](#). This causes the value in the [General Purpose Timer Load Register \(GP\\_TIMER\\_LOAD\)](#) to be loaded into the timer and it begins decrementing. This also configures the timer to delay assertion of [GP\\_UFLOW](#) in the [General Purpose Timer Interrupt Source Register \(GP\\_TIMER\\_INT\\_SRC\)](#) until the timer is fully disabled (portion operated in 20 KHz domain).

**APPLICATION NOTE:** Writes to [General Purpose Timer Load Register \(GP\\_TIMER\\_LOAD\)](#) and [General Purpose Timer Control Register \(GP\\_TIMER\\_CTL\)](#) defined in the prior steps may be done in the same I<sup>2</sup>C write burst.

5. Upon timer expiration, the [GP\\_UFLOW](#) bit will be set and the [GP\\_TIMER\\_INT](#) asserts in [Interrupt Status Register \(INT\\_STS\)](#).
6. The [IRQ\\_N](#) pin asserts.
7. Software services the IRQ and determines whether or not a connection has been established with a UFP, or DFP. If no connection has been established, software changes the device's role. See [Section 9.4, "DRP Operation \(Legacy\)"](#) for further details.
8. Software programs the [General Purpose Timer Load Register \(GP\\_TIMER\\_LOAD\)](#) to a random value that complies with the range of the tDRP period as defined in the USB Type-C Specification.
9. Software shall clear the [GP\\_UFLOW](#) bit in the [General Purpose Timer Interrupt Source Register \(GP\\_TIMER\\_INT\\_SRC\)](#).
10. Software sets the [ENABLE](#), [RESET](#) and [DIS\\_ON\\_UFLOW](#) bits in [General Purpose Timer Control Register \(GP\\_TIMER\\_CTL\)](#). This causes the value in [General Purpose Timer Load Register \(GP\\_TIMER\\_LOAD\)](#) to be loaded into the timer and the timer begins decrementing.

**APPLICATION NOTE:** Writes to the [General Purpose Timer Load Register \(GP\\_TIMER\\_LOAD\)](#), [General Purpose Timer Interrupt Source Register \(GP\\_TIMER\\_INT\\_SRC\)](#) and [General Purpose Timer Control Register \(GP\\_TIMER\\_CTL\)](#) defined in the prior steps may be done in the same I<sup>2</sup>C write burst.

11. Upon timer expiration, and timer disablement, the [GP\\_UFLOW](#) bit will be set and the [GP\\_TIMER\\_INT](#) asserts in [Interrupt Status Register \(INT\\_STS\)](#).
12. The [IRQ\\_N](#) pin asserts.
13. Software services the IRQ and determines if a connection has been established with a UFP, or DFP. If no connection has been established SW changes the device's role. See [Section 9.4, "DRP Operation \(Legacy\)"](#) for further details.
14. Goto step 8.



## 8.5 System Control Registers

This section details the system control registers. For an overview of the entire device register map, refer to [Section 4.0, "Register Map,"](#) on page 18.

**TABLE 8-1: SYSTEM CONTROL REGISTER MAP**

| Address       | Register Name (Symbol)   |
|---------------|--|
| 0000h         | Device ID Register (ID_REV)                                    |
| 0004h         | USB Vendor ID Register (VID)                                   |
| 0006h         | USB Product ID Register (PID)                                  |
| 0008h         | USB PD Revision Register (PD_REV)                              |
| 000Ah         | USB Type-C <sup>®</sup> Revision Register (C_REV)              |
| 000Bh - 000Dh | Reserved for future expansion                                  |
| 000Eh         | SPI Test Register (SPI_TEST) (UPD350-B/UPD350-D Only)          |
| 0010h         | Interrupt Status Register (INT_STS)                            |
| 0014h         | Interrupt Enable Register (INT_EN)                             |
| 0018h         | Hardware Control Register (HW_CTL)                             |
| 001Ah         | I2C Slave Address Register (I2C_ADDR) (UPD350-A/UPD350-C Only) |
| 001Bh - 001Fh | Reserved for future expansion                                  |
| 0020h         | PIO Status Register (PIO_STS)                                  |
| 0022h         | PIO Interrupt Status Register (PIO_INT_STS)                    |
| 0024h         | PIO Interrupt Enable Register (PIO_INT_EN)                     |
| 0026h - 002Fh | Reserved for future expansion                                  |
| 0030h         | Configure PIOx Registers (CFG_PIOx) x=0                        |
| 0031h         | Configure PIOx Registers (CFG_PIOx) x=1                        |
| 0032h         | Configure PIOx Registers (CFG_PIOx) x=2                        |
| 0033h         | Configure PIOx Registers (CFG_PIOx) x=3                        |
| 0034h         | Configure PIOx Registers (CFG_PIOx) x=4                        |
| 0035h         | Configure PIOx Registers (CFG_PIOx) x=5                        |
| 0036h         | Configure PIOx Registers (CFG_PIOx) x=6                        |
| 0037h         | Configure PIOx Registers (CFG_PIOx) x=7                        |
| 0038h         | Configure PIOx Registers (CFG_PIOx) x=8                        |
| 0039h         | Configure PIOx Registers (CFG_PIOx) x=9                        |
| 003Ah         | Configure PIOx Registers (CFG_PIOx) x=10                       |
| 003Bh         | Configure PIOx Registers (CFG_PIOx) x=11                       |
| 003Ch         | Configure PIOx Registers (CFG_PIOx) x=12                       |
| 003Dh         | Configure PIOx Registers (CFG_PIOx) x=13                       |
| 003Eh         | Configure PIOx Registers (CFG_PIOx) x=14                       |
| 003Fh         | Configure PIOx Registers (CFG_PIOx) x=15                       |
| 0040h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=0             |
| 0041h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=1             |
| 0042h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=2             |
| 0043h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=3             |
| 0044h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=4             |
| 0045h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=5             |
| 0046h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=6             |
| 0047h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=7             |
| 0048h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=8             |

# UPD350

**TABLE 8-1: SYSTEM CONTROL REGISTER MAP (CONTINUED)**

| Address       | Register Name (Symbol)  |
|---------------|---|
| 0049h         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=9                    |
| 004Ah         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=10                   |
| 004Bh         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=11                   |
| 004Ch         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=12                   |
| 004Dh         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=13                   |
| 004Eh         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=14                   |
| 004Fh         | Configure PIOx Update Registers (CFG_PIOx_UPD) x=15                   |
| 0050h         | PIO Override x Source Select Registers (PIO_OVRx_SRC_SEL) x=0         |
| 0051h         | PIO Override x Source Select Registers (PIO_OVRx_SRC_SEL) x=1         |
| 0052h         | PIO Override x Source Select Registers (PIO_OVRx_SRC_SEL) x=2         |
| 0053h         | PIO Override x Source Select Registers (PIO_OVRx_SRC_SEL) x=3         |
| 0054h         | PIO Override Monitor Value Register (PIO_OVR_MON_VAL)                 |
| 0055h         | PIO Override Enable Register (PIO_OVR_EN)                             |
| 0056h         | PIO Override Status Register (PIO_OVR_STS)                            |
| 0057h         | PIO Override Interrupt Status Register (PIO_OVR_INT_STS)              |
| 0058h         | PIO Override Interrupt Enable Register (PIO_OVR_INT_EN)               |
| 0059h         | Configure PIO Output Register (CFG_PIO_OUT)                           |
| 005Bh         | Configure PIO Output Update Register (CFG_PIO_OUT_UPD)                |
| 005Dh - 005Fh | Reserved for future expansion   |
| 0060h         | PIO Override x Output Enable Registers (PIO_OVRx_OUT_EN) x=0          |
| 0062h         | PIO Override x Output Enable Registers (PIO_OVRx_OUT_EN) x=1          |
| 0064h         | PIO Override x Output Enable Registers (PIO_OVRx_OUT_EN) x=2          |
| 0066h         | PIO Override x Output Enable Registers (PIO_OVRx_OUT_EN) x=3          |
| 0068h         | PIO Override Output Register (PIO_OVR_OUT)                            |
| 006Ah         | PIO Override Direction Register (PIO_OVR_DIR)                         |
| 006Ch         | PIO Debounce Count Ten Millisecond Register (PIO_DEBOUNCE_10MS_COUNT) |
| 006Dh         | PIO Debounce Count One Millisecond Register (PIO_DEBOUNCE_1MS_COUNT)  |
| 006Eh         | PIO Debounce Count One Microsecond Register (PIO_DEBOUNCE_1US_COUNT)  |
| 006Fh         | PIO Debounce Status Register (PIO_DEBOUNCE_STS)                       |
| 0070h         | PIO Debounce Enable Register (PIO_DEBOUNCE_EN)                        |
| 0074h – 007Fh | Reserved for future expansion   |
| 0080h         | OCS Comparator Control Register (OCS_CMP_CTL)                         |
| 0081h         | OCS Comparator Match Register (OCS_CMP_MATCH)                         |
| 0082h         | OCS Comparator Change Status Register (OCS_CMP_CHG_STS)               |
| 0083h         | OCS Comparator Match Enable Register (OCS_CMP_MATCH_EN)               |
| 0084h         | OCS Comparator x Threshold Registers (OCS_CMPx_THR) x=1               |
| 0086h         | OCS Comparator x Threshold Registers (OCS_CMPx_THR) x=2               |
| 0088h         | OCS Comparator Debounce Register (OCS_CMP_DEBOUNCE)                   |
| 0089h – 009Ah | Reserved for future expansion   |
| 009Bh         | IRQ_N PU/PD Control Register (IRQ_PUPD)                               |
| 009Ch         | Voltage Regulator Control Register (VREG_CTL)                         |
| 009Dh         | I2C Trim Register (I2C_TRIM)  |
| 009E – 009Fh  | Reserved for future expansion   |
| 00A0h         | General Purpose Timer Load Register (GP_TIMER_LOAD)                   |

**TABLE 8-1: SYSTEM CONTROL REGISTER MAP (CONTINUED)**

| Address       | Register Name (Symbol)   |
|---------------|--|
| 00A2h         | General Purpose Timer Interrupt Source Register (GP_TIMER_INT_SRC) |
| 00A3h         | General Purpose Timer Control Register (GP_TIMER_CTL)              |
| 00A4h         | General Purpose Timer Count Register (GP_TIMER_COUNT)              |
| 00A6h – 03FFh | Reserved for future expansion                                      |

**Note:** RESERVED address space must not be written under any circumstances. Failure to heed this warning may result in untoward operation and unexpected results.

## 8.5.1 DEVICE ID REGISTER (ID\_REV)

Address: 0000h      Size: 32 bits

| Bits  | Description           | Type | Default  |
|-------|-----------------------|------|----------|
| 31:16 | Device ID (ID)        | RO   | Note 8-1 |
| 15:0  | Device Revision (REV) | RO   | Note 8-2 |

**Note 8-1** The default value of this field is dependent on the version of the device.  
 UPD350-A: 0350h  
 UPD350-B: 0351h  
 UPD350-C: 0352h  
 UPD350-D: 0353h

**Note 8-2** The default value of this field is dependent on the silicon revision of the device.

ID\_REV[7:0] = 00h  
 ID\_REV[15:8] = 01h  
 ID\_REV[23:16] = 02h  
 ID\_REV[31:24] = 03h

## 8.5.2 USB VENDOR ID REGISTER (VID)

Address: 0004h      Size: 16 bits

| Bits | Description                     | Type | Default |
|------|---------------------------------|------|---------|
| 15:0 | USB Vendor Identification (VID) | R/W  | 0424h   |

VID[7:0] = 04h  
 VID[15:8] = 05h

# UPD350

---

## 8.5.3 USB PRODUCT ID REGISTER (PID)

Address: 0006h Size: 16 bits

| Bits | Description                             | Type | Default |
|------|---|------|---------|
| 15:0 | <b>USB Product Identification (PID)</b> | R/W  | 0350h   |

PID[7:0] = 06h

PID[15:8] = 07h

## 8.5.4 USB PD REVISION REGISTER (PD\_REV)

Address: 0008h Size: 16 bits

| Bits | Description   | Type | Default  |
|------|---|------|----------|
| 15:0 | <b>USB Power Delivery Specification Revision (PD_REV)</b> | R/W  | Note 8-3 |

**Note 8-3** The default value of this field is loaded from the respective OTP field. If OTP is not valid, the default value is 3010h.

PD\_REV[7:0] = 08h

PD\_REV[15:8] = 09h

## 8.5.5 USB TYPE-C<sup>®</sup> REVISION REGISTER (C\_REV)

Address: 000Ah Size: 16 bits

| Bits | Description  | Type | Default  |
|------|--|------|----------|
| 15:0 | <b>USB Type-C<sup>®</sup> Specification Revision (C_REV)</b> | R/W  | Note 8-4 |

**Note 8-4** The default value of this field is loaded from the respective OTP field. If OTP is not valid, the default value is 12h.

C\_REV[7:0] = 0Ah

C\_REV[15:8] = 0Bh

## 8.5.6 SPI TEST REGISTER (SPI\_TEST) (UPD350-B/UPD350-D ONLY)

Address: 000Eh Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>SPI Test (SPI_TEST)</b><br>This register is used by the host to determine when the chip has come out of powerdown when waking it via the SPI interface. | RO   | 02h     |

## 8.5.7 INTERRUPT STATUS REGISTER (INT\_STS)

Address: 0010h Size: 16 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 15   | <b>RESERVED</b>  | RO   | 0h      |
| 14   | <b>GP_TIMER_INT</b><br>Interrupt generated when the general purpose timer underflows.<br><br>This interrupt reflects the value of the <a href="#">GP_UFLOW</a> bit of the <a href="#">General Purpose Timer Interrupt Source Register (GP_TIMER_INT_SRC)</a> .                   | RO   | 0b      |
| 13   | <b>RESERVED</b>  | RO   | 0b      |
| 12   | <b>RDY_INT</b><br>Interrupt generated when the device is configured and ready for access by host CPU after a system level reset event.<br><br>This interrupt reflects the value of the <a href="#">DEV_READY</a> bit of the <a href="#">Hardware Control Register (HW_CTL)</a> . | RO   | 0b      |
| 11   | <b>EXT_INT</b><br>Interrupt generated by the Cable Plug Orientation and Detection module.  | RO   | 0b      |
| 10   | <b>PWR_INT</b><br>Interrupt generated power event.<br><br>This interrupt is cleared via the <a href="#">Power Interrupt Status Register (PWR_INT_STS)</a> .  | RO   | 0b      |
| 9    | <b>VBUS_INT</b><br>Indicates that a change occurred in the state of the <a href="#">VBUS Change Status Register (VBUS_CHG_STS)</a> .   | RO   | 0b      |
| 8    | <b>HPD_INT</b><br>Interrupt generated by the HPD detection logic.<br><br>This interrupt is cleared via the <a href="#">HPD Interrupt Status Register (HPD_INT_STS)</a> .   | RO   | 0b      |
| 7    | <b>PSW_INT</b><br>Interrupt generated by the power switch.<br><br>This interrupt is cleared via the <a href="#">Power Switch Interrupt Status Register (PWR_INT_STS)</a> .   | RO   | 0b      |

# UPD350

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 6    | <p><b>WDT_INT</b><br/>Interrupt generated by watchdog timer expiration.</p> <p>This interrupt is cleared via <a href="#">WDT_STS</a> bit in the <a href="#">Watchdog Control Register (WDT_CTL)</a>.</p> <p><b>Note:</b> When a Watchdog interrupt is pending, all write operations are blocked until the <a href="#">WDT_STS</a> bit in the <a href="#">Watchdog Control Register (WDT_CTL)</a> is cleared.</p> | RO   | 0b      |
| 5    | <p><b>PPC_INT</b><br/>Interrupt generated by PPC.</p>  | RO   | 0b      |
| 4    | <p><b>MAC_INT</b><br/>Interrupt generated by the PD MAC.</p> <p>This interrupt is cleared via the corresponding PD MAC interrupt register, as detailed in <a href="#">Section 11.4.3, "PD MAC Interrupt Status and Enable Registers," on page 155</a>.</p>   | RO   | 0b      |
| 3    | <p><b>OCS_CMP_INT</b><br/>Interrupt generated from the detection of an over-current condition.</p> <p>This interrupt is cleared via <a href="#">OCS Comparator Change Status Register (OCS_CMP_CHG_STS)</a>.</p>   | RO   | 0b      |
| 2    | <p><b>PIO_OVERRIDE_INT</b><br/>Interrupt generated from a PIO override.</p> <p>This interrupt is cleared via the <a href="#">PIO Override Interrupt Status Register (PIO_OVR_INT_STS)</a>.</p>   | RO   | 0b      |
| 1    | <p><b>PIO_INT</b><br/>Interrupt generated from configured PIO status change.</p> <p>This interrupt is cleared via the <a href="#">PIO Interrupt Status Register (PIO_INT_STS)</a>.</p>   | RO   | 0b      |
| 0    | <p><b>CC_INT</b><br/>Interrupt generated by Cable Plug Orientation and Detection module.</p> <p>This interrupt is cleared via the <a href="#">CC Interrupt Status Register (CC_INT_STS)</a>.</p>   | RO   | 0b      |

INT\_STS[7:0] = 10h

INT\_STS[15:8] = 11h

## 8.5.8 INTERRUPT ENABLE REGISTER (INT\_EN)

Address: 0014h Size: 16 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 15   | <b>RESERVED</b>  | RO   | 0h      |
| 14   | <b>Interrupt Enable 13</b><br>When "0", prevents generation of the respective interrupt. | R/W  | 0b      |
| 13   | <b>RESERVED</b>  | RO   | -       |
| 12   | <b>Interrupt Enable 12</b><br>When "0", prevents generation of the respective interrupt. | R/W  | 1b      |
| 11   | <b>Interrupt Enable 11</b><br>When "0", prevents generation of the respective interrupt. | R/W  | 0b      |
| 10   | <b>Interrupt Enable 10</b><br>When "0", prevents generation of the respective interrupt. | R/W  | 0b      |
| 9    | <b>Interrupt Enable 9</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 0b      |
| 8    | <b>Interrupt Enable 8</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 0b      |
| 7    | <b>Interrupt Enable 7</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 0b      |
| 6    | <b>Interrupt Enable 6</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 1b      |
| 5    | <b>Interrupt Enable 5</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 0b      |
| 4    | <b>Interrupt Enable 4</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 0b      |
| 3    | <b>Interrupt Enable 3</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 0b      |
| 2    | <b>Interrupt Enable 2</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 0b      |
| 1    | <b>Interrupt Enable 1</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 0b      |
| 0    | <b>Interrupt Enable 0</b><br>When "0", prevents generation of the respective interrupt.  | R/W  | 0b      |

INT\_EN[7:0] = 12h

INT\_EN[15:8] = 13h

The default value is loaded from RESET\_MASK OTP field.

# UPD350

## 8.5.9 HARDWARE CONTROL REGISTER (HW\_CTL)

Address: 0018h Size: 16 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 15:6 | <b>RESERVED</b>   | RO   | -       |
| 5    | <b>I2C_GEN_CALL_EN</b><br>0: I <sup>2</sup> C General Call address not supported.<br>1: I <sup>2</sup> C General Call address supported.  | R/W  | 0b      |
| 4    | <b>RESERVED</b>   | RO   | -       |
| 3    | <b>I2C FMPLUS</b><br>When set, this bit configures the I <sup>2</sup> C interface to operate in fast-mode plus mode.<br><b>Note:</b> UPD350-A/UPD350-C only.  | R/W  | 1b      |
| 2    | <b>DEV_READY</b><br>When set, this bit indicates that the device has been fully configured after a system level reset event.  | R/SC | 0b      |
| 1    | <b>PIO_UPD_REQ</b><br>When this bit is set, the PIO registers are updated from the respective simultaneous update registers.<br><br>After the operation completes, this bit is automatically cleared.<br><br>The request will not be accepted if an override function is pending. After the override condition is cleared by software, the update request will be accepted. The override is cleared via respective bit of <a href="#">PIO Override Enable Register (PIO_OVR_EN)</a> . | R/SC | 0b      |
| 0    | <b>SRESET</b><br>Software reset. When set this bit initiates a chip level reset.  | SC   | 0b      |

## 8.5.10 I<sup>2</sup>C SLAVE ADDRESS REGISTER (I2C\_ADDR) (UPD350-A/UPD350-C ONLY)

Address: 001Ah Size: 8 bits

| Bits | Description   | Type | Default                  |
|------|---|------|--------------------------|
| 7    | <b>RESERVED</b>   | RO   | -                        |
| 6:0  | <b>I<sup>2</sup>C Slave Address</b><br>Defines the slave address used by the I <sup>2</sup> C controller. | R/W  | <a href="#">Note 8-5</a> |

**Note 8-5** The default value for this register is defined by the CFG\_SEL pin unless the OTP I2C\_ADR\_OVR\_EN bit is set. In this case, the OTP value specified by I2C\_ADDR\_OVR[6:0] is loaded into the register.



## 8.5.11 PIO STATUS REGISTER (PIO\_STS)

Address: 0020h Size: 16 bits

| Bits | Description                                       | Type | Default |
|------|---|------|---------|
| 15   | <b>PIO15</b><br>0b: PIO is low<br>1b: PIO is high | RO   | 0b      |
| 14   | <b>PIO14</b><br>0b: PIO is low<br>1b: PIO is high | RO   | 0b      |
| 13   | <b>PIO13</b><br>0b: PIO is low<br>1b: PIO is high | RO   | 0b      |
| 12   | <b>PIO12</b><br>0b: PIO is low<br>1b: PIO is high | RO   | 0b      |
| 11   | <b>PIO11</b><br>0b: PIO is low<br>1b: PIO is high | RO   | 0b      |
| 10   | <b>PIO10</b><br>0b: PIO is low<br>1b: PIO is high | RO   | 0b      |
| 9    | <b>PIO9</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |
| 8    | <b>PIO8</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |
| 7    | <b>PIO7</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |
| 6    | <b>PIO6</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |
| 5    | <b>PIO5</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |
| 4    | <b>PIO4</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |
| 3    | <b>PIO3</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |
| 2    | <b>PIO2</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |
| 1    | <b>PIO1</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |
| 0    | <b>PIO0</b><br>0b: PIO is low<br>1b: PIO is high  | RO   | 0b      |

PIO\_STS[0] = 20h

PIO\_STS[1] = 21h

# UPD350

**Note:** The GPO1 and GPO10 general purpose signals can only function as outputs and must be kept in a low state coincident with de-asserting RESET\_N.

**Note:** GPIO0 is not available in the UPD350-B/UPD350-D.

**Note:** In Standalone DFP/UFP modes, GPIOs 9-15 have alternate dedicated functions, as defined in [Section 3.1.1.1, "UPD350-A / UPD350-C GPIO Functions in Standalone DFP/UFP Modes,"](#) on page 10.

## 8.5.12 PIO INTERRUPT STATUS REGISTER (PIO\_INT\_STS)

Address: 0022h Size: 16 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 15:0 | <b>PIO_INT[15:0]</b><br>When set, a level change has occurred on PIO[15:0].<br><br>Interrupts are cleared by writing a '1' to the bit. | R/WC | 0000h   |

**Note:** Writing a "1" (one) to a bit clears the bit and enables the detection of the next level transition. If not disabled by the corresponding bit in the PIO\_EN register, "1" in any bit in this register will force assertion of PIO\_INT interrupt.

## 8.5.13 PIO INTERRUPT ENABLE REGISTER (PIO\_INT\_EN)

Address: 0024h Size: 16 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 15:0 | <b>PIO_EN[15:0]</b><br>When set, an interrupt can be generated on a state change from the corresponding PIO line. | R/W  | 0h      |

## 8.5.14 CONFIGURE PIOX REGISTERS (CFG\_PIOX)

Address:            x=0: 0030h            Size:            8 bits  
                       x=1: 0031h  
                       x=2: 0032h  
                       x=3: 0033h  
                       x=4: 0034h  
                       x=5: 0035h  
                       x=6: 0036h  
                       x=7: 0037h  
                       x=8: 0038h  
                       x=9: 0039h  
                       x=10: 003Ah  
                       x=11: 003Bh  
                       x=12: 003Ch  
                       x=13: 003Dh  
                       x=14: 003Eh  
                       x=15: 003Fh

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | <b>PullUpEnable</b><br>0b: No pull-up<br>1b: Pull-up enabled.   | R/W  | 0b      |
| 6    | <b>PullDownEnable</b><br>0b: No pull-down<br>1b: Pull-down enabled.   | R/W  | 0b      |
| 5    | <b>FallingAlert</b><br>0b: No alert on falling edge<br>1b: Assert <a href="#">PIO_INT</a> on falling edge   | R/W  | 0b      |
| 4    | <b>RisingAlert</b><br>0b: No alert on rising edge<br>1b: Assert <a href="#">PIO_INT</a> on rising edge  | R/W  | 0b      |
| 3    | <b>DataOutput</b><br>0b: Inactive (low for push-pull or open-drain)<br>1b: Active (high for push-pull, high-z for open-drain)<br><br><b>Note:</b> The input buffer status can be determined from the respective bit in <a href="#">PIO Status Register (PIO_STS)</a> .<br><br><b>Note:</b> The associated PIO output bit in the <a href="#">Configure PIO Output Register (CFG_PIO_OUT)</a> will be updated to match the value written to this bit. | R/W  | 0b      |
| 2    | <b>Buffer Type</b><br>When set, the output buffer for the corresponding GPIO signal is configured as a push/pull driver.<br>When cleared, the corresponding GPIO signal is configured as an open-drain driver.  | R/W  | 0b      |
| 1    | <b>Direction</b><br>0b: Input<br>1b: Output   | R/W  | 0b      |
| 0    | <b>Enable</b><br>0b: GPIO Disabled<br>1b: GPIO Enabled<br><br><b>Note:</b> When a GPIO is disabled, the default function, if any, will be functional. All GPIOs default to being enabled and configured as inputs.  | R/W  | 1b      |

# UPD350

**Note:** The GPO1 and GPO10 general purpose signals can only function as outputs and must be kept in a low state coincident with de-asserting RESET\_N.

**Note:** GPIO0 is not available in the UPD350-B/UPD350-D.

**Note:** In Standalone DFP/UFP modes, GPIOs 9-15 have alternate dedicated functions, as defined in [Section 3.1.1.1, "UPD350-A / UPD350-C GPIO Functions in Standalone DFP/UFP Modes,"](#) on page 10.

## 8.5.15 CONFIGURE PIOX UPDATE REGISTERS (CFG\_PIOX\_UPD)

Address:            x=0: 0040h            Size:            8 bits  
                      x=1: 0041h  
                      x=2: 0042h  
                      x=3: 0043h  
                      x=4: 0044h  
                      x=5: 0045h  
                      x=6: 0046h  
                      x=7: 0047h  
                      x=8: 0048h  
                      x=9: 0049h  
                      x=10: 004Ah  
                      x=11: 004Bh  
                      x=12: 004Ch  
                      x=13: 004Dh  
                      x=14: 004Eh  
                      x=15: 004Fh

| Bits | Description     | Type | Default |
|------|-----------------|------|---------|
| 7    | PullUpEnabled   | R/W  | 0b      |
| 6    | PullDownEnabled | R/W  | 0b      |
| 5    | FallingAlert    | R/W  | 0b      |
| 4    | RisingAlert     | R/W  | 0b      |
| 3    | OutputValue     | R/W  | 0b      |
| 2    | BufferType      | R/W  | 0b      |
| 1    | Direction       | R/W  | 0b      |
| 0    | Enable          | R/W  | 0b      |

**Note:** The GPO1 and GPO10 general purpose signals can only function as outputs and must be kept in a low state coincident with de-asserting RESET\_N.

**Note:** GPIO0 is not available in the UPD350-B/UPD350-D.

**Note:** In Standalone DFP/UFP modes, GPIOs 9-15 have alternate dedicated functions, as defined in [Section 3.1.1.1, "UPD350-A / UPD350-C GPIO Functions in Standalone DFP/UFP Modes,"](#) on page 10.

## 8.5.16 PIO OVERRIDE X SOURCE SELECT REGISTERS (PIO\_OVRX\_SRC\_SEL)

Address:           x=0: 0050h           Size:           8 bits  
                       x=1: 0051h  
                       x=2: 0052h  
                       x=3: 0053h

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:5  | <p><b>VBUS Threshold Select</b><br/>           This field selects which VBUS threshold shall be matched when selecting VBUS_DET for override.</p> <p>000b: VSAFE0V_THR_MATCH<br/>           001b: VBUS0_THR_MATCH<br/>           010b: VBUS1_THR_MATCH<br/>           011b: VBUS2_THR_MATCH<br/>           1xxb: VBUS3_THR_MATCH</p>  | R/W  | 0h      |
| 4:0  | <p><b>Override Select</b><br/>           This field selects the source for the respective PIO override.</p> <p>0h: PIO0<br/>           1h: PIO1<br/>           2h: PIO2/OCS_COMP2<br/>           3h: PIO3<br/>           4h: PIO4<br/>           5h: PIO5<br/>           6h: PIO6<br/>           7h: PIO7<br/>           8h: PIO8<br/>           9h: PIO9<br/>           Ah: PIO10<br/>           Bh: PIO11<br/>           Ch: PIO12<br/>           Dh: PIO13<br/>           Eh: PIO14<br/>           Fh: PIO15<br/>           10h: OCS_COMP1<br/>           11h: VBUS_DET<br/>           12h-1Fh: Reserved</p> | R/W  | 0h      |

# UPD350

## 8.5.17 PIO OVERRIDE MONITOR VALUE REGISTER (PIO\_OVR\_MON\_VAL)

Address: 0054h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:4  | <b>RESERVED</b>   | RO   | -       |
| 3    | <b>PIO_MON_VAL3</b><br>Override function 3 monitors for this value on the selected PIO. | R/W  | 0b      |
| 2    | <b>PIO_MON_VAL2</b><br>Override function 2 monitors for this value on the selected PIO. | R/W  | 0b      |
| 1    | <b>PIO_MON_VAL1</b><br>Override function 1 monitors for this value on the selected PIO. | R/W  | 0b      |
| 0    | <b>PIO_MON_VAL0</b><br>Override function 0 monitors for this value on the selected PIO. | R/W  | 0b      |

**Note:** When the PIO is mapped to an OCS comparator or VBUS comparator, the monitored case is rising above/falling below the associated threshold. Setting the override monitor value indicates that the source exceeding the threshold is monitored. If the value is cleared then being below the threshold is monitored.

## 8.5.18 PIO OVERRIDE ENABLE REGISTER (PIO\_OVR\_EN)

Address: 0055h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:4  | <b>RESERVED</b>   | RO   | -       |
| 3    | <b>PIO_OVR_EN3</b><br>When set PIO Override 3 is enabled. | R/W  | 0b      |
| 2    | <b>PIO_OVR_EN2</b><br>When set PIO Override 2 is enabled. | R/W  | 0b      |
| 1    | <b>PIO_OVR_EN1</b><br>When set PIO Override 1 is enabled. | R/W  | 0b      |
| 0    | <b>PIO_OVR_EN0</b><br>When set PIO Override 0 is enabled. | R/W  | 0b      |

## 8.5.19 PIO OVERRIDE STATUS REGISTER (PIO\_OVR\_STS)

Address: 0056h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:4  | <b>RESERVED</b>   | RO   | -       |
| 3    | <b>PIO_OVR_STS3</b><br>Override function is active on the selected PIO.<br><br>Set on a match to PIO_MON_VAL3 and clears on override feature disable<br>PIO_OVR_EN3 =0. | RO   | 0b      |
| 2    | <b>PIO_OVR_STS2</b><br>Override function is active on the selected PIO.<br><br>Set on a match to PIO_MON_VAL2 and clears on override feature disable<br>PIO_OVR_EN2 =0. | RO   | 0b      |
| 1    | <b>PIO_OVR_STS1</b><br>Override function is active on the selected PIO.<br><br>Set on a match to PIO_MON_VAL1 and clears on override feature disable<br>PIO_OVR_EN1 =0. | RO   | 0b      |
| 0    | <b>PIO_OVR_STS0</b><br>Override function is active on the selected PIO.<br><br>Set on a match to PIO_MON_VAL0 and clears on override feature disable<br>PIO_OVR_EN0 =0. | RO   | 0b      |

# UPD350

## 8.5.20 PIO OVERRIDE INTERRUPT STATUS REGISTER (PIO\_OVR\_INT\_STS)

Address: 0057h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:4  | <b>RESERVED</b>   | RO   | -       |
| 3    | <b>PIO_OVR_INTR3</b><br>This interrupt is set when override function 3 detects the programmed monitored value on the selected PIO.<br><br>The interrupt persists until cleared. | R/WC | 0b      |
| 2    | <b>PIO_OVR_INTR2</b><br>This interrupt is set when override function 2 detects the programmed monitored value on the selected PIO.<br><br>The interrupt persists until cleared. | R/WC | 0b      |
| 1    | <b>PIO_OVR_INTR1</b><br>This interrupt is set when override function 1 detects the programmed monitored value on the selected PIO.<br><br>The interrupt persists until cleared. | R/WC | 0b      |
| 0    | <b>PIO_OVR_INTR0</b><br>This interrupt is set when override function 0 detects the programmed monitored value on the selected PIO.<br><br>The interrupt persists until cleared. | R/WC | 0b      |

## 8.5.21 PIO OVERRIDE INTERRUPT ENABLE REGISTER (PIO\_OVR\_INT\_EN)

Address: 0058h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:4  | <b>RESERVED</b>   | RO   | 0h      |
| 3    | <b>PIO_OVR_INTR3</b><br>When '1', enables the generation of this interrupt. | R/W  | 0b      |
| 2    | <b>PIO_OVR_INTR2</b><br>When '1', enables the generation of this interrupt. | R/W  | 0b      |
| 1    | <b>PIO_OVR_INTR1</b><br>When '1', enables the generation of this interrupt. | R/W  | 0b      |
| 0    | <b>PIO_OVR_INTR0</b><br>When '1', enables the generation of this interrupt. | R/W  | 0b      |



## 8.5.22 CONFIGURE PIO OUTPUT REGISTER (CFG\_PIO\_OUT)

Address: 0059h Size: 16 bits

This register enables multiple PIO output values to be updated in a single CSR write.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 15:0 | <p><b>CFG_PIO_OUT</b><br/>When this register is written, the output values for the respective PIOs are updated. Specifically, the <a href="#">DataOutput</a> in the respective CFG_PIOx registers are updated.</p> <p>This register is not updated until the byte located at 005Ah is written by software. This is to prevent placing externally driven components in an invalid state while updating.</p> | R/W  | 0000h   |

## 8.5.23 CONFIGURE PIO OUTPUT UPDATE REGISTER (CFG\_PIO\_OUT\_UPD)

Address: 005Bh Size: 16 bits

| Bits | Description             | Type | Default |
|------|-------------------------|------|---------|
| 15:0 | <b>CFG_PIO_OUTx_UPD</b> | R/W  | 0000h   |

## 8.5.24 PIO OVERRIDE X OUTPUT ENABLE REGISTERS (PIO\_OVRX\_OUT\_EN)

Address: x=0: 0060h  
x=1: 0062h  
x=2: 0064h  
x=3: 0066h Size: 16 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 15:0 | <p><b>PIO_OVR_OUT_EN_X</b><br/>Each of the overrides has an instance of this CSR to indicate which PIO outputs are controlled by it. When asserted associated PIO output's state is controlled by the respective override function.</p> <p><b>Note:</b> The same PIO output can be enabled by multiple overrides.</p> | R/W  | 0h      |

# UPD350

## 8.5.25 PIO OVERRIDE OUTPUT REGISTER (PIO\_OVR\_OUT)

Address: 0068h Size: 16 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 15:0 | <b>PIO Override Output</b><br>This field defines the PIO output value to be used when the respective PIO is enabled for override and the associated override is triggered. | R/W  | 0h      |

## 8.5.26 PIO OVERRIDE DIRECTION REGISTER (PIO\_OVR\_DIR)

Address: 006Ah Size: 16 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 15:0 | <b>PIO Override Direction</b><br>This field defines the PIO direction value to be used when the respective PIO is enabled for override and the associated override is triggered. | R/W  | 0h      |

## 8.5.27 PIO DEBOUNCE COUNT TEN MILLISECOND REGISTER (PIO\_DEBOUNCE\_10MS\_COUNT)

Address: 006Ch Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>PIO_DEBOUNCE_10MS_COUNT</b><br>This register holds the 10 ms debounce counter.<br><br>Any transition within the debounce period is suppressed. Each count corresponds to 10 ms, with the default value being 100 ms.<br><br>This register is used when the debounce granularity is 10 ms.<br><b>Note:</b> The actual count may be either count or count-1. | R/W  | 0Ah     |

## 8.5.28 PIO DEBOUNCE COUNT ONE MILLISECOND REGISTER (PIO\_DEBOUNCE\_1MS\_COUNT)

Address: 006Dh Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <p><b>PIO_DEBOUNCE_1MS_COUNT</b><br/>This register holds the 1 ms debounce counter.</p> <p>Any transition within the debounce period is suppressed. Each count corresponds to 1 ms, with the default value being 10 ms.</p> <p>This register is used when the debounce granularity is 1 ms.</p> <p><b>Note:</b> The actual count may be either count or count-1.</p> | R/W  | 0Ah     |

## 8.5.29 PIO DEBOUNCE COUNT ONE MICROSECOND REGISTER (PIO\_DEBOUNCE\_1US\_COUNT)

Address: 006Eh Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <p><b>PIO_DEBOUNCE_1US_COUNT</b><br/>This register holds the 1 us debounce counter.</p> <p>Any transition within the debounce period is suppressed. Each count corresponds to 1 us, with the default value being 10 us.</p> <p>This register is used when the debounce granularity is 1 us.</p> <p><b>Note:</b> The actual count may be either count or count-1.</p> | R/W  | 0Ah     |

# UPD350

## 8.5.30 PIO DEBOUNCE STATUS REGISTER (PIO\_DEBOUNCE\_STS)

Address: 006Fh Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:1  | <b>RESERVED</b>  | RO   | 0h      |
| 0    | <b>PIO_DB_ACT</b><br>PIO Debounce Active<br><br>This bit is used to indicate that a PIO debounce is in process.<br>1b: PIO debounce pending<br>0b: PIO not pending | RO   | 0b      |

## 8.5.31 PIO DEBOUNCE ENABLE REGISTER (PIO\_DEBOUNCE\_EN)

Address: 0070h Size: 32 bits

This register enables a PIO for debouncing and selects the debouncer to be used as defined below:

- 00b: Debounce disabled
- 01b: Debounce Enabled ([PIO Debounce Count One Microsecond Register \(PIO\\_DEBOUNCE\\_1US\\_COUNT\)](#))
- 10b: Debounce Enabled ([PIO Debounce Count One Millisecond Register \(PIO\\_DEBOUNCE\\_1MS\\_COUNT\)](#))
- 11b: Debounce Enabled ([PIO Debounce Count Ten Millisecond Register \(PIO\\_DEBOUNCE\\_10MS\\_COUNT\)](#))

| Bits  | Description        | Type | Default |
|-------|--------------------|------|---------|
| 31:30 | <b>PIO_DB_EN15</b> | R/W  | 00b     |
| 29:28 | <b>PIO_DB_EN14</b> | R/W  | 00b     |
| 27:26 | <b>PIO_DB_EN13</b> | R/W  | 00b     |
| 25:24 | <b>PIO_DB_EN12</b> | R/W  | 00b     |
| 23:22 | <b>PIO_DB_EN11</b> | R/W  | 00b     |
| 21:20 | <b>PIO_DB_EN10</b> | R/W  | 00b     |
| 19:18 | <b>PIO_DB_EN9</b>  | R/W  | 00b     |
| 17:16 | <b>PIO_DB_EN8</b>  | R/W  | 00b     |
| 15:14 | <b>PIO_DB_EN7</b>  | R/W  | 00b     |
| 13:12 | <b>PIO_DB_EN6</b>  | R/W  | 00b     |
| 11:10 | <b>PIO_DB_EN5</b>  | R/W  | 00b     |
| 9:8   | <b>PIO_DB_EN4</b>  | R/W  | 00b     |
| 7:6   | <b>PIO_DB_EN3</b>  | R/W  | 00b     |

| Bits | Description | Type | Default |
|------|-------------|------|---------|
| 5:4  | PIO_DB_EN2  | R/W  | 00b     |
| 3:2  | PIO_DB_EN1  | R/W  | 00b     |
| 1:0  | PIO_DB_EN0  | R/W  | 00b     |

**Note:** GPIO0 is not available in the UPD350-B/UPD350-D.

## 8.5.32 OCS COMPARATOR CONTROL REGISTER (OCS\_CMP\_CTL)

Address: 0080h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | <b>OCS_DB_ACTIVE</b><br>When this bit reads back 0b, the debouncer is disabled. The OCS debouncer is enabled when it reads back 1b.   | RO   | 0b      |
| 6:2  | <b>RESERVED</b>   | RO   | 0h      |
| 1:0  | <b>OCS Comparator Control</b><br>00b: OCS Comparator and DAC are powered down<br>01b: OCS Comparator samples <b>OCS_COMP1</b><br>10b: OCS Comparator samples <b>OCS_COMP2</b><br>11b: OCS Comparator samples <b>OCS_COMP1</b> and <b>OCS_COMP2</b><br><br>When set to 01b or 10b, a sample is taken every 100 us. When set to 11b, each <b>OCS_COMPx</b> pin is effectively sampled every 200 us. | R/W  | 00b     |

## 8.5.33 OCS COMPARATOR MATCH REGISTER (OCS\_CMP\_MATCH)

Address: 0081h Size: 8 bits

This bit is always cleared when [OCS Comparator Control](#) is not enabled for the respective OCS\_COMP pin.

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:2  | <b>RESERVED</b>   | RO   | 0h      |
| 1    | <b>OCS Comparator Match 2</b><br>When set, this bit indicates that a match has occurred and an OCS condition has been detected on <b>OCS_COMP2</b> pin. | RO   | 0b      |
| 0    | <b>OCS Comparator Match 1</b><br>When set, this bit indicates that a match has occurred and an OCS condition has been detected on <b>OCS_COMP1</b> pin. | RO   | 0b      |

# UPD350

## 8.5.34 OCS COMPARATOR CHANGE STATUS REGISTER (OCS\_CMP\_CHG\_STS)

Address: 0082h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:6  | <b>OCSx Match Valid (OCSx_MATCH_VLD)</b><br>Asserts after the OCS debouncer is first enabled, via <a href="#">OCS Comparator Control</a> , and the first match becomes valid in <a href="#">OCS Comparator Match Register (OCS_CMP_MATCH)</a> .<br><br>Bit 7 = OCS2_MATCH_VLD<br>Bit 6 = OCS1_MATCH_VLD | R/WC | 0b      |
| 5:2  | <b>RESERVED</b>   | RO   | 0h      |
| 1:0  | <b>OCSx Change Status (OCSx_CHG_STS)</b><br>When set, each bit indicates that the respective bit in <a href="#">OCS Comparator Match Register (OCS_CMP_MATCH)</a> has changed.<br><br>Bit 1 = OCS2_CHG_STS<br>Bit 0 = OCS1_CHG_STS<br><br>A write of 1b clears the respective status bit.               | R/WC | 00b     |

## 8.5.35 OCS COMPARATOR MATCH ENABLE REGISTER (OCS\_CMP\_MATCH\_EN)

Address: 0083h Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:6  | <b>OCSx Match Valid Enable (OCSx_MATCH_VLD_EN)</b><br>When set, the corresponding bit in <a href="#">OCS Comparator Change Status Register (OCS_CMP_CHG_STS)</a> can cause the assertion of the <a href="#">OCS_CMP_INT</a> interrupt.<br><br>Bit 7 = OCS2_MATCH_VLD_EN<br>Bit 6 = OCS1_MATCH_VLD_EN     | R/W  | 0b      |
| 5:2  | <b>RESERVED</b>  | RO   | 0h      |
| 1:0  | <b>OCSx Comparator Match Enable (OCSx_CMP_MATCH_EN)</b><br>When set the corresponding bit in <a href="#">OCS Comparator Change Status Register (OCS_CMP_CHG_STS)</a> can cause the assertion of the <a href="#">OCS_CMP_INT</a> interrupt.<br><br>Bit 1 = OCS2_CMP_MATCH_EN<br>Bit 0 = OCS1_CMP_MATCH_EN | R/W  | 00b     |

## 8.5.36 OCS COMPARATOR X THRESHOLD REGISTERS (OCS\_CMPX\_THR)

Address:            x=1: 0084h            Size:            16 bits  
                       x=2: 0086h

| Bits  | Description  | Type | Default |
|-------|--|------|---------|
| 15:10 | <b>RESERVED</b>  | RO   | 0h      |
| 9:0   | <p><b>OCS Comparator Threshold</b><br/>           The lower byte of the threshold must be written before the upper byte. The entire 10-bit threshold is updated when the second write occurs.</p> <p>This has units of ~2.5V/1024.</p> <p><b>Note:</b> This register shall not be modified while the OCS debouncer is enabled.</p> | R/W  | 0h      |

**APPLICATION NOTE:** This register may be dynamically written to by firmware while the OCS comparator is enabled provided the rules for updating defined in the register description are followed.

## 8.5.37 OCS COMPARATOR DEBOUNCE REGISTER (OCS\_CMP\_DEBOUNCE)

Address:            0088h            Size:            8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <p><b>OCS_CMP_DEBOUNCE</b><br/>           Indicates the period of time for which the <b>OCS_COMP1</b> and <b>OCS_COMP2</b> inputs are debounced.</p> <p>This field has units of 100 us.</p> <p><b>Note:</b> This register shall not be modified while the OCS debouncer is enabled.</p> | R/W  | 0Fh     |

## 8.5.38 IRQ\_N PU/PD CONTROL REGISTER (IRQ\_PUPD)

Address:            009Bh            Size:            8 bits

This register controls the PU and PD for the **IRQ\_N** pin.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7    | <p><b>PullUpEnable</b><br/>           0: No pull-up<br/>           1: Pull-up enabled.</p>       | R/W  | 0b      |
| 6    | <p><b>PullDownEnable</b><br/>           0: No pull-down<br/>           1: Pull-down enabled.</p> | R/W  | 0b      |
| 5:0  | <b>RESERVED</b>  | RO   | -       |

# UPD350

## 8.5.39 VOLTAGE REGULATOR CONTROL REGISTER (VREG\_CTL)

Address: 009Ch Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:1  | <b>RESERVED</b>   | RO   | -       |
| 1    | <b>VREG_LOW_OVR</b><br>When set, the 1.8V voltage regulator is placed in low power mode whenever both the Ring Oscillator and 48MHz Relaxation Oscillator are disabled.<br><br><b>Note:</b> It is expected for this bit to be set in CPU companion mode.<br><b>Note:</b> In standalone modes, the respective OTP bit shall be set to enable this feature and to ensure maximum power savings. | R/W  | 0b      |
| 0    | <b>VREG Low Power Enable (VREG_LOW_EN)</b><br>When set, the 1.8V voltage regulator is placed in low power mode.<br><br><b>Note:</b> This bit has no meaning when the <a href="#">VREG_LOW_OVR</a> bit is set.   | R/W  | 0b      |

## 8.5.40 I<sup>2</sup>C TRIM REGISTER (I<sup>2</sup>C\_TRIM)

Address: 009Dh Size: 8 bits

| BITS | DESCRIPTION  | TYPE | DEFAULT |
|------|--|------|---------|
| 7:0  | <b>I2C_TRIM</b><br>This register specifies the delay added by the I <sup>2</sup> C controller in order to meet the tHD_DAT parameter.<br><br>This register has units of 20.8 ns. | R/W  | 9h      |

**Note 8-6** The default is defined by the respective OTP field. If the OTP is not programmed the default value is 9h.



## 8.5.41 GENERAL PURPOSE TIMER LOAD REGISTER (GP\_TIMER\_LOAD)

Address: [00A0h](#) Size: 16 bits

| BITS | DESCRIPTION   | TYPE | DEFAULT |
|------|---|------|---------|
| 15:0 | <p><b>GP Timer Load</b><br/>This register defines the value to be loaded into the general purpose timer from which it will count down.</p> <p>The valid range for this register is 0001h - FFFFh.</p> <p>This field has units of 1 ms.</p> <p><b>Note:</b> Programming 0h into this register is not valid.</p> <p><b>Note:</b> Software shall not change the contents of this register while the <a href="#">RESET</a> bit is set and shall wait until this bit is cleared.</p> | R/W  | FFFFh   |

## 8.5.42 GENERAL PURPOSE TIMER INTERRUPT SOURCE REGISTER (GP\_TIMER\_INT\_SRC)

Address: [00A2h](#) Size: 8 bits

| BITS | DESCRIPTION  | TYPE | DEFAULT |
|------|--|------|---------|
| 7:1  | <b>RESERVED</b>  | RO   | -       |
| 0    | <p><b>GP_UFLOW</b><br/>This bit will be set when the general purpose timer underflows. The <a href="#">GP_TIMER_INT</a> interrupt in <a href="#">Interrupt Status Register (INT_STS)</a> persists until this bit is cleared.</p> <p>When <a href="#">DIS_ON_UFLOW</a> bit of the <a href="#">General Purpose Timer Control Register (GP_TIMER_CTL)</a> is set, the assertion of this bit is delayed until the timer is fully disabled (100s us).</p> | R/WC | 0b      |

# UPD350

## 8.5.43 GENERAL PURPOSE TIMER CONTROL REGISTER (GP\_TIMER\_CTL)

Address: 00A3h Size: 8 bits

| BITS | DESCRIPTION   | TYPE | DEFAULT |
|------|---|------|---------|
| 7    | <b>STATUS</b><br>This bit indicates the operational state of the GP timer.<br><br>0: Timer is disabled and not counting<br>1: Timer is enabled and counting<br><br>When this bit is cleared the timer has halted operation.   | RO   | 0b      |
| 6:3  | <b>RESERVED</b>   | RO   | -       |
| 2    | <b>DIS_ON_UFLOW</b><br>When this bit is set, the GP timer is automatically disabled upon detection of the underflow condition. Additionally, the <b>ENABLE</b> bit is cleared upon underflow detection and the assertion of <b>GP_UFLOW</b> will be delayed until the GP Timer has halted operation and the <b>STATUS</b> bit is cleared.                     | R/W  | 0b      |
| 1    | <b>RESET</b><br>Timer Reset. When set this bit stops the timer and resets the internal counter to the value in the <a href="#">General Purpose Timer Load Register (GP_TIMER_LOAD)</a> .<br><br>0: Timer is not in reset<br>1: Timer is in reset<br><br><b>Note:</b> This bit does not clear until propagation of the reset completes. This may take 100s us. | R/SC | 0b      |
| 0    | <b>ENABLE</b><br>Timer Enable. This bit is used to start and stop the <a href="#">General Purpose Timer Load Register (GP_TIMER_LOAD)</a> . This bit does not reset the timer count.<br><br>This is automatically cleared when the <b>DIS_ON_UFLOW</b> bit is set.<br><br>0: Timer is disabled<br>1: Timer is enabled   | R/W  | 0b      |

## 8.5.44 GENERAL PURPOSE TIMER COUNT REGISTER (GP\_TIMER\_COUNT)

Address: 00A4h Size: 16 bits

| BITS | DESCRIPTION   | TYPE | DEFAULT |
|------|---|------|---------|
| 15:0 | <b>GP Timer Counter</b><br>This register returns the current value of the general purpose timer.<br><br>The GP timer must be disabled before reading this register by clearing the <b>ENABLE</b> bit. | RO   | 0h      |

## 9.0 CABLE PLUG ORIENTATION AND DETECTION

This section details the functions that control and monitor the CC pins, monitor the **VBUS\_DET** pin, control the VCONN FETs, and sample the **CFG\_SEL** pin.

### 9.1 CC Comparator

The device integrates a comparator and DAC circuit to implement Type-C attach and detach functions. It supports up to eight programmable thresholds for attach detection between UFP and DFP. When operating as a UFP, the device supports detecting changes in the DFP's advertised thresholds to determine current sourcing capability. The default nominal values for the thresholds detected by the CC comparators are:

- 0.20 V
- 0.40 V
- 0.66 V
- 0.80 V
- 1.23 V
- 1.60 V
- 2.60 V
- 3.0 V Proprietary Mode

**TABLE 9-1: CABLE DETECT SUMMARY**

| Parameter   | Threshold CSR | Description   | Min | Typ    | Max |
|-------------|---------------|---|-----|--------|-----|
| DFP_ACT_DEF | CC_THR0       | Detecting an active cable when configured as DFP and advertising default USB current.   |     | 0.20 V |     |
| UFP_DFP_DEF | CC_THR0       | Detecting DFP attach when configured as UFP and DFP is advertising default USB current. |     | 0.20 V |     |
| DFP_ACT_1A5 | CC_THR1       | Detecting an active cable when configured as DFP and advertising 1.5A.                  |     | 0.40 V |     |
| UFP_DFP_1A5 | CC_THR2       | Detecting DFP attach when configured as UFP and DFP is advertising 1.5A.                |     | 0.66 V |     |
| DFP_ACT_3A0 | CC_THR3       | Detecting an active cable when configured as DFP and advertising 3.0A.                  |     | 0.80 V |     |
| UFP_DFP_3A0 | CC_THR4       | Detecting DFP attach when configured as UFP and DFP is advertising 3.0A.                |     | 1.23 V |     |
| DFP_UFP_DEF | CC_THR5       | Detecting UFP attach when configured as DFP advertising default USB current.            |     | 1.60 V |     |
| DFP_UFP_1A5 | CC_THR5       | Detecting UFP attach when configured as DFP advertising 1.5A.                           |     | 1.60 V |     |
| DFP_UFP_3A0 | CC_THR6       | Detecting UFP attach when configured as DFP advertising 3.0A.                           |     | 2.60 V |     |

# UPD350

The following tables summarize the expected thresholds to be matched in the CCx Match Registers (CCx\_MATCH) for various configurations. Refer to the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) for the debouncer mask used in these configurations.

**TABLE 9-2: DFP CC MATCH SUMMARY**

| CC State   | CC THR0 | CC THR1 | CC THR2 | CC THR3 | CC THR4 | CC THR5 | CC THR6 | CC THR7 |
|--|---------|---------|---------|---------|---------|---------|---------|---------|
| Advertise Default USB Current and connected to powered cable | 0       | 0       | 0       | 0       | 0       | 0       | 0       | 0       |
| Advertise 1.5 A and connected to powered cable               | 0       | 0       | 0       | 0       | 0       | 0       | 0       | 0       |
| Advertise 3.0 A and connected to powered cable               | 0       | 0       | 0       | 0       | 0       | 0       | 0       | 0       |
| Advertise Default USB Current and connected to UFP           | 1       | 0       | 0       | 0       | 0       | 0       | 0       | 0       |
| Advertise 1.5 A and connected to UFP                         | 0       | 1       | 0       | 0       | 0       | 0       | 0       | 0       |
| Advertise 3.0 A and connected to UFP                         | 0       | 0       | 0       | 1       | 0       | 0       | 0       | 0       |
| Advertise Default USB Current and no connect (vOpen)         | 1       | 0       | 0       | 0       | 0       | 1       | 0       | 0       |
| Advertise 1.5 A and no connect (vOpen)                       | 0       | 1       | 0       | 0       | 0       | 1       | 0       | 0       |
| Advertise 3.0 A and no connect (vOpen)                       | 0       | 0       | 0       | 1       | 0       | 0       | 1       | 0       |
| Proprietary Mode and no connect (vOpen)                      | 0       | 0       | 0       | 0       | 0       | 0       | 0       | 1       |

**TABLE 9-3: UFP CC MATCH SUMMARY**

| CC State  | CC THR0 | CC THR1 | CC THR2 | CC THR3 | CC THR4 | CC THR5 | CC THR6 | CC THR7 |
|---|---------|---------|---------|---------|---------|---------|---------|---------|
| Powered cable detected.                           | 0       | 0       | 0       | 0       | 0       | 0       | 0       | 0       |
| No Connect (SNK.Open)                             | 0       | 0       | 0       | 0       | 0       | 0       | 0       | 0       |
| DFP Connected and advertising default USB current | 1       | 0       | 0       | 0       | 0       | 0       | 0       | 0       |
| DFP Connected and advertising 1.5 A               | 1       | 0       | 1       | 0       | 0       | 0       | 0       | 0       |
| DFP Connected and advertising 3.0 A               | 1       | 0       | 1       | 0       | 1       | 0       | 0       | 0       |
| DFP Connected and advertising proprietary current | 1       | 0       | 1       | 0       | 1       | 0       | 0       | 1       |

The following examples illustrate the rationale behind the expected matches in the previous tables.

### **DFP: Advertise 1.5 A and connected to powered cable. UFP not attached**

In this scenario the DFP is advertising 1.5 A and connected to a powered cable. The UFP is not attached. The vRd value measured will be less than 0.35V per specification.

In this configuration the following thresholds are enabled for matching:

- CC\_THR1 (DFP\_ACT\_1A5)
- CC\_THR5 (DFP\_UFP\_1A5)

The value programmed into [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) and [CCx Match Enable Registers \(CCx\\_MATCH\\_EN\)](#) would therefore be 0x22.

Since the vRd is less than 0.35V no threshold matches would be detected on [CCx Match Registers \(CCx\\_MATCH\)](#) or [CCx Change Status Registers \(CCx\\_CHG\\_STS\)](#).

### **DFP: Advertise 3.0 A and connected to UFP**

In this scenario the DFP is advertising 3.0 A and connected to a UFP. The vRd value measured will be > 0.85V and < 2.45V.

In this configuration the following thresholds are enabled for matching:

- CC\_THR3 (DFP\_ACT\_3A0)
- CC\_THR6 (DFP\_UFP\_3A0)

The value programmed into [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) and [CCx Match Enable Registers \(CCx\\_MATCH\\_EN\)](#) would therefore be 0x44.

In this case only CC\_THR3 would be matched. Bit 3 would be set in both [CCx Match Registers \(CCx\\_MATCH\)](#) or [CCx Change Status Registers \(CCx\\_CHG\\_STS\)](#) after the debounce interval.

### **UFP: Connected to DFP advertising 3.0 A**

In this case the UFP is connected to a DFP advertising 3.0A. The vRd value measured will be > 1.3V and < 2.04 V.

In this configuration the following thresholds are enabled for matching:

- UFP\_DFP\_DEF (CC\_THR0)
- UFP\_DFP\_1A5 (CC\_THR2)
- UFP\_DFP\_3A0 (CC\_THR4)

The value programmed into [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) and [CCx Match Enable Registers \(CCx\\_MATCH\\_EN\)](#) would therefore be 0x15.

In this case all three thresholds would be matched since the value of vRd must exceed CC\_THR4 which is 1.23V. Bits 0, 2 and 4 would be set in both [CCx Match Registers \(CCx\\_MATCH\)](#) or [CCx Change Status Registers \(CCx\\_CHG\\_STS\)](#).

## **9.2 DFP Operation**

The device implements current sources to advertise current charging capabilities on both CC pins when operating as a DFP.

When a UFP connection is established, the current driven across the CC pins creates a voltage across the UFP's Rd pull-down that can be detected by the integrated CC comparator. The voltages monitored are summarized in [Table 9-4](#). When connected to an active cable, an alternative pull-down (Ra) appears on the CC pin.

The DFP also integrates two 5V FETs for implementing the VCONN function. This is further discussed in [Section 9.8, "VCONN Operation"](#).

# UPD350

**TABLE 9-4: SOURCE DETECTION**

| CC1  | CC2  | Connection State               | CC Comparator State   | VBUS | VCONN |
|------|------|--------------------------------|---|------|-------|
| Open | Open | Nothing Attached               | Monitor both CC pins for attach                                 | Off  | Off   |
| Rd   | Open | UFP Attached                   | Monitor CC1 for detach  | On   | Off   |
| Open | Rd   | UFP Attached                   | Monitor CC2 for detach  | On   | Off   |
| Ra   | Open | Powered Cable, No UFP attached | Monitor CC2 for UFP attach.<br>Monitor CC1 for cable detach.    | Off  | Off   |
| Open | Ra   | Powered Cable, No UFP attached | Monitor CC1 for UFP attach.<br>Monitor CC2 for cable detach.    | Off  | Off   |
| Ra   | Rd   | Powered Cable, UFP attached    | Monitor CC2 for UFP detach.<br>CC1 is not monitored for detach. | On   | On    |
| Rd   | Ra   | Powered Cable, UFP attached    | Monitor CC1 for UFP detach.<br>CC2 is not monitored for detach. | On   | On    |
| Rd   | Rd   | Debug accessory mode attached  | Monitor both CC pins for detach                                 | Off  | Off   |
| Ra   | Ra   | Audio accessory mode attached. | Monitor both CC pins for detach                                 | Off  | Off   |

## 9.2.1 RP CURRENT SOURCES

In order to advertise the current charging capabilities of the device via the integrated port power controller or external power circuit, Rp current sources are used. The current source can be selected by software, using [CC1 RP Value](#) and [CC2 RP Value](#) in the [CC Control Register \(CC\\_CTL\)](#). [Table 9-5](#) summarizes the values supported by the current sources in regards to the programmed value.

**TABLE 9-5: RP CURRENT SOURCES**

| DFP Advertisement | Current source (1.7V to 5.5V) | RPx Value |
|-------------------|-------------------------------|-----------|
| Disabled          |                               | 00b       |
| Default USB Power | 80 uA +/-20%                  | 01b       |
| 1.5A @ 5V         | 180 uA +/-8%                  | 10b       |
| 3.0A @ 5V         | 330 uA +/-8%                  | 11b       |

The current source coupled with the CC pins for RP advertisement is also used for sampling the [CFG\\_SEL](#) pin. When the [CFG\\_SEL](#) pin is sampled, current is steered away from the CC pins and no RP value is advertised. See the [VBUS Comparator Control](#) field in [VBUS Control Register \(VBUS\\_CTL\)](#) for further details.

## 9.2.2 SOURCE ATTACH DETECTION

When configured as a Source, the following sections describe the steps that are taken to determine if an attach has occurred:

1. Software accesses the device via I<sup>2</sup>C/SPI which wakes the device up and enables the 48 MHz oscillator.
2. Software programs the [CC Comparator Control](#) to 00b and disables the CC debouncer.
3. Software polls [CC\\_DB\\_ACTIVE](#) until it reads back to indicate the CC debouncer is inactive.
4. Software programs the [Match Debounce Register \(MATCH\\_DEB\)](#) as required for the tPDDebounce period.
5. Software programs the [VBUS Debounce Register \(VBUS\\_DEB\)](#) as required.
6. Software programs the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) and [CCx Match Enable Registers \(CCx\\_MATCH\\_EN\)](#) as required to match the thresholds of interest.
7. Software programs the [CCx Sample Enable Registers \(CCx\\_SAMP\\_EN\)](#) and [VBUS Match Enable Register \(VBUS\\_MATCH\\_EN\)](#) to detect [VBUS VSafe0v Match \(VSAFE0V\\_THR\\_MATCH\)](#).
8. Software enables the [CC\\_MATCH\\_VLD](#), [CC1\\_MATCH\\_CHG](#) and [CC2\\_MATCH\\_CHG](#) interrupt via [CC Interrupt Enable Register \(CC\\_INT\\_EN\)](#).
9. Software enables the [VBUS\\_MATCH\\_VLD](#) interrupt via the [Power Interrupt Enable Register \(PWR\\_INT\\_EN\)](#).

**Note:** Assertion of [CC\\_MATCH\\_VLD](#) indicates that the initial CC debounce of both CC pins has completed and a valid value is available in the [CCx Match Registers \(CCx\\_MATCH\)](#). [VBUS\\_MATCH\\_VLD](#) indicates a valid value is available in the [VBUS Match Register \(VBUS\\_MATCH\)](#).

10. Software enables [IRQ\\_N](#) assertion by enabling the [CC\\_INT](#), [VBUS\\_INT](#) and [PWR\\_INT](#) in the [Interrupt Enable Register \(INT\\_EN\)](#).
11. Software programs the RP current sources via [CC1 RP Value](#) and [CC2 RP Value](#) in the [CC Control Register \(CC\\_CTL\)](#).
12. Software programs the [CC Threshold x Registers \(CC\\_THRx\)](#), if required.
13. Software programs the [CC Comparator Control](#) to sample both CC pins and enables the CC debouncer. The [CC\\_DB\\_ACTIVE](#) bit will assert soon after.
14. Software sets the [Clock Control Register \(CLK\\_CTL\)](#) to disable all clock sources except for the keep alive clock.
15. When a UFP is attached an Rd pull-down, or Ra pull-down from active cable, is connected to one of the CC pins. The CC comparator detects this.
16. Changes in state of the CC pin are recorded in the [CCx Match Registers \(CCx\\_MATCH\)](#) and [CCx Change Status Registers \(CCx\\_CHG\\_STS\)](#) after the programmed debounce period.
17. [CC\\_MATCH\\_VLD](#) and [CC1\\_MATCH\\_CHG](#) or [CC2\\_MATCH\\_CHG](#) interrupt assert and [CC\\_INT](#) asserts which in turn asserts [IRQ\\_N](#) pin. Likewise assertion of [VBUS\\_MATCH\\_VLD](#) causes [PWR\\_INT](#) to assert and also in turn asserts [IRQ\\_N](#).
18. Software implements a further debounce of the CC match for tCCDebounce in order to detect the attachment.
19. Software must verify, after [VBUS\\_MATCH\\_VLD](#) assertion, that the [VBUS Match Register \(VBUS\\_MATCH\)](#) indicates vSafe0v is on VBUS.
20. After an attachment, software programs the device to power VBUS via the integrated PPC, if required. If the power source is external to the device, software configures that source as required.
21. In the event that an active cable is attached, per the [CCx Match Registers \(CCx\\_MATCH\)](#), VCONN power may be supplied by appropriately setting [VCONN1 Control](#) or [VCONN2 Control](#) in the [VBUS Control Register \(VBUS\\_CTL\)](#).
22. [CC Communication Select](#) in the [CC Control Register \(CC\\_CTL\)](#) is set by software to appropriately connect the baseband interface to the CC pin with the Rd pull-down.
23. The DFP may attempt to communicate with attached device utilizing the PD MAC if desired.

# UPD350

---

## 9.2.3 SOURCE DETACH DETECTION

When configured as a source, the detachment of the partner UFP is determined by monitoring the appropriate CC pin (with the Rd pull-down) for a voltage exceeding DFP\_UFP\_DEF, DFP\_UFP\_1A5 or DFP\_UFP\_3A0, depending on the charging current advertised by the device.

The following describes the steps that are taken to determine if a detach has occurred when operating in companion mode:

**APPLICATION NOTE:** Software must not look at the CC detect status while a PD contract is in place, even though the Type-C spec permits doing so, in order to avoid false-disconnects in the Attached.SNK state during heavy PD message traffic.

**APPLICATION NOTE:** Software should set a 3A advertisement while it's a source and a PD contract is in place in order to avoid false-disconnects in the Attached.SRC state during heavy PD message traffic; a 1.5A advertisement (even though permitted by the Type-C spec) is not sufficient to avoid this issue due to the lower vOPEN threshold. An exception to this recommendation is when "Collision Avoidance" is implemented.

The following steps assume the CC debouncer has previously been used to detect attachment per the prior section.

1. Software accesses the device via I<sup>2</sup>C/SPI which wakes the device up and enables the 48 MHz oscillator.
2. Software programs the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) as required to enable per threshold debouncing. Typically this only involves disabling the thresholds not corresponding to vOPEN.
3. Software enables [CC1\\_MATCH\\_CHG](#) or [CC2\\_MATCH\\_CHG](#) interrupt via [CC Interrupt Enable Register \(CC\\_INT\\_EN\)](#).
4. Software enables [IRQ\\_N](#) via asserting the respective [CC\\_INT](#) bit in the [Interrupt Enable Register \(INT\\_EN\)](#).
5. Software programs the [CC Comparator Control](#) to sample appropriate CC pin.
6. The device samples the respective CC pin while operating off of 20 kHz clock.
7. Changes in state of the CC are reflected in the respective [CCx Match Registers \(CCx\\_MATCH\)](#) and [CCx Change Status Registers \(CCx\\_CHG\\_STS\)](#).
8. [CC1\\_MATCH\\_CHG](#), or [CC2\\_MATCH\\_CHG](#), interrupt asserts, [CC\\_INT](#) asserts which in turn asserts the [IRQ\\_N](#) pin.
9. Software implements a further debounce of the CC match for tCCDebounce in order to detect the detachment.
10. If VCONN is being supplied, then the VCONN FET shall be disabled in software by appropriately setting the [VCONN1 Control](#) or [VCONN2 Control](#) in the [VBUS Control Register \(VBUS\\_CTL\)](#). In this case, software must also discharge VCONN as defined in [Section 9.8.1, "VCONN Discharge Programming Model"](#).
11. Software disables the PPC which causes the internal 5V power switch to open if required. Power may have alternatively been provided by external power source.
12. Internal 100 Ohm VBUS discharge switch is closed if required.
13. Discharge switch remains closed until vSafe0V threshold is crossed.
14. If vSafe0V threshold is not crossed within [VBUS Off Register \(VBUS\\_OFF\)](#) which asserts [VBUS Discharge Error](#) interrupt and asserts [IRQ\\_N](#) pin.

**Note:** Occurrence of [VBUS Discharge Error](#) interrupt indicates a potentially catastrophic system power issue.

15. Internal discharge switch is opened.
16. The part is configured by software to detect a UFP attach. The 48 MHz oscillator is disabled. Only the keep-alive clock remains enabled.



## 9.3 UFP Operation

When operating as a UFP, the device applies an Rd pull-down on both CC lines and waits for a DFP connection from the assertion of VBUS. The CC comparator is used to determine the advertised current charger capabilities supported by the DFP. The supported Rd values are defined in [Table 9-6](#).

**TABLE 9-6: RD TERMINATION**

| Rd Implementation | Min        | Typ      | Max        |
|-------------------|------------|----------|------------|
| Rd (Trimmed)      | <i>TBD</i> | 5.1 kOhm | <i>TBD</i> |
| Rd (Dead Battery) | 4.1 kOhm   | 5.1 kOhm | 6.1 kOhm   |
| Threshold Voltage | <i>TBD</i> | 0.9 V    | <i>TBD</i> |

### 9.3.1 SINK ATTACH DETECTION

The following steps illustrate how the device may be programmed to detect an attachment when operating as a Sink. The following discussion does not cover dead-battery cases, which are described in [Section 9.7.3, "Dead Battery \(UPD350-A/UPD350-B Only\)"](#).

1. Software accesses the device via I<sup>2</sup>C/SPI which wakes the device up and enables the 48 MHz oscillator.
2. Software programs the [CC Comparator Control](#) to 00b and disables the CC debouncer.
3. Software programs the [VBUS Comparator Control](#) to 00b and disables the VBUS debouncer.
4. Software polls [CC\\_DB\\_ACTIVE](#) and [VBUS\\_DB\\_ACTIVE](#) until they read back 0b to indicate that the CC debouncer and VBUS debouncer are inactive. Software programs the [Match Debounce Register \(MATCH\\_DEB\)](#) as required for the tPDDebounce interval.
5. Software programs the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) as required to match the thresholds of interest.
6. Software programs the [CC1 Pull-Down Value](#) and [CC2 Pull-Down Value](#) in the [CC Control Register \(CC\\_CTL\)](#) to advertise trimmed Rd.
7. Software enables [CC\\_MATCH\\_VLD](#), [CC1\\_MATCH\\_CHG](#) or [CC2\\_MATCH\\_CHG](#) interrupt via the [CC Interrupt Enable Register \(CC\\_INT\\_EN\)](#).
8. Assertion of [CC\\_MATCH\\_VLD](#) indicates that the initial CC debounce of both CC pins has completed and a valid value is available in the [CCx Match Registers \(CCx\\_MATCH\)](#).
9. Software programs the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) as required to enable the respective threshold(s) debouncing.
10. Software enables [VBUS\\_INT](#) to detect VBUS by configuring the [VBUS Match Register \(VBUS\\_MATCH\)](#).
11. Software enables [VBUS\\_MATCH\\_VLD](#) by configuring the [Power Interrupt Enable Register \(PWR\\_INT\\_EN\)](#).
12. Software enables [IRQ\\_N](#) via configured respective bits, for [CC\\_INT](#), [PWR\\_INT](#) and [VBUS\\_INT](#), in the [Interrupt Enable Register \(INT\\_EN\)](#).
13. Software programs the [CC Comparator Control](#) to sample both CC pins.
14. Software programs VBUS Comparator/DAC to detect vSafe5V via the [VBUS Comparator Control](#) in the [VBUS Control Register \(VBUS\\_CTL\)](#) and setting [VBUS\\_THR0](#) and [VBUS\\_THR1](#) via the [VBUS Threshold x Registers \(VBUS\\_THRx\)](#).
15. Software turns off all clock sources with the exception of 20 KHz keep-alive clock via [Clock Control Register \(CLK\\_CTL\)](#) to save power.
16. Upon connection to a partner DFP VBUS is powered to 5V.
17. After the programmed debounce interval, the respective [CCx Change Status Registers \(CCx\\_CHG\\_STS\)](#) is updated and the respective [CC1\\_MATCH\\_CHG](#) or [CC2\\_MATCH\\_CHG](#) interrupt asserts which in turn asserts [CC\\_INT](#) which in turn asserts [IRQ\\_N](#).

**Note:** Assertion of [CC\\_MATCH\\_VLD](#) indicates that the initial CC debounce of both CC pins has completed and a valid value is available in the [CCx Match Registers \(CCx\\_MATCH\)](#).

18. VBUS is detected by the [VBUS\\_DET](#) comparator and debounced for the period defined by the [VBUS Debounce Register \(VBUS\\_DEB\)](#). The [VBUS\\_INT](#) interrupt asserts which in turn asserts [IRQ\\_N](#).

**Note:** Assertion of [VBUS\\_MATCH\\_VLD](#) indicates that the initial CC debounce of both CC pins has completed and a valid value is available in the [VBUS Match Register \(VBUS\\_MATCH\)](#).

19. Software must debounce the CC match for tCCDebounce and VBUS for the [PD Debounce Register \(PD\\_DEB\)](#)

# UPD350

in order to detect the attach condition.

20. After attachment, software configures [CC Communication Select](#) in the [CC Control Register \(CC\\_CTL\)](#) to appropriately connect the baseband interface to the CC with the Rp pull-up if PD communication is desired.
21. DFP may communicate with the device.

## 9.3.2 SINK DETACH DETECTION

The DFP detach is detected by the removal of VBUS. The VBUS comparator must always be enabled for the UFP to detect this condition.

1. Software programs the [VBUS Comparator Control](#) to 00b and disables the VBUS debouncer.
2. Software polls [VBUS\\_DB\\_ACTIVE](#) until it reads back 0b to indicate that the VBUS debouncer is inactive.
3. Software programs the [VBUS Debounce Register \(VBUS\\_DEB\)](#) as required.
4. Software programs the [CCx Sample Enable Registers \(CCx\\_SAMP\\_EN\)](#) as required to enable the respective threshold(s) debouncing.
5. Software enables [VBUS\\_INT](#), which is then used to detect VBUS, via the [VBUS Match Enable Register \(VBUS\\_-MATCH\\_EN\)](#).
6. Software enables [IRQ\\_N](#) by configuring the respective bit for [VBUS\\_INT](#) in the [Interrupt Enable Register \(INT\\_EN\)](#).

**Note:** [VBUS\\_THR0](#) and [VBUS\\_THR1](#) are adjusted via the [VBUS Threshold x Registers \(VBUS\\_THRx\)](#) to vSafe5V, if required.

7. Software enables the VBUS Comparator/DAC via the [VBUS Comparator Control](#) bit in the [VBUS Control Register \(VBUS\\_CTL\)](#).
8. Software turns off all clock sources with the exception of 20 KHz keep-alive clock via the [Clock Control Register \(CLK\\_CTL\)](#) to save power.
9. DFP removes VBUS.
10. After the VBUS debounce period, the [VBUS Match Register \(VBUS\\_MATCH\)](#) and [VBUS Change Status Register \(VBUS\\_CHG\\_STS\)](#) are updated. The [VBUS\\_INT](#) interrupt asserts which in turn asserts [IRQ\\_N](#).
11. Software continues to monitor VBUS to determine if it stays below vSafe5V for a duration of tPDDebounce.

## 9.4 DRP Operation (Legacy)

This section describes a usage of the device for implementing a DRP attach. In this configuration, software utilizes the device to alternate between a Source and Sink advertisement with an interval of tDRP per the USB Type-C<sup>®</sup> Specification.

The steps for initially configuring the device to advertise Source capabilities follows the steps defined in [Section 9.2.2, "Source Attach Detection"](#). Software must also implement the tDRP timer. If a Sink is not detected within this time, software shall change the device's role to Sink and again attempt an attach detection.

1. Software accesses the device via I<sup>2</sup>C/SPI which wakes the device up and enables the 48 MHz oscillator.
2. Software programs the [CC Comparator Control](#) to 00b and disables the CC debouncer.
3. Software polls [CC\\_DB\\_ACTIVE](#) until it reads back to indicate the CC debouncer is inactive.
4. Software programs the [Match Debounce Register \(MATCH\\_DEB\)](#) as required for the tPDDebounce period.
5. Software programs the [CC Threshold x Registers \(CC\\_THRx\)](#) if required.
6. Software programs the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) and [CCx Match Enable Registers \(CCx\\_MATCH\\_EN\)](#) as required to match the thresholds of interest.
7. Software enables the [CC\\_MATCH\\_VLD](#), [CC1\\_MATCH\\_CHG](#) and [CC2\\_MATCH\\_CHG](#) interrupts via the [CC Interrupt Enable Register \(CC\\_INT\\_EN\)](#).
8. Software enables [IRQ\\_N](#) assertion by enabling the [CC\\_INT](#) in the [Interrupt Enable Register \(INT\\_EN\)](#).
9. Software programs the RP current sources via the [CC1 RP Value](#) and [CC2 RP Value](#) in the [CC Control Register \(CC\\_CTL\)](#).
10. Software programs the [CC Comparator Control](#) to sample both CC pins and enable the CC debouncer. The [CC\\_DB\\_ACTIVE](#) bit will assert soon after.
11. Software sets the [Clock Control Register \(CLK\\_CTL\)](#) to disable all clock sources except for the keep alive clock.

**Note:** Assertion of [CC\\_MATCH\\_VLD](#) indicates that the initial CC debounce of both CC pins has completed and a valid value is available in the [CCx Match Registers \(CCx\\_MATCH\)](#).

If after time tDRP an attachment is not detected, software shall configure the device to be a Sink and attempt to detect the presence of a Source. This is similar to the steps defined in [Section 9.3.1, "Sink Attach Detection"](#).

1. Software accesses the device via I<sup>2</sup>C/SPI which wakes the device up and enables the 48 MHz oscillator
2. Software programs the [CC Comparator Control](#) to 00b and disables the CC debouncer.
3. Software polls [CC\\_DB\\_ACTIVE](#) until it reads back 0b to indicate that the CC debouncer is inactive.
4. Software programs the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) as required to match the thresholds of interest.
5. Software programs detection for vSafe5V by setting [VBUS\\_THR0](#) and [VBUS\\_THR1](#) in the [VBUS Threshold x Registers \(VBUS\\_THRx\)](#). The [CCx Sample Enable Registers \(CCx\\_SAMP\\_EN\)](#) is programmed to debounce these thresholds.
6. Software programs [CC1 Pull-Down Value](#) and [CC2 Pull-Down Value](#) in the [CC Control Register \(CC\\_CTL\)](#) to advertise trimmed Rd.
7. Software enables the [CC\\_MATCH\\_VLD](#), [CC1\\_MATCH\\_CHG](#) or [CC2\\_MATCH\\_CHG](#) interrupts via the [CC Interrupt Enable Register \(CC\\_INT\\_EN\)](#).
8. Software enables [VBUS\\_MATCH\\_VLD](#) by configuring the [Power Interrupt Enable Register \(PWR\\_INT\\_EN\)](#).
9. Software enables [IRQ\\_N](#) via the configured respective bits, for [CC\\_INT](#), [PWR\\_INT](#) and [VBUS\\_INT](#), in the [Interrupt Enable Register \(INT\\_EN\)](#).
10. Software programs the [CC Comparator Control](#) to sample both CC pins.
11. Software turns off all clock sources with the exception of 20 KHz keep-alive clock via the [Clock Control Register \(CLK\\_CTL\)](#) to save power.

If after time tDRP an attachment is not detected, software shall configure the device to be a Source and attempt to detect the presence of a Sink.

**Note:** Assertion of [CC\\_MATCH\\_VLD](#) indicates that the initial CC debounce of both CC pins has completed and a valid value is available in [CCx Match Registers \(CCx\\_MATCH\)](#).

**Note:** Assertion of [VBUS\\_MATCH\\_VLD](#) indicates that the initial CC debounce of both CC pins has completed and a valid value is available in [VBUS Match Register \(VBUS\\_MATCH\)](#).

## 9.5 DRP Offload

DRP offload enables the device to manage the DRP toggle. This is beneficial as it allows the host CPU to remain in a low power state until a connection is detected.

DRP offload toggles between Source and Sink advertisement by alternating between enabling Rp current sources and Rd pull-downs for a period of tDRP (DRP Time Register). The duty cycle between Source and Sink advertisement is determined by the DRP Duty Cycle Register. The DRP Time Register may be written by firmware or generated automatically via a pseudo random number generator. The latter approach should be used to reduce the probability of collisions when connecting. It is selectable whether the DRP cycle shall first advertise UFP or DFP via DRP Initial State (DRP\_INIT) bit in DRP Control Register.

A connection is detected after a successful debounce for a period defined by the Match Debounce Register. VBUS is checked to be below vSafe0v for the DFP case. This results in [IRQ\\_N](#) assertion and automatic disablement of the DRP toggle. Firmware must further debounce for the period tPDDebounce before determining if a valid match is present. If a match has not occurred, firmware shall enable DRP again.

A pseudo random number generator, implemented via a LFSR, is utilized to generate the DRP period. The 16-bit seed is defined by DRP LFSR Seed Register. The LFSR operates off of the 20 KHz clock and updates every 100 us when enabled. LFSR Enable (LFSR\_EN) in DRP Control Register is set.

Hardware limits the total DRP period to be between 50 ms and 100 ms in order to comply with the USB Type-C<sup>®</sup> specification.

## 9.6 Collision Avoidance

An alternative mode of operation is required to enable the CC detection circuit to facilitate software implementation of collision detection which was incorporated into version 3.0 of the USB PD Specification.

In order to avoid message collisions due to asynchronous Messaging (AMS) sent from the Sink, the Source sets Rp to SinkTxOk (3A@5V) to indicate to the Sink that it is OK to initiate an AMS. When the Source wishes to initiate an AMS it sets Rp to SinkTxNG (1.5A@5V). When the Sink detects that Rp is set to SinkTxOk it may initiate an AMS. When the Sink detects that Rp is set to SinkTxNG it shall not initiate an AMS and shall only send Messages that are part of an AMS the Source has initiated.

When operating as a Sink, a mechanism is required for quickly determining whether the Source is advertising SinkTxNG or SinkTxOK on Rp.

A collision avoidance mechanism exists to enable software to instruct the device to sample only a single threshold on a single CC pin. This results in a cycle through both thresholds taking only 100 us, making it easier for software to meet the timing constraints mandated by SinkTxOk in the specification. Two [CCx Sample Enable Registers \(CCx\\_SAMP\\_EN\)](#) are provided to enable software to specify which subsets of the CC thresholds shall be sampled via setting the respective bit. In the case of collision avoidance, only the threshold corresponding to SinkTxOK shall be set on the connected CC pin. This corresponds to UFP\_DFP\_3A0 (CC\_THR4). The [CC Comparator Control](#) field in [CC Control Register \(CC\\_CTL\)](#) shall be set to the CC pin utilized for PD communication.

In order to prevent false positive detection of SinkTXOK when a PD packet is being transmitted or received, a debounce value in the order to 7 ms would need to be programmed into [Match Debounce Register \(MATCH\\_DEB\)](#). Such a large value would impair the ability of software, when operating as Sink, to detect SinkTXOK and transmit a PD message within the time defined in the PD specification by SinkTxTime. The [BLK\\_PD\\_MSG](#) bit in [CC Hardware Control Register \(CC\\_HW\\_CTL\)](#) has been incorporated to handle the above scenario and enable software to program a sub millisecond debounce value. A minimum value of 100 us shall be used for the [Match Debounce Register \(MATCH\\_DEB\)](#) when using this mode of operation.

The below sequence illustrates the steps to enable Collision Avoidance for a Sink. This sequence is used after a connection and PD contract has been established.

**Note:** The units of the [Match Debounce Register \(MATCH\\_DEB\)](#) is determined by [MATCH\\_DB\\_UNITS](#) bit in [CC Hardware Control Register \(CC\\_HW\\_CTL\)](#). When this bit is clear, the units are 1.6 ms. When this bit is set the units are 100 us.

1. Sink establishes connection with Source and a PD contract is negotiated. Sink wants to transmit AMS to Source.
2. Via the [CC Hardware Control Register \(CC\\_HW\\_CTL\)](#), the [MATCH\\_DB\\_UNITS](#) is set to 1b to utilize 100 us units for the CC match debouncer. The [BLK\\_PD\\_MSG](#) bit is set to filter PD traffic from the debouncer.
3. Software sets the [Match Debounce Register \(MATCH\\_DEB\)](#) to 400 us by writing four into the register.
4. Software configures CC\_THR4 to enable interrupt assertion via the [CCx Match Enable Registers \(CCx\\_MATCH\\_EN\)](#).
5. Software configures CC\_THR4 for sampling via the [CCx Sample Enable Registers \(CCx\\_SAMP\\_EN\)](#).
6. Via the [CC Control Register \(CC\\_CTL\)](#), the [CC Comparator Control](#) selects the CC pin connected to the Source's Rp.
7. Software waits for indication that Source's Rp is SinkTxOK via a match detected on CC\_THR4.
8. Software initiates transmission of PD message to Source.

**APPLICATION NOTE:** Software must guarantee that a sufficient gap exists in between consecutively transmitted PD messages to enable the source RP value to settle on the CC line. Studies by USB-IF members have showed the settling time may take in excess of 40 us.

## 9.7 Fast Role Swap (FRS)

This feature is used to detect when a partner source has lost power. Upon detection of FRS signaling, the “Old Sink” transitions to be a Source and begins supplying VBUS.

When operating as a Sink, the FRS mode of operation enables detection of FRS signaling. Detection results in **IRQ\_N** assertion and this event may also be mapped as a PIO override source. When operating as a Source, upon detection of loss of power, the device will transmit FRS signaling. This is initiated by either assertion of a selected PIO or a CSR write.

The following FRS related features are supported:

- Ability to detect reception of FRS signaling
- High bandwidth and current boost mode for CC comparator to increase sampling frequency
- Interrupt, and PIO, assertion upon FRS detection
- PIO override support for FRS detection as a source
- Ability to initiate FRS signaling via GPIO assertion or register write.
- Control 5 Ohm (Rsw) pull-down resistor

### 9.7.1 FRS SINK OPERATION

When operating as a Sink, the device is configured to detect FRS signaling by setting FRS Detect Enable (FRS\_DET\_EN) in FRS Control Register. The CC detection logic is programmed to detect three thresholds (SinkTxOK, SinkTXNG, FRSWAP) and samples each threshold in round robin fashion. The sampling rate is determined by CC Sample Clock Register.

When a match is detected on FRSWAP threshold, the CC detection logic will “park” at this threshold and continue monitoring the output of the comparator. While “parked” the output of the CC comparator will be sampled at an increased rate of 12 MHz. This higher sampling rate will prevent PD messages from inadvertently looking like FRS signaling which will happen on occasion when the sampling rate is similar or slower than the ~270 kbps rate of PD messages.

It will continue debouncing for the amount of time specified in FRS CC Debounce Register. The FRSWAP threshold is indicated by FRS Threshold Select Register.

If the debounce is successful, then the FRS\_RCV\_STS interrupt is asserted and the CC detection logic resumes sampling all enabled thresholds. If the FRS debounce fails, the CC detection logic resumes sampling all enabled thresholds.

In this mode of operation the CC Comparator operates at a faster rate in order to minimize the FRS detection latency. This is enabled by placing this the comparator into a high bandwidth mode. The CC High Bandwidth Mode Enable (CC\_DET\_HBW\_EN) in CC Hardware Control Register must be set.

After detecting the FRS signaling, the “old Sink” must start supplying vSafe5V at USB Type-C® current VBUS no later than tSrcFRSwp (150 us) after VBUS has dropped below vSafe5V. This must be accomplished via circuitry external to the device.

**Note:** The upper threshold used for vSafe5V should be used for determining when VBUS has dropped below vSafe5v to help meet tSrcFRSwp requirement.

**Note:** Matching of a VBUS threshold may be selected as a source to a PIO override. Additionally, VBUS threshold match ANDed with FRS signal detect may also be used as a PIO override source.

### 9.7.2 FRS SOURCE OPERATION

The initial Source shall signal a FRS request by driving the CC pin to ground with a resistance of less than 5 Ohms for a period defined by FRS Transmission Length Register. The FRS request signaling is initiated by either a CSR write or GPIO assertion.

The former case is implemented by setting the FRS Request (FRS\_REQ\_EN) bit in FRS Control Register. This bit self clears after the FRS request is transmitted. For the latter case, the PIO is selected by the FRS Request PIO (FRS\_REQ\_PIO) field in FRS Control Register.

Transmission of FRS signaling will take precedence over PD MAC TX communication. The FRS PD resistor is enabled in tandem on the CC pin determined by FRS CC Select (FRS\_CC\_SEL) in FRS Control Register. This configuration remains until FRS transmission has completed.

# UPD350

## 9.7.3 DEAD BATTERY (UPD350-A/UPD350-B Only)

Two variations of the Rd resistor are implemented as detailed in Table 9-6: Rd (Dead Battery) and Rd (Trimmed). The CC1\_DB\_EN and CC2\_DB\_EN pins exist to determine the operation of the CC pins in dead battery conditions and are to be connected externally via the PCB to the respective CC pin. The CC pins are configured to present either Hi-Z or an untrimmed Rd pull-down resistance when connected to a DFP advertising a pull-up resistance.

Figure 9-1 illustrates the configuration for supporting dead battery cases via hair pinning CCx\_DB\_EN and CCx together on the PCB. The UFP pull-up activates the FET in series with RD\_DB and enables the untrimmed dead battery pull-down.

**FIGURE 9-1: CC RD (DEAD BATTERY)**


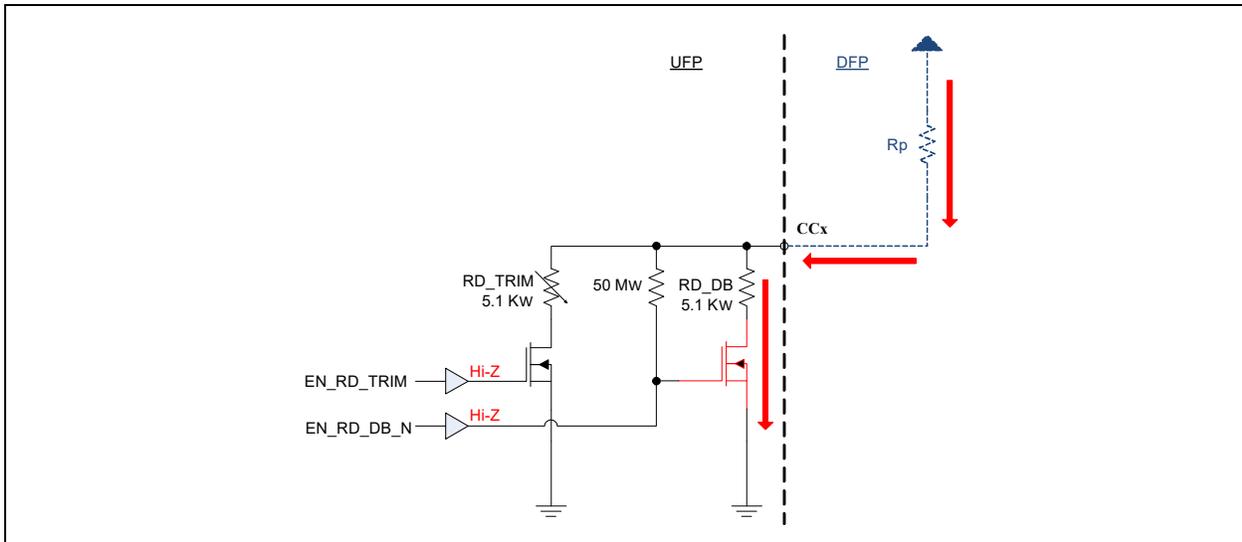


Figure 9-2 illustrates operation after the UFP has been powered over VBUS by the DFP. After the device is powered, EN\_RD\_DB asserts by default to keep the RD\_DB pull-down activated.

Upon powering the host CPU, software simultaneously deasserts EN\_RD\_DB and asserts EN\_RD\_TRIM. Going forward the device presents RD\_TRIM.

**FIGURE 9-2: CC RD (TRIM)**

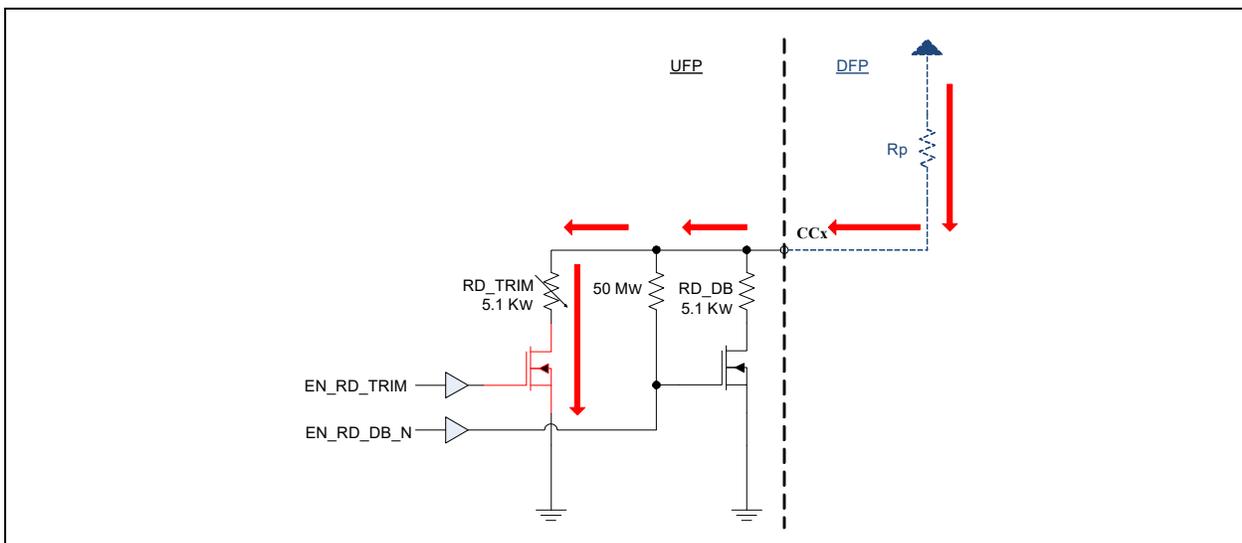

The Rd resistor presented, trimmed or untrimmed, is controlled by the [CC1 Pull-Down Value](#) and [CC2 Pull-Down Value](#) in the [CC Control Register \(CC\\_CTL\)](#). These register fields serve the basis for the EN\_RD\_TRIM and EN\_RD\_DB\_N control signals depicted.

## 9.8 VCONN Operation

VCONN is a 5V supply that is used to power circuitry in the USB Type-C® plug, which is required to implement Electronically Marked Cables. By default, the DFP always sources VCONN when connected to an active cable. However, this may be changed by software by using PD VCONN\_SWAP.

The VCONN FETs are enabled/disabled by software via the VCONN1 Control [VCONN1 Control](#) and [VCONN2 Control](#) control bits in the [CC Control Register \(CC\\_CTL\)](#).

**APPLICATION NOTE:** In standalone DFP mode (UPD350-A/UPD350-C only), the device independently enables/disables the VCONN FETs. This mode is intended for configurations where no host CPU is available or the CPU is not capable of managing VCONN. The Standalone Operation [Standalone Operation](#) bit in the CC Hardware Control Register ([CC\\_HW\\_CTL](#)) [CC Hardware Control Register \(CC\\_HW\\_CTL\)](#) enables this mode of operation. It is not envisioned to ever enable both FETs simultaneously.

VCONN is monitored for an over current condition via an internal monitoring circuit. A VCONN over current condition is recognized when the event persists for a time longer than specified. in the [VCONN OCS and Back-Drive Debounce Register \(VCONN\\_DEB\)](#). VCONN OCS monitoring is enabled via the [VCONN OCS Enable](#) bit in the [VBUS Control Register \(VBUS\\_CTL\)](#). When the [VCONN Discharge Error \(VCONN\\_DISCH\\_ERR\)](#) interrupt in the [Power Interrupt Status Register \(PWR\\_INT\\_STS\)](#) asserts. The device may be configured to automatically disable the VCONN FET upon detection of a [CC1 Back-Drive Error/CC2 Back-Drive Error](#) or [VCONN Discharge Error \(VCONN\\_DISCH\\_ERR\)](#). In the event of the detection of a debounced over-current VCONN event, the enabled VCONN FET will be disabled. The OCS event also results in an automatic disablement of the respective [VCONN1 Control](#) and [VCONN2 Control](#) control bits in the [CC Control Register \(CC\\_CTL\)](#).

### 9.8.1 VCONN DISCHARGE PROGRAMMING MODEL

Software may use the following programming model for implementing VCONN discharge when the device is operating as a DFP and a UFP disconnect has been detected..

This section does not apply to standalone DFP operation.

1. Software determines the attached UFP has disconnected and disconnects the VCONN FET.
2. Software disables monitoring the CC thresholds corresponding to the attached CC pin.
3. The Rp current sources are disabled on both CC pins via [CC1 RP Value](#) or [CC2 RP Value](#).
4. The Ra pull-down on the CC pin previously sourcing VCONN is selected via [CC1 Pull-Down Value](#) or [CC2 Pull-Down Value](#). This initiates the VCONN discharge.
5. Software sets the CC threshold 0 to 150 mv (41d), via the [CC Threshold x Registers \(CC\\_THRx\)](#), which is the VCONN discharge threshold.
6. Software programs 01h into the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#).
7. Software programs 01h into the [CCx Match Enable Registers \(CCx\\_MATCH\\_EN\)](#).
8. Software enables [CC1\\_MATCH\\_CHG](#) or [CC2\\_MATCH\\_CHG](#) interrupt via the [CC Interrupt Enable Register \(CC\\_INT\\_EN\)](#).
9. Via the [CC Control Register \(CC\\_CTL\)](#), the [CC Comparator Control](#) selects the CC pin that was sourcing VCONN.
10. Changes in state of the CC pin are recorded in [CCx Match Registers \(CCx\\_MATCH\)](#) and [CCx Change Status Registers \(CCx\\_CHG\\_STS\)](#) after the programmed debounce period.
11. After VCONN discharges below 150mv, [IRQ\\_N](#) asserts which indicates VCONN has been discharged. [IRQ\\_N](#) assertion of [CC\\_MATCH\\_VLD](#) with no threshold matches is also indicative of a complete discharge.
12. After the discharge has been completed, the device is in the Unattached.SRC state (Type-C Source FSM).

**Note:** Software should implement a timer to indicate a VCONN discharge error. This may be implemented using the [General Purpose Timer](#). While there is no specific requirement in the Type-C specification for a maximum discharge time

**Note:** After the UFP disconnect is detected, firmware must disconnect the VCONN supply within tVconnOff (35 ms) per release 1.1 of the Type-C specification.

# UPD350


## 9.9 VBUS Detection

The device implements a comparator for determining when VBUS is within a programmed range, vSafe5V, or vSafe0V. VBUS is divided down externally via a 1:9 resistor divider to generate VBUS\_DET. VBUS\_DET is compared with an 8-bit threshold generated by an integrated DAC. The comparator is also shared by the CFG\_SEL pin which is sampled automatically after a system reset

Figure 9-3 illustrates the VBUS\_DET circuit. In a typical use case, VBUS\_DET thresholds are programmed to track the following voltage ranges as defined in Table 9-7.

**Note:** Table 9-7 illustrates the values of VBUS\_DET utilizing +/-1% accurate resistors where R1 is 10K Ohms and R2 is 90 kOhms.

**FIGURE 9-3: VBUS\_DET COMPARATOR**

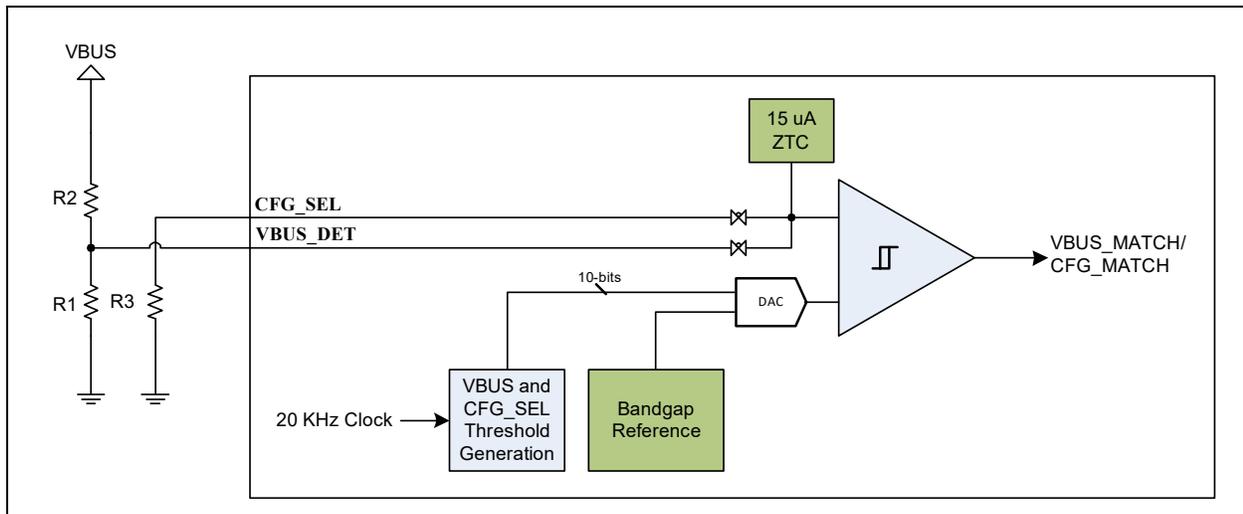

For a DFP, the VBUS comparator is useful to detect when VBUS is within the desired range per PD negotiations. This is the case when VBUS is generated by a source external to the device.

For a UFP, the VBUS comparator is required to determine when a DFP is attached or detached. It may also use the comparator to determine when VBUS is within a new voltage range negotiated via PD.

**TABLE 9-7: VBUS DETECTION THRESHOLDS**

| VBUS | Range | VBUS_DET | Comments |
|------|-------|----------|----------|
| 20   | 21.5  | 2.11     |          |
|      | 18.5  | 1.82     |          |
| 12   | 13.1  | 1.29     |          |
|      | 10.9  | 1.07     |          |
| 8    | 8.9   | 0.88     |          |
|      | 7.1   | 0.69     |          |
| 5    | 5.5   | 0.51     | vSafe5V  |
|      | 3.67  | 0.33     |          |
| 0.68 | 0.68  | 0.068    | vSafe0V  |

If supported, the ranges 8V, 12V and 20V may be programmed in VBUS Threshold 2 and VBUS Threshold 3 registers (see [VBUS Threshold x Registers \(VBUS\\_THRx\)](#)). Likewise 5V range, vSafe5v, can be programmed in VBUS Threshold 0 and VBUS Threshold 1 registers.



The threshold for vSafe0V is programmable via the [VBUS VSafe0V Threshold Register \(VSAFE0V\\_THR\)](#).

**VBUS\_DET** monitoring logic operates off of the 20 KHz oscillator which cycles through each threshold. Including vSafe0v, a total of five values are compared.

Results of the comparison adjust the respective bits of the [VBUS Match Register \(VBUS\\_MATCH\)](#) and [VBUS Change Status Register \(VBUS\\_CHG\\_STS\)](#) after a debounce period defined in [VBUS Debounce Register \(VBUS\\_DEB\)](#).

The [VBUS Match Register \(VBUS\\_MATCH\)](#) indicates when the value on **VBUS\_DET** is higher than the corresponding programmed threshold and can therefore be used to determine if **VBUS** is in the desired range.

A change in the state of the [VBUS Match Register \(VBUS\\_MATCH\)](#) may trigger assertion of the **IRQ\_N** pin if appropriately configured in the [Power Interrupt Status Register \(PWR\\_INT\\_STS\)](#).

The [VBUS Debounce Clear Enable Register \(VBUS\\_DBCLR\\_EN\)](#) is functionality equivalent to the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#), but it applies to the **VBUS** debouncer. Software programs the [VBUS Debounce Clear Enable Register \(VBUS\\_DBCLR\\_EN\)](#) as required to enable debouncing the thresholds of interest.

The following example illustrates the programming model when it is desired to move **VBUS** from 5V to 20V after PD contract negotiation. Initially the **VBUS** de-bouncer is enabled and VSafe5v, **VBUS\_THR0** and **VBUS\_THR1**, is sampled. **VBUS\_THR2** and **VBUS\_THR3** have an initial value in excess of 5V such as 25V. See [Section 9.13.24](#) for details on the **VBUS\_THRx** registers.

1. Software programs the [VBUS Match Enable Register \(VBUS\\_MATCH\\_EN\)](#) to include new thresholds (**VBUS\_THR2** and **VBUS\_THR3**).
2. Software programs the [VBUS Debounce Clear Enable Register \(VBUS\\_DBCLR\\_EN\)](#) as required to enable per threshold debouncing.
3. Software programs new thresholds for 20V in **VBUS\_THR2** and **VBUS\_THR3** (e.g. 18.5V and 21.5V). This operation restarts the **VBUS** debouncer.
4. Software waits until **IRQ\_N** asserts.
5. Software confirms the [VBUS\\_MATCH\\_VLD](#) bit is set.
6. Software reads the [VBUS Match Register \(VBUS\\_MATCH\)](#) and [VBUS Change Status Register \(VBUS\\_CHG\\_STS\)](#).
7. If [VBUS Change Status Register \(VBUS\\_CHG\\_STS\)](#) is non-zero, software clears the status bits.

|  |
|--|
| <b>Note:</b> If no bits are set in the <a href="#">VBUS Match Register (VBUS_MATCH)</a> , after <a href="#">VBUS_MATCH_VLD</a> asserts, then the voltage observed on <b>VBUS</b> is less than VSafe0V. |
|--|

8. Future changes in **VBUS** results in **IRQ\_N** asserting with [VBUS Match Register \(VBUS\\_MATCH\)](#) and [VBUS Change Status Register \(VBUS\\_CHG\\_STS\)](#) being appropriately updated.

# UPD350

## 9.9.1 CONFIGURATION SELECTION

The CFG\_SEL pin shares the comparator with VBUS as shown in Figure 9-3. The CFG\_SEL pin is connected to a resistor divider, typically pulled up to VDDIO. After a system level reset (POR, RESET\_N, Software Reset), the CFG\_SEL pin is automatically sampled to configure the device. The internal CFG\_SEL\_MATCH register CFG\_SELx Match Registers (CFG\_SELx\_MATCH) is updated automatically and the device configures itself accordingly if standalone mode is detected. The various resistor settings for the CFG\_SEL pin are detailed in Table 9-8.

**Note:** The CFG\_SEL pin is used to determine the default I<sup>2</sup>C slave address and operating mode in the UPD350-A / UPD350-C. For the UPD350-B / UPD350-D, this pin determines the mode in which the part operates (companion or standalone UFP) and can be used for customer specific purposes to provide a discrete value (0-15) based upon the attached resistor value.

**Note:** For additional information on device resets, refer to Section 7.7, "Reset Operation," on page 33.

**TABLE 9-8: CONFIGURATION SELECT (CFG\_SEL) I<sup>2</sup>C ADDRESS SETTINGS (UPD350-A/UPD350-C ONLY)**

| Resistor (+/-1%) | Description  | CFG_SEL1_MATCH Register |
|------------------|--|-------------------------|
| GND              | Companion Mode<br>I <sup>2</sup> C Slave Address = 1011_111      | 0000h                   |
| 0.475 K          | Companion Mode<br>I <sup>2</sup> C Slave Address = 1011_110      | 0001h                   |
| 0.953 K          | Companion Mode<br>I <sup>2</sup> C Slave Address = 1011_101      | 0003h                   |
| 1.43 K           | Companion Mode<br>I <sup>2</sup> C Slave Address = 1011_100      | 0007h                   |
| 1.87 K           | Companion Mode<br>I <sup>2</sup> C Slave Address = 1101_011      | 000Fh                   |
| 2.37 K           | Companion Mode<br>I <sup>2</sup> C Slave Address = 1101_010      | 001Fh                   |
| 2.87 K           | Companion Mode<br>I <sup>2</sup> C Slave Address = 1101_001      | 003Fh                   |
| 3.32 K           | Companion Mode<br>I <sup>2</sup> C Slave Address = 1101_000      | 007Fh                   |
| 3.83 K           | Standalone UFP Mode<br>I <sup>2</sup> C Slave Address = 1011_111 | 00FFh                   |
| 4.22 K           | Standalone UFP Mode<br>I <sup>2</sup> C Slave Address = 1011_110 | 01FFh                   |
| 4.75 K           | Standalone UFP Mode<br>I <sup>2</sup> C Slave Address = 1011_101 | 03FFh                   |
| 5.23 K           | Standalone UFP Mode<br>I <sup>2</sup> C Slave Address = 1011_100 | 07FFh                   |
| 5.62 K           | Standalone UFP Mode<br>I <sup>2</sup> C Slave Address = 1101_011 | 0FFFh                   |
| 6.19 K           | Standalone DFP Mode<br>I <sup>2</sup> C Slave Address = 1101_010 | 1FFFh                   |
| 6.65 K           | Standalone DFP Mode<br>I <sup>2</sup> C Slave Address = 1101_001 | 3FFFh                   |
| 7.15 K           | Standalone DFP Mode<br>I <sup>2</sup> C Slave Address = 1101_000 | 7FFFh                   |
| >7.15 K          | Standalone DFP Mode<br>I <sup>2</sup> C Slave Address = 1001_000 | FFFFh                   |

## 9.10 Back-Drive Detection

Back-drive detection is implemented on both CC pins, which prevents backwards current flow. The back-drive protection circuit is always operational and triggers when  $VCCx > VS$ .

Detection of the back-drive condition causes the CC1 or CC2 Back-Drive Error interrupt to assert.

Hardware supports automatically disabling a VCONN FET on a CC pin in which back-drive was detected after a specified debounce period.

## 9.11 Standalone DFP (*UPD350-A/UPD350-C Only*)

### 9.11.1 OVERVIEW

The device supports standalone DFP operation in which no CPU is available to configure the device. A key application for this mode is a USB Type-C DFP companion for the Microchip USB58xx/USB59xx family of USB Hubs.

### 9.11.2 CONFIGURATION

This mode is entered by the appropriate setting of the CFG\_SEL pin. The current charge advertised and supplied is defined by the PWR\_CAP0 and PWR\_CAP1 pins. The device auto configures itself after a system level reset event.

**APPLICATION NOTE:** The [Standalone Operation](#) field in [CC Hardware Control Register \(CC\\_HW\\_CTL\)](#) may be used to disable standalone operation.

## 9.12 Standalone UFP (*UPD350-A/UPD350-C Only*)

### 9.12.1 OVERVIEW

The device supports standalone UFP operation in which no CPU is available to configure the device. A key application for this mode is a USB Type-C<sup>®</sup> UFP companion for the Microchip USB58xx/USB59xx family of USB Hubs.

### 9.12.2 CONFIGURATION

This mode is entered by the appropriate setting of the CFG\_SEL pin. The device auto-configures itself after a system level reset event.

**APPLICATION NOTE:** The [Standalone Operation](#) field in the [CC Hardware Control Register \(CC\\_HW\\_CTL\)](#) may be used to disable standalone operation.

# UPD350

## 9.13 Cable Orientation and Detection Registers

This section details the cable plug orientation and detection registers. For an overview of the entire device register map, refer to [Section 4.0, "Register Map,"](#) on page 18.

**TABLE 9-9: SYSTEM CONTROL AND STATUS REGISTERS MAP**

| Address       | Register Name (Symbol)                                 |
|---------------|--|
| 0800h         | CC Hardware Control Register (CC_HW_CTL)               |
| 0803h         | CC Interrupt Status Register (CC_INT_STS)              |
| 0804h         | CCx Change Status Registers (CCx_CHG_STS) x=1          |
| 0805h         | CCx Change Status Registers (CCx_CHG_STS) x=2          |
| 0806h         | CCx Match Registers (CCx_MATCH) x=1                    |
| 0807h         | CCx Match Registers (CCx_MATCH) x=2                    |
| 0808h         | VBUS Match Register (VBUS_MATCH)                       |
| 0809h         | VBUS Change Status Register (VBUS_CHG_STS)             |
| 080Ah         | Power Interrupt Status Register (PWR_INT_STS)          |
| 080Bh         | Debug Interrupt Status Register (DBG_INT_STS)          |
| 080Ch – 0810h | Reserved for future expansion                          |
| 0811h         | CC Interrupt Enable Register (CC_INT_EN)               |
| 0812h         | CCx Match Enable Registers (CCx_MATCH_EN) x=1          |
| 0813h         | CCx Match Enable Registers (CCx_MATCH_EN) x=2          |
| 0814h         | VBUS Match Enable Register (VBUS_MATCH_EN)             |
| 0815h         | Power Interrupt Enable Register (PWR_INT_EN)           |
| 0816h         | Debug Interrupt Enable Register (DBG_INT_EN)           |
| 0817h         | Match Debounce Register (MATCH_DEB)                    |
| 0818h         | PD Debounce Register (PD_DEB)                          |
| 0819h         | VCONN OCS and Back-Drive Debounce Register (VCONN_DEB) |
| 081Ah         | CCx Debounce Clear Enable Registers (CCx_DBCLR_EN) x=1 |
| 081Bh         | CCx Debounce Clear Enable Registers (CCx_DBCLR_EN) x=2 |
| 081Ch         | VBUS Debounce Clear Enable Register (VBUS_DBCLR_EN)    |
| 081Dh         | CCx Sample Enable Registers (CCx_SAMP_EN) x=1          |
| 081Eh         | CCx Sample Enable Registers (CCx_SAMP_EN) x=2          |
| 081Fh         | Reserved for future expansion                          |
| 0820h         | CC Control Register (CC_CTL)                           |
| 0822h         | CC Threshold x Registers (CC_THRx) x=0                 |
| 0824h         | CC Threshold x Registers (CC_THRx) x=1                 |
| 0826h         | CC Threshold x Registers (CC_THRx) x=2                 |
| 0828h         | CC Threshold x Registers (CC_THRx) x=3                 |
| 082Ah         | CC Threshold x Registers (CC_THRx) x=4                 |
| 082Ch         | CC Threshold x Registers (CC_THRx) x=5                 |
| 082Eh         | CC Threshold x Registers (CC_THRx) x=6                 |
| 0830h         | CC Threshold x Registers (CC_THRx) x=7                 |
| 0832h         | CC Debounce Register (CC_DEB)                          |
| 0834h – 083Fh | Reserved for future expansion                          |
| 0840h         | VBUS Control Register (VBUS_CTL)                       |
| 0842h         | VBUS Threshold x Registers (VBUS_THRx) x=0             |
| 0844h         | VBUS Threshold x Registers (VBUS_THRx) x=1             |
| 0846h         | VBUS Threshold x Registers (VBUS_THRx) x=2             |

**TABLE 9-9: SYSTEM CONTROL AND STATUS REGISTERS MAP (CONTINUED)**

| Address       | Register Name (Symbol)                             |
|---------------|--|
| 0848h         | VBUS Threshold x Registers (VBUS_THRx) x=3         |
| 084Ah         | VBUS Debounce Register (VBUS_DEB)                  |
| 084Bh         | VBUS Off Register (VBUS_OFF)                       |
| 084Ch         | VBUS Error Register (VBUS_ERR)                     |
| 084Dh         | Reserved for future expansion                      |
| 084Eh         | VBUS VSafe0V Threshold Register (VSAFE0V_THR)      |
| 0850h         | CFG_SELx Match Registers (CFG_SELx_MATCH) x=0      |
| 0852h         | CFG_SELx Match Registers (CFG_SELx_MATCH) x=1      |
| 0854h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=0   |
| 0856h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=1   |
| 0858h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=2   |
| 085Ah         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=3   |
| 085Ch         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=4   |
| 085Eh         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=5   |
| 0860h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=6   |
| 0862h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=7   |
| 0864h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=8   |
| 0866h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=9   |
| 0868h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=10  |
| 086Ah         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=11  |
| 086Ch         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=12  |
| 086Eh         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=13  |
| 0870h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=14  |
| 0872h         | CFG_SEL Threshold x Registers (CFG_SEL_THRx) x=15  |
| 0874h         | CFG_SEL Debug Register (CFG_SEL_DBG)               |
| 0875h – 0885h | Reserved for future expansion                      |
| 0886h         | VCONN Discharge Threshold Register (VCONN_DIS_THR) |
| 0888h         | VCONN Discharge Time Register (VCONN_DIS_TIME)     |
| 088Ah – 0BFFh | Reserved for future expansion                      |

**Note:** RESERVED address space must not be written under any circumstances. Failure to heed this warning may result in untoward operation and unexpected results.

# UPD350

## 9.13.1 CC HARDWARE CONTROL REGISTER (CC\_HW\_CTL)

Address: 0800h Size: 16 bits

| Bits  | Description  | Type | Default |
|-------|--|------|---------|
| 15:14 | <b>SHORT_DET</b><br>Defines behavior in standalone DFP mode for handling the short circuit condition.<br><br>0xb: A0 functionality maintained where VBUS short is not checked before initiating VBUS discharge.<br><br>10b: Device initiates VBUS discharge only after short circuit condition has been removed.<br><br>11b: Device initiates VBUS discharge after short circuit condition has been removed or a time equal to TCYCLE.<br><br><b>Note:</b> This field only has meaning for standalone DFP operation. | R/W  | 00b     |
| 13    | <b>RESERVED</b>  | RO   | -       |
| 12    | <b>BLK_PD_MSG</b><br>This bit causes the CC debouncer to pause whenever a PD message is detected by the MAC. This applies for both transmit and receive messages. After the message is processed<br><br>0b: Disable PD message filtering.<br>1b: Enable PD message filtering.<br><br><b>Note:</b> This must be enabled for collision detection.  | R/W  | 0b      |
| 11    | <b>MATCH_DB_UNITS</b><br>This bit defines the units of the <a href="#">Match Debounce Register (MATCH_DEB)</a> .<br><br>0b: Match debounce has units of 1.6 ms.<br>1b: Match debounce has units of 100 us.<br><br><b>Note:</b> 1.6 ms is derived from the time to cycle through all thresholds on both CC pins.  | R/W  | 0b      |
| 10    | <b>DEVICE_MODE</b><br>Indicates the current mode of the device.<br><br>0b: Device is in Companion Mode<br>1b: Device is in Standalone Mode ( <i>UPD350-A/UPD350-C only</i> )   | RO   | 0b      |
| 9     | <b>CC_DB_ACTIVE</b><br>When this bit reads back 0b, the debouncer is disabled. The CC debouncer is enabled when it reads back 1b.<br><br><b>Note:</b> Software may poll this bit to determine when the CC debouncer is disabled, which can be used as a condition for programming a new configuration.   | RO   | 0b      |
| 8     | <b>DEVICE_STATE</b><br>Indicates the current state of the device attachment.<br><br>0b: Device is not attached<br>1b: Device is attached   | RO   | 0b      |

| Bits | Description   | Type | Default                  |
|------|---|------|--------------------------|
| 7:6  | <p><b>Power Capability</b><br/>Indicates the charging current capacity of the device as defined by the <b>PWR_CAPx</b> pins. (<i>UPD350-A/UPD350-C only</i>)</p> <p>This field only has meaning for configurations where the <b>PWR_CAPx</b> pins are available (<i>UPD350-A/UPD350-C only</i>).</p>  | RO   | <a href="#">Note 9-2</a> |
| 5:3  | <p><b>Detach Threshold Select</b><br/>Defines which CC threshold shall be used for determining a detach when operating as a standalone DFP (<i>UPD350-A/UPD350-C only</i>).</p>   | R/W  | <a href="#">Note 9-2</a> |
| 2    | <p><b>Device Role</b><br/>0b: Device configured as UFP.<br/>1b: Device configured as DFP.</p> <p><b>Note:</b> This bit must not be modified while the CC debouncer is enabled.</p>  | R/W  | <a href="#">Note 9-3</a> |
| 1    | <b>RESERVED</b>   | RO   | -                        |
| 0    | <p><b>Standalone Operation</b><br/>0b: Companion Mode<br/>1b: Standalone mode (<i>UPD350-A/UPD350-C only</i>)</p> <p>Standalone mode:<br/>This is the mode of operation supported for standalone operation. During standalone operation, the I<sup>2</sup>C interface may not be available and the host CPU is not capable of managing the UPD350.</p> <p>The following functions can be handled by the internal logic when this bit is set:</p> <ul style="list-style-type: none"> <li>• VCONN Enabled/Disable</li> <li>• Attach detection and assertion of <b>ATTACH</b></li> <li>• Detach detection and de-assertion of <b>ATTACH</b></li> <li>• Orientation detection and assertion/de-assertion of <b>ORIENTATION</b> pin</li> <li>• Enables CC de-bouncer.</li> </ul> | R/W  | <a href="#">Note 9-1</a> |

**Note 9-1** Default is 1b when a standalone configuration is selected otherwise the default is 0b.

**Note 9-2** Default is a function of the **PWR\_CAP0** and **PWR\_CAP1** pins, when the configuration supports these pins. Otherwise the default is 0h.

**Note 9-3** Default is a function of the **CFG\_SEL0** and **CFG\_SEL1** pins. When the configuration indicates UFP configuration this bit defaults to 0b. For DFP operation this bit defaults to 1b. When neither UFP or DFP is specified the default shall be 0b.

# UPD350

## 9.13.2 CC INTERRUPT STATUS REGISTER (CC\_INT\_STS)

Address: 0803h Size: 16 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7    | <b>CC_MATCH_VLD</b><br>Asserts after the CC debouncer is first enabled, via <a href="#">CC Comparator Control</a> , and the first match becomes valid in <a href="#">CCx Match Registers (CCx_MATCH)</a> .   | R/WC | 0b      |
| 6    | <b>RP_CHG</b><br>When operating as a standalone UFP, this interrupt indicates a change in the state of the RP value advertised by the DFP has been detected ( <i>UPD350-A/UPD350-C only</i> ).<br><br><b>Note:</b> This bit is RO when the device is not configured as a standalone UFP and will always read back 0b.<br><br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.<br><br><b>Note:</b> The updated current advertisement is available via the <a href="#">DFP Current Advertisement</a> field in the <a href="#">CC Control Register (CC_CTL)</a> . | R/WC | 0b      |
| 5    | <b>DETACH</b><br>Indicates a detach event has occurred when the device has been configured to support standalone mode per the <a href="#">Standalone Operation</a> field in the <a href="#">CC Control Register (CC_CTL)</a> ( <i>UPD350-A/UPD350-C only</i> ).<br><br>DFP Operation: CC pins are monitored for detecting a detach.<br>UFP Operation: VBUS is monitored for detecting a detach.<br><br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.  | R/WC | 0b      |
| 4    | <b>ATTACH</b><br>Indicates an attach event has occurred when the device has been configured to support standalone mode per the <a href="#">Standalone Operation</a> field in the <a href="#">CC Control Register (CC_CTL)</a> ( <i>UPD350-A/UPD350-C only</i> ).<br><br>DFP Operation: CC pins are monitored for an attach.<br>UFP Operation: CC pins and VBUS are monitored for an attach.<br><br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.  | R/WC | 0b      |
| 3:2  | <b>RESERVED</b>  | RO   | -       |
| 1    | <b>CC2_MATCH_CHG</b><br>Indicates the a change occurred in the state of the respective <a href="#">CCx Change Status Registers (CCx_CHG_STS)</a> .<br><br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.   | RO   | 0b      |
| 0    | <b>CC1_MATCH_CHG</b><br>Indicates the a change occurred in the state of the respective <a href="#">CCx Change Status Registers (CCx_CHG_STS)</a> .<br><br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.   | RO   | 0b      |



## 9.13.3 CCX CHANGE STATUS REGISTERS (CCX\_CHG\_STS)

Address:            x=1: 0804h            Size:            8 bits  
                       x=2: 0805h

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <p><b>CCx Change Status</b><br/>           When set, each bit indicates that the respective bit in the <a href="#">CCx Match Registers (CCx_MATCH)</a> has changed.</p> <p>A write of 1b clears the respective status bit.</p> | R/WC | 0h      |

## 9.13.4 CCX MATCH REGISTERS (CCX\_MATCH)

Address:            x=1: 0806h            Size:            8 bits  
                       x=2: 0807h

| Bits | Description   | Type | Default                  |
|------|---|------|--------------------------|
| 7:0  | <p><b>CCx Threshold Match (CCx_MATCH)</b><br/>           When set, each bit indicates that the respective threshold programmed in the <a href="#">CC Threshold x Registers (CC_THRx)</a> was matched. A match is determined when the measured voltage exceeds the programmed threshold.</p> <p>These registers are updated after the <a href="#">Match Debounce Register (MATCH_DEB)</a> while in the Unattached state. While in AttachWait state, these registers are updated after the <a href="#">PD Debounce Register (PD_DEB)</a> if vOpen is seen for a time greater than in the <a href="#">PD Debounce Register (PD_DEB)</a>. While in Attached Source / Attached Sink states (e.g. detecting detach) the match registers are updated after the <a href="#">PD Debounce Register (PD_DEB)</a>.</p> <p><b>Note:</b> This register will always read the default value until the CC comparator is enabled when not operating in standalone mode.</p> <p><b>Note:</b> The contents of this register are debounced per the settings in the <a href="#">CCx Debounce Clear Enable Registers (CCx_DBCLR_EN)</a>, otherwise the raw value shall be shown.</p> | RO   | <a href="#">Note 9-4</a> |

**Note 9-4** Defaults to FFh when the device is configured as a DFP and 00h when configured as a UFP, per the [Device Role](#) field in the [CC Control Register \(CC\\_CTL\)](#).

# UPD350

## 9.13.5 VBUS MATCH REGISTER (VBUS\_MATCH)

Address: [0808h](#) Size: 8 bits

Indicates which VBUS thresholds are matched on **VBUS\_DET** pin. A match is determined when the measured voltage exceeds the programmed threshold.

**Note:** When not operating in standalone mode, this register will always read 0h until the VBUS comparator is enabled.

**Note:** The contents of this register shall be debounced per the settings in [VBUS Debounce Clear Enable Register \(VBUS\\_DBCLR\\_EN\)](#).

| Bits | Description                              | Type | Default |
|------|--|------|---------|
| 7:6  | RESERVED                                 | RO   | -       |
| 5    | VBUS Threshold 3 Match (VBUS3_THR_MATCH) | RO   | 0b      |
| 4    | VBUS Threshold 2 Match (VBUS2_THR_MATCH) | RO   | 0b      |
| 3    | VBUS Threshold 1 Match (VBUS1_THR_MATCH) | RO   | 0b      |
| 2    | VBUS Threshold 0 Match (VBUS0_THR_MATCH) | RO   | 0b      |
| 1    | RESERVED                                 | RO   | -       |
| 0    | VBUS VSafe0v Match (VSAFE0V_THR_MATCH)   | RO   | 0b      |

## 9.13.6 VBUS CHANGE STATUS REGISTER (VBUS\_CHG\_STS)

Address: [0809h](#) Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>VBUS Change Status (VBUS_CHG_STS)</b><br>When set, each bit indicates that the respective bit in <a href="#">VBUS Match Register (VBUS_MATCH)</a> has changed.<br><br>A write of 1b clears the respective status bit. | R/WC | 0h      |

## 9.13.7 POWER INTERRUPT STATUS REGISTER (PWR\_INT\_STS)

Address: 080Ah Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | <p><b>VBUS_MATCH_VLD</b><br/>Asserts after the VBUS debouncer is first enabled, via <a href="#">VBUS Comparator Control</a>, and the first match becomes valid in <a href="#">VBUS Match Register (VBUS_MATCH)</a>.</p>   | R/WC | 0b      |
| 6    | <p><b>VCONN Discharge Error (VCONN_DISCH_ERR)</b><br/>When set this bit indicates that a VCONN discharge error has been detected. This bit is only available in standalone DFP mode and is otherwise reserved.</p> <p>A discharge error is tracked when <a href="#">VCONN Discharge Control</a> is set to 00b or 01b. A discharge error is asserted when VCONN fails to fall below <a href="#">VCONN Discharge Threshold (VCONN_DIS_THR)</a> after a time greater than <a href="#">VCONN Discharge Time (VCONN_DIS_TIME)</a> elapses.</p> | R/WC | 0b      |
| 5    | <p><b>CC2 Back-Drive Error</b><br/>When set, indicates that back-drive has been detected on the CC2 pin.</p> <p><b>Note:</b> The source of this input is a level and persists until the error condition stops.</p>  | R/WC | 0b      |
| 4    | <p><b>VBUS Discharge Error</b><br/>When set, indicates that the an interval greater than defined in the <a href="#">VBUS Off Register (VBUS_OFF)</a> has elapsed while attempting to discharge VBUS.</p> <p><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.</p>  | R/WC | 0b      |
| 3    | <p><b>VCONN2 FET Power</b><br/>The integrated VCONN2 FET is enabled and providing power.</p> <p>This bit only has usefulness for standalone operation or where VCONN is explicitly enabled by the host.</p> <p><b>Note:</b> The source of this input is a level and persists until the VCONN is no longer present.</p>  | R/WC | 0b      |
| 2    | <p><b>VCONN1 FET Power</b><br/>The integrated VCONN1 FET is enabled and providing power.</p> <p>This bit only has usefulness for standalone operation or where VCONN is explicitly enabled by the host.</p> <p><b>Note:</b> The source of this input is a level and persists until the VCONN is no longer present.</p>  | R/WC | 0b      |
| 1    | <p><b>CC1 Back-Drive Error</b><br/>When set indicates that back-drive has been detected on the CC1 pin.</p> <p><b>Note:</b> The source of this input is a level and persists until the error condition stops.</p>   | R/WC | 0b      |
| 0    | <p><b>VCONN Over-Current Error</b><br/>Indicates an over-current has been detected on the integrated VCONN FET.</p> <p><b>Note:</b> The source of this input is a level and persists until the error condition stops.</p>   | R/WC | 0b      |

# UPD350

## 9.13.8 DEBUG INTERRUPT STATUS REGISTER (DBG\_INT\_STS)

Address: 080Bh Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:4  | <b>RESERVED</b>  | RO   | 0h      |
| 3    | <b>VCONN_DISCH_STS</b><br>When set, indicates that the CC pin previously sourcing VCONN is being discharged.<br><br>This bit only exists in standalone DFP mode and is otherwise reserved.   | R/WC | 0b      |
| 2    | <b>VBUS_DISCH</b><br>When set indicates this indicates that VBUS is being discharged.<br><b>Note:</b> The source of this input is a level and it persists until the discharge has completed.   | R/WC | 0b      |
| 1    | <b>CFG_SEL1 Done</b><br>When set, indicates that all <a href="#">CFG_SEL Threshold x Registers (CFG_SEL_THRx)</a> have been measured in response to the request enabled by <a href="#">VBUS Comparator Control</a> to sample the CFG_SEL1 pin and the results are readable in the respective <a href="#">CFG_SELx Match Registers (CFG_SELx - MATCH)</a> (UPD350-A/UPD350-C only).<br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared. | R/WC | 0b      |
| 0    | <b>CFG_SEL0 Done</b><br>When set, indicates that all <a href="#">CFG_SEL Threshold x Registers (CFG_SEL_THRx)</a> have been measured in response to the request enabled by <a href="#">VBUS Comparator Control</a> to sample the CFG_SEL0 pin and the results are readable in the respective <a href="#">CFG_SELx Match Registers (CFG_SELx - MATCH)</a> .<br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.                         | R/WC | 0b      |

## 9.13.9 CC INTERRUPT ENABLE REGISTER (CC\_INT\_EN)

Address: 0811h Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:4  | <b>CC Interrupt Enable</b><br>When "0", prevents generation of the respective interrupt. | R/W  | 0000b   |
| 3:2  | <b>RESERVED</b>  | -    | 00b     |
| 1:0  | <b>CC Interrupt Enable</b><br>When "0", prevents generation of the respective interrupt. | R/W  | 00b     |

## 9.13.10 CCX MATCH ENABLE REGISTERS (CCX\_MATCH\_EN)

Address:            x=1: 0812h            Size:            8 bits  
                       x=2: 0813h

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>CCx Match Enable</b><br>When set, the corresponding bit in the <a href="#">CCx Change Status Registers (CCX_CHG_STS)</a> can cause the assertion of the respective CCx Match Change interrupt ( <a href="#">CC1_MATCH_CHG/CC2_MATCH_CHG</a> ). | R/W  | 00h     |

## 9.13.11 VBUS MATCH ENABLE REGISTER (VBUS\_MATCH\_EN)

Address:            0814h            Size:            8 bits

When set, the corresponding bit in the [VBUS Change Status Register \(VBUS\\_CHG\\_STS\)](#) can cause the assertion of the [VBUS\\_INT](#) interrupt.

| Bits | Description                 | Type | Default |
|------|-----------------------------|------|---------|
| 7:6  | <b>RESERVED</b>             | RO   | -       |
| 5    | <b>VBUS Match Enable[5]</b> | R/W  | 0b      |
| 4    | <b>VBUS Match Enable[4]</b> | R/W  | 0b      |
| 3    | <b>VBUS Match Enable[3]</b> | R/W  | 0b      |
| 2    | <b>VBUS Match Enable[2]</b> | R/W  | 0b      |
| 1    | <b>VBUS Match Enable[1]</b> | RO   | 0b      |
| 0    | <b>VBUS Match Enable[0]</b> | R/W  | 0b      |

## 9.13.12 POWER INTERRUPT ENABLE REGISTER (PWR\_INT\_EN)

Address:            0815h            Size:            8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>Power Interrupt Enable [7:0]</b><br>When "0", prevents generation of the respective interrupt. | R/W  | 0h      |

# UPD350

## 9.13.13 DEBUG INTERRUPT ENABLE REGISTER (DBG\_ENT\_EN)

Address: 0816h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:4  | <b>RESERVED</b>   | RO   | 0h      |
| 3    | <b>Debug Interrupt Enable 3</b><br>When "0", prevents generation of the respective interrupt.<br><br>This bit only exists in standalone DFP mode and is otherwise reserved. | R/W  | 0b      |
| 2:0  | <b>Debug Interrupt Enable [2:0]</b><br>When "0", prevents generation of the respective interrupt.   | R/W  | 0h      |

## 9.13.14 MATCH DEBOUNCE REGISTER (MATCH\_DEB)

Address: 0817h Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>Match Debounce</b><br>Defines the debounce period utilized before updating the <a href="#">CCx Match Registers (CCx_MATCH)</a> when not operating in standalone mode.<br><br>The units of this register is determined by <a href="#">MATCH_DB_UNITS</a> bit in <a href="#">CC Hardware Control Register (CC_HW_CTL)</a> . When this bit is clear, the units are 1.6 ms. When this bit is set, the units are 100 us.<br><b>Note:</b> This register must not be modified while the CC debouncer is enabled.<br><b>Note:</b> The actual debounce time may be +/-1 from the cycle time programmed.<br><b>Note:</b> The value programmed in this CSR should be at least equal to the number of thresholds enabled in <a href="#">CCx Sample Enable Registers (CCx_SAMP_EN)</a> . This is only an issue when <a href="#">MATCH_DB_UNITS</a> is set to 1b. | R/W  | 2h      |

## 9.13.15 PD DEBOUNCE REGISTER (PD\_DEB)

Address: 0818h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>PD Debounce (PD_DEB)</b><br>Period used for implementing $t_{pdDebounce}$ .<br><b>Note:</b> This register must not be modified while the CC debouncer is enabled.<br><b>Note:</b> This register has units of 1 ms. | R/W  | Ah      |

## 9.13.16 VCONN OCS AND BACK-DRIVE DEBOUNCE REGISTER (VCONN\_DEB)

Address: 0819h Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <p><b>VCONN and Back-Drive Debounce (VCONN_DEB)</b><br/>                     Period used for implementing debounce of over-current detected on VCONN FET as well as back-drive detected on the CC pins.</p> <p><b>Note:</b> This register has units of 1 ms.</p> <p><b>Note:</b> This register should not be changed when <a href="#">VCONN OCS Enable</a> is set.</p> | R/W  | 2h      |

## 9.13.17 CCX DEBOUNCE CLEAR ENABLE REGISTERS (CCX\_DBCLR\_EN)

Address: x=1: 081Ah x=2: 081Bh Size: 8 bits

| Bits | Description  | Type | Default                  |
|------|--|------|--------------------------|
| 7:0  | <p><b>CC Debounce Clear Enable (CC_DBCLR_DEB)</b><br/>                     When a bit is set, the respective threshold shall be included in the CC debouncer. Alternatively, when cleared the respective threshold shall no longer be considered by the debouncer.</p> <p>When CCx_DBCLR_EN bits are set on-the-fly, if a mismatch between the current raw match vector (for the new CCx_DBCLR_EN) and the previous raw match vector (for the old CCx_DBCLR_EN) exists, the DB will be reset.</p> <p><b>Note:</b> Clearing bits in this register at run time does not reset the debouncer.</p> <p><b>Note:</b> The CC debouncer encompasses both CC1/CC2 pins. A detected change for a threshold on either pin results in the debouncer resetting.</p> <p><b>Note:</b> Even though this register may change on-the-fly, the internal logic will enable the change only at the end of the scan cycle, which is a function of whether the CC1/CC2 pins are actively sampled and the <a href="#">CCx Sample Enable Registers (CCx_SAMP_EN)</a>.</p> | R/W  | <a href="#">Note 9-5</a> |

**Note 9-5** The default depends on the device's configuration, as shown in table [Table 9-10](#) which depends upon CFG\_SEL0, PWR\_CAP0, and PWR\_CAP1 pins.

**APPLICATION NOTE:** Clearing a bit in [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) shall cause the respective bit in [CCx Match Registers \(CCx\\_MATCH\)](#) to be immediately updated upon a change in state of the associated threshold. This causes a state change in [CCx Change Status Registers \(CCx\\_CHG\\_STS\)](#) and assertion of CC\_INT, if enabled. To prevent this [CCx Match Enable Registers \(CCx\\_MATCH\\_EN\)](#) should be updated before the [CCx Debounce Clear Enable Registers \(CCx\\_DBCLR\\_EN\)](#) by having the associated threshold cleared.

# UPD350

**TABLE 9-10: CCX\_DBLCLR\_DEB DEFAULTS**

| Configuration  | Bit 0 | Bit 1 | Bit 2 | Bit 3 | Bit 4 | Bit 5 | Bit 6 | Bit 7 |
|--|-------|-------|-------|-------|-------|-------|-------|-------|
| <b>Standalone UFP</b><br><i>(UPD350-A/UPD350-C only)</i>                   | 1     | 0     | 1     | 0     | 1     | 0     | 0     | 0     |
| <b>Standalone DFP (Default Current)</b><br><i>(UPD350-A/UPD350-C only)</i> | 1     | 0     | 0     | 0     | 0     | 1     | 0     | 0     |
| <b>Standalone DFP (1.5 A)</b><br><i>(UPD350-A/UPD350-C only)</i>           | 0     | 1     | 0     | 0     | 0     | 1     | 0     | 0     |
| <b>Standalone DFP (3.0 A)</b><br><i>(UPD350-A/UPD350-C only)</i>           | 0     | 0     | 0     | 1     | 0     | 0     | 1     | 0     |
| <b>Other</b>   | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |

## 9.13.18 VBUS DEBOUNCE CLEAR ENABLE REGISTER (VBUS\_DBCLR\_EN)

Address: **081Ch** Size: 8 bits

When a bit is set, the respective threshold shall be included in the VBUS debouncer. Alternatively, when cleared, the respective threshold shall no longer be considered by the debouncer.

When VBUS\_DBCLR\_EN bits are set on-the-fly, if a mismatch between the current raw match vector (for the new VBUS\_DBCLR\_EN) and the previous raw match vector (for the old VBUS\_DBCLR\_EN) exists, the DB will be reset.

**Note:** Clearing bits in this register at run time does not reset the debouncer.

**APPLICATION NOTE:** Clearing a bit in [VBUS Debounce Clear Enable Register \(VBUS\\_DBCLR\\_EN\)](#) shall cause the respective bit in [VBUS Match Register \(VBUS\\_MATCH\)](#) to be immediately updated upon a change in state of the associated threshold. This causes a state change in [VBUS Change Status Register \(VBUS\\_CHG\\_STS\)](#) and assertion of [VBUS\\_INT](#), if enabled. To prevent this, the [VBUS Match Register \(VBUS\\_MATCH\)](#) should be updated before the [VBUS Debounce Clear Enable Register \(VBUS\\_DBCLR\\_EN\)](#) by having the associated threshold cleared.

| BITS | DESCRIPTION   | TYPE | DEFAULT                  |
|------|---|------|--------------------------|
| 7:6  | RESERVED  | RO   | -                        |
| 5    | VBUS Debounce Clear Enable (VBUS3_DBCLR_DEB)        | R/W  | <a href="#">Note 9-6</a> |
| 4    | VBUS Debounce Clear Enable (VBUS2_DBCLR_DEB)        | R/W  | <a href="#">Note 9-6</a> |
| 3    | VBUS Debounce Clear Enable (VBUS1_DBCLR_DEB)        | R/W  | <a href="#">Note 9-6</a> |
| 2    | VBUS Debounce Clear Enable (VBUS0_DBCLR_DEB)        | R/W  | <a href="#">Note 9-6</a> |
| 1    | RESERVED  | RO   | -                        |
| 0    | VSAFE0V Debounce Clear Enable 9 (VSAFE0V_DBCLR_DEB) | R/W  | <a href="#">Note 9-6</a> |

**Note 9-6** The default depends on the device's configuration, as shown in [table Table 9-11](#) which depends upon CFG\_SEL0 pin.



**TABLE 9-11: VBUS\_DBCLR\_EN DEFAULTS**

| Configuration                                     | Bit 0 | Bit 1 | Bit 2 | Bit 3 | Bit 4 | Bit 5 | Bit 6 | Bit 7 |
|---|-------|-------|-------|-------|-------|-------|-------|-------|
| <b>Standalone UFP</b><br>(UPD350-A/UPD350-C only) | 1     | 0     | 1     | 1     | 0     | 0     | 0     | 0     |
| <b>Standalone DFP</b><br>(UPD350-A/UPD350-C only) | 1     | 0     | 1     | 1     | 0     | 0     | 0     | 0     |
| <b>Other</b>                                      | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |

### 9.13.19 CCX SAMPLE ENABLE REGISTERS (CCX\_SAMP\_EN)

Address:            x=1: 081Dh            Size:            8 bits  
                       x=2: 081Eh

| BITS | DESCRIPTION   | TYPE | DEFAULT |
|------|---|------|---------|
| 7:0  | <p><b>CC Sample Enable (CC_SAMP_EN)</b><br/>           When a bit is set, the respective CC threshold will be sampled by the CC debouncer. When a bit cleared to 0b, the corresponding bit(s) in the <a href="#">CCx Match Registers (CCx_MATCH)</a> and <a href="#">CCx Change Status Registers (CCx_CHG_STS)</a> will always read 0b.</p> <p>This register enables a reduction in latency for taking threshold measurements by only having thresholds of interest being sampled.</p> <p><b>Note:</b> For standalone DFP/UFP operation this register may remain set to FFh, as latency for sampling CC thresholds in this case is not a limitation.</p> <p><b>Note:</b> This register must be used to implement <a href="#">Collision Avoidance</a>.</p> | R/W  | FFh     |

# UPD350

## 9.13.20 CC CONTROL REGISTER (CC\_CTL)

Address: [0820h](#) Size: 16 bits

The register controls the pull-down resistors and current sources on the respective CC1/CC2 pin.

| Bits  | Description   | Type                     | Default                         |
|-------|---|--------------------------|---------------------------------|
| 15    | <p><b>RA Detect</b><br/>When set, indicates that an RA resistor has been detected.</p> <p>This bit is set by the device when <a href="#">Standalone Operation</a> is configured for standalone mode. The device updates this field after an attach has been detected.</p>   | R/WC                     | 0b                              |
| 14:13 | <p><b>CC Comparator Control</b><br/>00b: CC Comparator and DAC powered-down<br/>01b: CC Comparator samples CC1<br/>10b: CC Comparator samples CC2<br/>11b: CC Comparator samples CC1 and CC2</p> <p><b>Note:</b> A sample is taken every 100 us. The current source reference shall also be powered down when a value of 00b is set.</p> <p><b>Note:</b> This field is RO and the contents are <b>11b</b> when standalone mode is enabled.</p> <p><b>Note:</b> This field is used in conjunction with the <a href="#">CCx Sample Enable Registers (CCx_SAMP_EN)</a> which constrains the number of thresholds monitored on the enabled CC pin(s).</p> | <a href="#">Note 9-7</a> | 00b                             |
| 12    | <p><b>CC Communication Select</b><br/>0b: CC1 is used for baseband communication.<br/>1b: CC2 is used for baseband communication.</p> <p>This bit is set by the device when <a href="#">Standalone Operation</a> is configured for standalone mode. The device updates this field after an attach has been detected.</p> <p>This bit is RO and reflects the state determined by the internal logic. In standalone mode, this bit matches the state of the <b>ORIENTATION</b> pin (<i>UPD350-A/UPD350-C only</i>).</p>   | <a href="#">Note 9-7</a> | 0b                              |
| 11:10 | <p><b>CC2 RP Value</b><br/>00b: RP current source disabled<br/>01b: RP current source enabled, default USB power<br/>10b: RP current source enabled, 1.5A<br/>11b: RP current source enabled, 3.0A</p> <p>Controls RP value on CC2 pin.</p>   | R/W                      | 00b<br><a href="#">Note 9-9</a> |
| 9:8   | <p><b>CC1 RP Value</b><br/>00b: RP current source disabled<br/>01b: RP current source enabled, default USB power<br/>10b: RP current source enabled, 1.5A<br/>11b: RP current source enabled, 3.0A</p> <p>Controls RP value on CC1 pin.</p>   | R/W                      | 00b<br><a href="#">Note 9-9</a> |

| Bits | Description  | Type | Default                   |
|------|--|------|---------------------------|
| 7:6  | <p><b>DFP Current Advertisement</b><br/>           When <a href="#">Standalone Operation</a> is configured for standalone mode and the device is configured as UFP, <a href="#">Device Role</a>, this field indicates the DFP's advertised current. Otherwise this field shall be read back 00b.</p> <p>The device updates this field after an attach has been detected.</p> <p>0xb: RP current advertises default USB current<br/>           10b: RP current advertises 1.5A<br/>           11b: RP current advertises 3.0A</p> | RO   | 00b                       |
| 5    | <b>RESERVED</b>  | RO   | -                         |
| 4:3  | <p><b>CC2 Pull-Down Value</b><br/>           00b: Dead battery RD resistor selected<br/>           01b: Trimmed RD resistor selected<br/>           10b: Trimmed RA resistor selected.<br/>           11b: Open Disconnect.</p>  | R/W  | <a href="#">Note 9-10</a> |
| 2    | <b>RESERVED</b>  | RO   | -                         |
| 1:0  | <p><b>CC1 Pull-Down Value</b><br/>           00b: Dead battery RD resistor selected<br/>           01b: Trimmed RD resistor selected<br/>           10b: Trimmed RA resistor selected.<br/>           11b: Open Disconnect.</p>  | R/W  | <a href="#">Note 9-10</a> |

**Note 9-7** This bit is RO when operating in standalone mode or attach detection. Otherwise it is R/W.

**Note 9-8** This bit is RO when operating in standalone mode. Otherwise it is R/W.

**Note 9-9** This field's default is a function of the **PWR\_CAP0** and **PWR\_CAP1** pins when in standalone DFP mode (see [Section 9.9.1, "Configuration Selection"](#)) (*UPD350-A/UPD350-C only*). Otherwise the default is 00b.

**Note 9-10** For standalone DFP and standalone UFP, the value is 00b until the system reset completes. the OTP calibration completes as shown in Figure x.x "System Reset". Afterwards, the default for standalone DFP is 11b and for standalone UFP is 01b.

# UPD350

## 9.13.21 CC THRESHOLD X REGISTERS (CC\_THRX)

Address:            x=0: 0822h            Size:            16 bits  
                          x=1: 0824h  
                          x=2: 0826h  
                          x=3: 0828h  
                          x=4: 082Ah  
                          x=5: 082Ch  
                          x=6: 082Eh  
                          x=7: 0830h

| Bits  | Description   | Type | Default                   |
|-------|---|------|---------------------------|
| 15:10 | RESERVED  | RO   | -                         |
| 9:0   | <b>CC Threshold X (CC_THRX)</b><br>CC Threshold X register.<br><b>Note:</b> The units of this register are ~2.44 mV from a 2.5V/1024.<br><b>Note:</b> This register must not be modified while the CC debouncer is enabled. | R/W  | <a href="#">Note 9-11</a> |

**Note 9-11** The default varies as shown in [Table 9-12](#) Defaults values are loaded from OTP. If the OTP is not configured..

**TABLE 9-12: CC\_THR DEFAULTS**

| CC_THR | Type-C Threshold | R/2R Divider | VALUE |
|--------|------------------|--------------|-------|
| 0      | 0.2              | 0.13         | 55    |
| 1      | 0.4              | 0.27         | 109   |
| 2      | 0.66             | 0.44         | 180   |
| 3      | 0.8              | 0.53         | 219   |
| 4      | 1.23             | 0.82         | 336   |
| 5      | 1.6              | 1.07         | 437   |
| 6      | 2.6              | 1.73         | 710   |
| 7      | 3                | 2            | 820   |

**APPLICATION NOTE:** The CC Comparator must be powered down before updating these registers.

## 9.13.22 CC DEBOUNCE REGISTER (CC\_DEB)

Address:            0832h            Size:            8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>CC Debounce (CC_DEB)</b><br>Period used for implementing $t_{CCDebounce}$ .<br><b>Note:</b> This register must not be modified while the CC debouncer is enabled.<br><b>Note:</b> This register has units of 10 ms. | R/W  | Fh      |

## 9.13.23 VBUS CONTROL REGISTER (VBUS\_CTL)

Address: 0840h Size: 16 bits

| Bits  | Description   | Type | Default                   |
|-------|---|------|---------------------------|
| 15:12 | <b>RESERVED</b>   | RO   | -                         |
| 11    | <p><b>CC Back-Drive Enable</b><br/>Enables the monitoring of the back-drive condition on both CC pins.</p> <p>When back-drive is detected, if the VCONN FET is enabled on the erred CC pin, it shall be automatically disabled.</p> <p>0b: CC Back-Drive disabled<br/>1b: CC Back-Drive enabled</p> | R/W  | <a href="#">Note 9-12</a> |
| 10    | <p><b>IBUS_LOW</b><br/>Determines whether IBUS Low is asserted during standalone mode when PPC's DISCH_SEL is cleared and a VBUS discharge is occurring.</p> <p>0b: Do not assert IBUS Low<br/>1b: Assert IBUS Low</p>  | R/W  | 0b                        |
| 9:8   | <p><b>OCS_MIN</b><br/>Defines the minimum guaranteed assertion time for OCS_N when operating in standalone DFP mode (<i>UPD350-A/UPD350-C only</i>).</p> <p>00b: 5 ms<br/>01b: 10 ms<br/>10b: 20 ms<br/>11b: 30 ms</p>  | R/W  | 00b                       |
| 7     | <p><b>VBUS_DB_ACTIVE</b><br/>When this bit reads back 0b, the debouncer is disabled. The VBUS debouncer is enabled when it reads back 1b.</p> <p><b>Note:</b> Firmware polls this bit to determine when debouncer is disabled and a new configuration may be programmed.</p>                        | RO   | 0b                        |
| 6     | <p><b>VCONN OCS Enable</b><br/>Enables the monitoring of over current condition on the internal VCONN FETs.</p> <p>0b: VCONN OCS monitor is disabled<br/>1b: VCONN OCS monitor is enabled</p>   | R/W  | <a href="#">Note 9-12</a> |

# UPD350

| Bits | Description  | Type                      | Default |
|------|--|---------------------------|---------|
| 5:4  | <p><b>VCONN Discharge Control</b><br/>This field determines the VCONN discharge behavior. It only has meaning in DFP standalone mode and should not be used by firmware when operating in companion mode.</p> <p>The discharge occurs on the CC pin that was supplying VCONN.</p> <p>00b: Discharge VCONN until either the threshold defined by the <a href="#">VCONN Discharge Threshold Register (VCONN_DIS_THR)</a> is reached or the time specified by the <a href="#">VCONN Discharge Time Register (VCONN_DIS_TIME)</a> has expired.</p> <p>01b: VCONN discharge is not supported.</p> <p>10b: Discharge VCONN until threshold defined by <a href="#">VCONN Discharge Threshold Register (VCONN_DIS_THR)</a> is reached.</p> <p>11b: Discharge VCONN for the time specified by <a href="#">VCONN Discharge Time Register (VCONN_DIS_TIME)</a>.</p> <p><b>Note:</b> For options 0xb a VCONN discharge error is detected if the timer expires and VCONN has not discharged below <a href="#">VCONN Discharge Time Register (VCONN_DIS_TIME)</a>.</p> | R/W                       | 00b     |
| 3    | <p><b>VCONN2 Control</b><br/>Enables the VCONN2 FET.</p> <p>0b: VCONN2 FET is disabled<br/>1b: VCONN2 FET is enabled</p> <p>This bit has no meaning when in standalone mode (see <a href="#">Standalone Operation</a>).</p> <p>This bit automatically clears when a debounce VCONN OCS event occurs per the assertion of <a href="#">VCONN Discharge Error (VCONN_DISCH_ERR)</a>.</p>  | R/W                       | 0b      |
| 2    | <p><b>VCONN1 Control</b><br/>Enables the VCONN1 FET.</p> <p>0b: VCONN1 FET is disabled<br/>1b: VCONN1 FET is enabled</p> <p>This bit has no meaning when in standalone mode (see <a href="#">Standalone Operation</a>).</p> <p>This bit automatically clears when a debounce VCONN OCS event occurs per the assertion of <a href="#">VCONN Discharge Error (VCONN_DISCH_ERR)</a>.</p>  | R/W                       | 0b      |
| 1:0  | <p><b>VBUS Comparator Control</b><br/>00b: Comparator and DAC disabled<br/>01b: Sample VBUS<br/>10b: Sample CFG_SEL<br/>11b: RESERVED</p> <p>After the sample of CFG_SEL has completed, this register resets itself to 00b and disables the VBUS comparator.</p> <p><b>Note:</b> This field is forced to 01b by hardware when operating as a standalone UFP.</p>   | <a href="#">Note 9-13</a> | 00b     |

**Note 9-12** This default value is 1 when operating in standalone DFP mode. Otherwise, the default value is 0.

**Note 9-13** This field is RO and reads back 01b when operating in UFP standalone mode. In standalone mode this value does not indicate that VBUS is being actively measured. Whether or not VBUS is being actively measured can be determined by reading [VBUS\\_DB\\_ACTIVE](#).

## 9.13.24 VBUS THRESHOLD X REGISTERS (VBUS\_THR<sub>X</sub>)

Address:           x=0: [0842h](#)           Size:           16 bits  
                       x=1: [0844h](#)  
                       x=2: [0846h](#)  
                       x=3: [0848h](#)

| Bits  | Description   | Type | Default                   |
|-------|---|------|---------------------------|
| 15:10 | <b>RESERVED</b>   | RO   | -                         |
| 9:0   | <b>VBUS Threshold X (VBUS_THR<sub>X</sub>)</b><br>VBUS Threshold X register.<br><br>The lower byte of the threshold must be written before the upper byte. The entire 10-bit threshold is updated when the second write occurs.<br><br><b>Note:</b> The units of this register are ~2.44 mV from a 2.5V FS. | R/W  | <a href="#">Note 9-14</a> |

**Note 9-14** The defaults are defined in [Table 9-13](#). Defaults values are loaded from OTP. If the OTP is not configured.

**TABLE 9-13: VBUS\_THR DEFAULTS**

| VBUS_THR | VBUS Threshold | 1R/9R Divider | VALUE |
|----------|----------------|---------------|-------|
| <b>0</b> | 3.67           | 0.36          | 148   |
| <b>1</b> | 5.5            | 0.54          | 222   |
| <b>2</b> | 5.5            | 0.54          | 222   |
| <b>3</b> | 5.5            | 0.54          | 222   |

**APPLICATION NOTE:** This register may be dynamically written to by FW while the VBUS comparator is enabled provided the rules for updating defined in the CSR description are followed.

## 9.13.25 VBUS DEBOUNCE REGISTER (VBUS\_DEB)

Address:           [084Ah](#)           Size:           8 bits

This register has units of 1 ms.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>VBUS Debounce (VBUS_DEB)</b><br>Indicates debounce interval for the VBUS threshold comparators.<br><br><b>Note:</b> This register must not be modified while the VBUS debouncer is enabled. | R/W  | 1h      |

# UPD350

## 9.13.26 VBUS OFF REGISTER (VBUS\_OFF)

Address: 084Bh Size: 8 bits

This register has units of 10 ms.

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>VBUS Off</b><br>Defines timing after <b>VBUS_DET</b> discharges below VSafe0V. | R/W  | 10h     |

**Note 9-15** Default is loaded from OTP see VBUS\_OFF. If OTP is not configured the default is 10h.

## 9.13.27 VBUS ERROR REGISTER (VBUS\_ERR)

Address: 084Ch Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:3  | <b>RESERVED</b>  | RO   | -       |
| 3    | <b>VCONN Discharge</b><br>When set the VBUS Discharge error shall be enabled to place the device in the error state.   | R/W  | 0b      |
| 2    | <b>VBUS Discharge</b><br>When set, the VBUS Discharge error shall be enabled to place the device in the error state.<br><b>Note:</b> This bit is not applicable when the PPC is selected for VBUS discharge. | R/W  | 0b      |
| 1    | <b>VCONN OCS</b><br>When set, the CC OCS error shall be enabled to place the device in the error state.  | R/W  | 0b      |
| 0    | <b>CC Back-drive</b><br>When set, the CC back-drive error shall be enabled to place the device in the error state.   | R/W  | 0b      |



## 9.13.28 VBUS VSAFE0V THRESHOLD REGISTER (VSAFE0V\_THR)

Address: [084Eh](#) Size: 16 bits

| BITS  | DESCRIPTION  | TYPE | DEFAULT                   |
|-------|--|------|---------------------------|
| 15:10 | <b>RESERVED</b>  | RO   | -                         |
| 9:0   | <b>VSAFE0V Threshold (VSAFE0V_THR)</b><br>VSAFE0V Threshold register.<br><br>The lower byte of the threshold must be written before the upper byte. The entire 10-bit threshold is updated when the second write occurs.<br><br><b>Note:</b> The units of this register are ~2.44 mV from a 2.5V FS. | R/W  | <a href="#">Note 9-16</a> |

**Note 9-16** Defaults values are loaded from OTP. If the OTP is not configured The defaults are defined in [Table 9-14](#).

**TABLE 9-14: VSAFE0V\_THR DEFAULTS**

| VSAFE0V_THR | VBUS Threshold | 1R/9R Divider | VALUE |
|-------------|----------------|---------------|-------|
| VSAFE0V_THR | 0.8            | 0.08          | 32    |

**APPLICATION NOTE:** This register may be dynamically written to by software while the VBUS comparator is enabled, provided the rules for updating defined in the register description are followed.

## 9.13.29 CFG\_SELX MATCH REGISTERS (CFG\_SELX\_MATCH)

Address: x=0: [0850h](#) x=1: [0852h](#) Size: 16 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 15:0 | <b>Configuration Select Match (CFG_SELX_MATCH)</b><br>Indicates which configuration select threshold is matched on the CFG_SEL pin. A match is determined when the measured voltage exceeds the programmed threshold. See <a href="#">Section 9.9.1, "Configuration Selection," on page 82</a> . | RO   | 0h      |

# UPD350

## 9.13.30 CFG\_SEL THRESHOLD X REGISTERS (CFG\_SEL\_THRX)

|          |             |       |         |
|----------|-------------|-------|---------|
| Address: | x=0: 0854h  | Size: | 16 bits |
|          | x=1: 0856h  |       |         |
|          | x=2: 0858h  |       |         |
|          | x=3: 085Ah  |       |         |
|          | x=4: 085Ch  |       |         |
|          | x=5: 085Eh  |       |         |
|          | x=6: 0860h  |       |         |
|          | x=7: 0862h  |       |         |
|          | x=8: 0864h  |       |         |
|          | x=9: 0866h  |       |         |
|          | x=10: 0868h |       |         |
|          | x=11: 086Ah |       |         |
|          | x=12: 086Ch |       |         |
|          | x=13: 086Eh |       |         |
|          | x=14: 0870h |       |         |
|          | x=15: 0872h |       |         |

A total of 16 thresholds are supported for decoding the resistor value on the CFG\_SELx pins.

| Bits  | Description   | Type | Default                   |
|-------|---|------|---------------------------|
| 15:10 | RESERVED  | RO   | -                         |
| 9:0   | CFG_SEL Threshold (CFG_SEL_THR)<br><b>Note:</b> The units of this register are ~2.44 mV from a 2.5V FS. | R/W  | <a href="#">Note 9-17</a> |

**Note 9-17** The defaults are defined in [Table 9-15](#). Defaults values are loaded from OTP. If the OTP is not configured

**TABLE 9-15: CFG\_SEL\_THR DEFAULTS**

| CFG_SEL_THR | Default |
|-------------|---------|
| 0           | 32      |
| 1           | 96      |
| 2           | 160     |
| 3           | 224     |
| 4           | 288     |
| 5           | 352     |
| 6           | 416     |
| 7           | 480     |
| 8           | 544     |
| 9           | 608     |
| 10          | 672     |
| 11          | 736     |
| 12          | 800     |
| 13          | 864     |
| 14          | 928     |
| 15          | 992     |

## 9.13.31 CFG\_SEL DEBUG REGISTER (CFG\_SEL\_DBG)

Address: 0874h Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:4  | RESERVED   | RO   | -       |
| 3:0  | <b>CFG_SEL_VAL</b><br>This register stores a snapshot of the highest threshold matched when the device samples the CFG_SEL pin after a system level reset event. | RO   | 0h      |

## 9.13.32 VCONN DISCHARGE THRESHOLD REGISTER (VCONN\_DIS\_THR)

Address: 0886h Size: 16 bits

| Bits  | Description  | Type | Default                          |
|-------|--|------|----------------------------------|
| 15:10 | RESERVED   | RO   | -                                |
| 9:0   | <b>VCONN Discharge Threshold (VCONN_DIS_THR)</b><br>This register defines the threshold used in standalone DFP mode for discharging VCONN.<br><b>Note:</b> The units of this register are ~2.44 mV from a 2.5V/1024. | R/W  | 41h<br><a href="#">Note 9-18</a> |

**Note 9-18** Loaded from OTP. If the OTP is not configured, the default is 41 equates to 150mV after accounting for the R/2R divider.

## 9.13.33 VCONN DISCHARGE TIME REGISTER (VCONN\_DIS\_TIME)

Address: 0888h Size: 16 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>VCONN Discharge Time (VCONN_DIS_TIME)</b><br>Defines the amount of time the CC pin supplying VCONN is discharged.<br><b>Note:</b> The units of this register are 10 ms. | R/W  | 04h     |

**Note 9-19** Loaded from OTP. If the OTP is not configured, the default is 04h.

# UPD350

---

## 10.0 BASEBAND CC INTERFACE (BCI)

The device integrates a Baseband CC Interface (BCI) to facilitate USB Power Delivery communication. This module bridges between the PD MAC/BMC and the analog front end. Baseband communication is initiated by the PD MAC, which interfaces to the BCI. The BCI implements the digital functions required to control TX baseband components.

### 10.1 Baseband TX Data-flow

The key responsibility of the BCI is to generate the wave form required for baseband communication. To this end, the BMC has a group of eight registers that define the Lo-Hi and Hi-Lo transitions for the generated BMC signal.

When instructed to transition from Lo-Hi, the BCI steps through all [BB TX Risex Registers \(BB\\_TX\\_RISEx\)](#). Likewise when instructed to transition from Hi-Lo, the BCI steps through all [BB TX Fallx Registers \(BB\\_TX\\_FALLx\)](#). The BCI always presents the value at BB\_TX\_RISE0 or BB\_TX\_FALL0 first.

**APPLICATION NOTE:** The user may replicate values if it is desired to use less than twelve unique values for this purpose.

The following steps should be followed to program the BCI for data transmission:

1. Software programs the [BB TX Risex Registers \(BB\\_TX\\_RISEx\)](#) and [BB TX Fallx Registers \(BB\\_TX\\_FALLx\)](#) to define the slew rate for rising and falling transitions.
2. Software enables the PD MAC.
3. The PD MAC initiates, either via firmware, or autonomously via a data transmission (GoodCRC). The PD MAC instructs the BCI to take the BB TX analog components out of power-down.
4. After a sufficient time elapses for the analog to power up, the PD MAC begins transmission to the BMC encoder which drives the analog components.
5. If the MAC requests a rising transition, the BCI steps through the [BB TX Risex Registers \(BB\\_TX\\_RISEx\)](#). Alternatively, if the MAC requests a falling transition, the BCI steps through the [BB TX Fallx Registers \(BB\\_TX\\_FALLx\)](#).
6. When the PD MAC indicates the transmission has completed, the BCI powers down the TX analog components.

### 10.2 Baseband RX Data-flow

Baseband RX data is received by the BCI from the RX analog front end where it is compared to a threshold programmed by software. The [CC RX DAC Value](#) defines the trip point used for reception of baseband data. The field shall be programmed to be 175 mV below the RX Eye center, as defined in the PD Specification for the mode in which the device is operating (Sourcing Power, Sinking Power, Power Neutral).

In order to program the required trip point, the [RX DAC Enable](#) bit must be set and the [CC RX DAC Value](#) field in the [CC RX DAC Control Register \(CC\\_RX\\_DAC\\_CTL\)](#) must be programmed.

## 10.3 Baseband CC Interface Registers

This section details the baseband CC interface registers. For an overview of the entire device register map, refer to [Section 4.0, "Register Map,"](#) on page 18.

**TABLE 10-1: BASEBAND CC INTERFACE REGISTER MAP**

| Address       | Register Name (Symbol)                                     |
|---------------|--|
| 2800h         | <a href="#">CC RX DAC Control Register (CC_RX_DAC_CTL)</a> |
| 2802h         | <a href="#">CC RX DAC Filter Register (CC_RX_DAC_FILT)</a> |
| 2803h         | Reserved for future expansion                              |
| 2804h         | <a href="#">CC TX DAC Filter Register (CC_TX_DAC_FILT)</a> |
| 2805h – 280Fh | Reserved for future expansion                              |
| 2810h         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=0</a>    |
| 2812h         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=1</a>    |
| 2814h         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=2</a>    |
| 2816h         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=3</a>    |
| 2818h         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=4</a>    |
| 281Ah         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=5</a>    |
| 281Ch         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=6</a>    |
| 281Eh         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=7</a>    |
| 2820h         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=8</a>    |
| 2822h         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=9</a>    |
| 2824h         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=10</a>   |
| 2826h         | <a href="#">BB TX Risex Registers (BB_TX_RISEx) x=11</a>   |
| 2828h – 282Fh | Reserved for future expansion                              |
| 2830h         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=0</a>    |
| 2832h         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=1</a>    |
| 2834h         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=2</a>    |
| 2836h         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=3</a>    |
| 2838h         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=4</a>    |
| 283Ah         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=5</a>    |
| 283Ch         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=6</a>    |
| 283Eh         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=7</a>    |
| 2840h         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=8</a>    |
| 2842h         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=9</a>    |
| 2844h         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=10</a>   |
| 2846h         | <a href="#">BB TX Fallx Registers (BB_TX_FALLx) x=11</a>   |
| 2848h – 2BFFh | Reserved for future expansion                              |

**Note:** RESERVED address space must not be written under any circumstances. Failure to heed this warning may result in untoward operation and unexpected results.

# UPD350

## 10.3.1 CC RX DAC CONTROL REGISTER (CC\_RX\_DAC\_CTL)

Address: 2800h Size: 16 bits

| Bits  | Description   | Type | Default |
|-------|---|------|---------|
| 15    | <b>RX DAC Enable</b><br>0: Disable the CC RX DAC<br>1: Enable the CC RX DAC   | R/W  | 0b      |
| 14:10 | <b>RESERVED</b>   | RO   | -       |
| 9:0   | <b>CC RX DAC Value</b><br>This register defines the trip point used for reception of baseband data.<br><b>Note:</b> The full scale range of this DAC is 1.8V.<br><b>Note:</b> The DAC must be programmed to be 175mV below the desired RX Eye center.<br><b>Note:</b> For a source, a value of 288 is recommended. For a sink, a value of 146 is recommended. | R/W  | 0h      |

## 10.3.2 CC RX DAC FILTER REGISTER (CC\_RX\_DAC\_FILT)

Address: 2802h Size: 8 bits

| Bits | Description                              | Type | Default |
|------|--|------|---------|
| 7:2  | <b>RESERVED</b>                          | RO   | -       |
| 1    | <b>Select CC Rx Filter Configuration</b> | R/W  | 0b      |
| 0    | <b>CC RX DAC Filter Enable</b>           | R/W  | 0b      |

## 10.3.3 CC TX DAC FILTER REGISTER (CC\_TX\_DAC\_FILT)

Address: 2804h Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:5  | <b>RESERVED</b>  | RO   | -       |
| 4    | <b>CC TX Filter Enable</b><br>Enables CC TX filter and driver. | R/W  | 0       |
| 3:0  | <b>CC TX Filter</b><br>Selects CC TX filter bandwidth.         | R/W  | 8h      |

## 10.3.4 BB TX RISEX REGISTERS (BB\_TX\_RISEX)

|          |             |       |         |
|----------|-------------|-------|---------|
| Address: | x=0: 2810h  | Size: | 16 bits |
|          | x=1: 2812h  |       |         |
|          | x=2: 2814h  |       |         |
|          | x=3: 2816h  |       |         |
|          | x=4: 2818h  |       |         |
|          | x=5: 281Ah  |       |         |
|          | x=6: 281Ch  |       |         |
|          | x=7: 281Eh  |       |         |
|          | x=8: 2820h  |       |         |
|          | x=9: 2822h  |       |         |
|          | x=10: 2824h |       |         |
|          | x=11: 2826h |       |         |

The BB TX Rise registers define the characteristics of the baseband waveform on rising transitions.

| Bits  | Description  | Type | Default |
|-------|--|------|---------|
| 15:10 | <b>RESERVED</b>  | RO   | -       |
| 9:0   | <b>BB TX Rise Value</b><br>Code presented to the CC TX DAC when implementing the rising transition for a baseband transmission.<br><br><b>Note:</b> The recommended values for this field are as follows:<br>x=0: 0<br>x=1: 57<br>x=2: 115<br>x=3: 172<br>x=4: 230<br>x=5: 287<br>x=6: 345<br>x=7: 402<br>x=8: 460<br>x=9: 517<br>x=10: 574<br>x=11: 631 | R/W  | 0h      |

# UPD350

## 10.3.5 BB TX FALLX REGISTERS (BB\_TX\_FALLX)

|          |             |       |         |
|----------|-------------|-------|---------|
| Address: | x=0: 2830h  | Size: | 16 bits |
|          | x=1: 2832h  |       |         |
|          | x=2: 2834h  |       |         |
|          | x=3: 2836h  |       |         |
|          | x=4: 2838h  |       |         |
|          | x=5: 283Ah  |       |         |
|          | x=6: 283Ch  |       |         |
|          | x=7: 283Eh  |       |         |
|          | x=8: 2840h  |       |         |
|          | x=9: 2842h  |       |         |
|          | x=10: 2844h |       |         |
|          | x=11: 2846h |       |         |

The BB TX Fall registers define the characteristics of the baseband waveform on rising transitions.

| Bits  | Description   | Type | Default |
|-------|---|------|---------|
| 15:10 | <b>RESERVED</b>   | RO   | -       |
| 9:0   | <b>BB TX Fall Value</b><br>Code presented to the CC TX DAC when implementing the falling transition for a baseband transmission.<br><br><b>Note:</b> The recommended values for this field are as follows:<br>x=0: 631<br>x=1: 574<br>x=2: 517<br>x=3: 460<br>x=4: 402<br>x=5: 345<br>x=6: 287<br>x=7: 230<br>x=8: 172<br>x=9: 115<br>x=10: 57<br>x=11: 0 | R/W  | 0h      |



## 11.0 POWER DELIVERY MAC

The PD MAC implements certain features of the protocol layer and physical layer of the Universal Serial Bus Power Delivery Specification. On one end the PD MAC interfaces to the software implementing the bulk of protocol and higher level layers and on the other end it interfaces to a BMC encoder / decoder module.

In addition to the normal TX and RX functions, the PD MAC implements the test mode logic defined in the USB PD specification (BIST).

The PD MAC supports the following features:

- Automatic TX Mode for packet framing and CRC32 insertion.
- Raw TX Mode for bit level packet control.
- Automatic GoodCRC response to received messages.
- Automatic BIST Error Count Message in BIST RX Mode.
- GoodCRCTimer implementation.
- Automatic retries with programmable retry count.
- Redundant receive packets automatically dropped in auto response mode.
- 74 byte TX queue.
- 128 byte RX queue.
- Programmable TX Bit-time. Allows for changing operating frequency.
- Programmable preamble length.
- BIST TX and RX logic.
- Programmable TX and RX queue modes - buffer mode and FIFO mode.
- CRC32 generator for TX.
- CRC32 calculator and comparator for RX.

### 11.1 PD MAC Transmitter

The PD MAC transmitter is comprised of three major blocks:

- **TX Queue:**  
The TX Queue is where software loads the message to be transmitted.
- **TX Control:**  
The TX Control implements the necessary control logic. It is responsible for reading the data from the TX queue and based on the data processing mode (automatic or raw), processing the data to make it suitable (nibbles with control information) for use by the TX Comm. It is also responsible for generating packet framing and terminating the packet in automatic mode, and generating messages for automatic response (GoodCRC and BIST Error Count). TX Control also handles the selection of the SOP type that is to be transmitted.
- **TX Comm:**  
The TX Comm is comprised of a TX CRC generator, a 4b5b encoder, serializer, preamble generator, and TX bit timer. It takes the nibble data, computes and inserts the CRC, 5b encodes, and generates the baseband serial data. Preamble insertion is also performed by this logic.

The TX Queue is where software loads the message to be transmitted.

The TX Control implements the necessary control logic. It is responsible for reading the data from the TX queue and based on the data processing mode (automatic or raw), processing the data to make it suitable (nibbles with control information) for use by the TX Comm. It is also responsible for generating packet framing and terminating the packet in automatic mode, and generating messages for automatic response (GoodCRC and BIST Error Count). TX Control also handles the selection of the SOP type that is to be transmitted.

The TX Comm is comprised of a TX CRC generator, a 4b5b encoder, serializer, preamble generator, and TX bit timer. It takes the nibble data, computes and inserts the CRC, 5b encodes, and generates the baseband serial data. Preamble insertion is also performed by this logic.

The following sub-sections describe the various blocks and sub-blocks in more detail. Some of the supported TX features are also described.

# UPD350

---

## 11.1.1 TX QUEUE

The TX Queue is where software loads the message to be transmitted. The following sub-sections describe the TX Queue in more detail.

### 11.1.1.1 TX Queue Modes of Operation

The TX Queue's write interface (MCU side) has two modes of operation: FIFO Mode and Buffer Mode.

#### 11.1.1.1.1 FIFO Mode

This mode is enabled by setting the [EN\\_FMQ](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#). In this mode, software writes data into the TX Queue like a FIFO. Software can use any offset address in the range of 1800h-1849h (although 1800h would be logical to use). The FIFO is 74 entries deep. Data written to the FIFO cannot be read back by software.

#### 11.1.1.1.2 Buffer Mode

This mode is selected when the [EN\\_FMQ](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#) is cleared (default after POR). In this mode, software writes data into the TX Queue as if it were writing to registers at different addresses. The offset address range is 1800h-1849h and the buffer has 74 locations.

Only byte access should be used while accessing the TX Queue in this mode. Note that buffer offset address 1800h contains the least-significant-byte (LSB) (byte that goes out first). Buffer offset address 0x049 has the most-significant-byte (MSB) (byte that goes out last).

Software can arbitrarily write or read any location in the buffer. Only one packet can be queued into the TX Queue at one time. Queuing of multiple packets is not supported.

### 11.1.1.2 TX Queue Data and Processing Modes

The data placed in the TX Queue depends on the selected processing mode. Two modes are supported: "Auto Mode Data Processing" (AMDP) and "Raw Mode Data Processing" (RMDP).

#### 11.1.1.2.1 Auto Mode Data Processing (AMDP)

This mode is selected by clearing the [EN\\_RMDP](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#). In this mode, only the message data (header and data objects) to be transmitted is queued in the TX Queue. Further, the data is queued as bytes. Since there is no framing information with the data, the [TX Packet Length Register \(TX\\_PKT\\_LEN\)](#) is used to provide information about the length of message data. Hardware uses this information to determine when and where to append the CRC. Packet framing (preamble, SOP, and EOP) is automatically inserted by the hardware.

#### 11.1.1.2.2 Raw Mode Data Processing (RMDP)

This mode is selected by setting the [EN\\_RMDP](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#). In this mode, software is responsible for constructing the entire packet including framing, except the preamble and CRC. Since framing involves K-codes, the data placed in the queue is coded with control information. The data in each byte of the queue is treated as a "nibble" of packet data that either needs to be 5b encoded by hardware or a K-codes that should be transmitted without any 5b encoding. There are also some special control bytes to control insertion of CRC and termination of packet.

When `tx_queue_data[5]` is "0" then `tx_queue_data[3:0]` is treated as 4b regular data. This 4b data goes through the CRC32 generator for CRC calculation and is encoded to 5b per Table 5-1 of USB PD Specification R1.0 ([Table 11-1](#) shows the 4b5b encoding).

When `tx_queue_data[5]` is "1" then `tx_queue_data[4:0]` is treated as 5b K-code (see [Table 11-1](#)). This data is eliminated from the CRC calculation and does not go through any further encoding prior to transmission.

The `tx_queue_data[7:0]` values of 8'hFF and 8'hFE have special meaning. 8'hFF implies that the packet data is done and hardware should now insert the calculated CRC32 (`TX_INS_CRC`). 8'hFE implies that the transmission should be stopped immediately (`TX_STOP`).

Note that in RMDP, software can compute its own CRC and place it in the Queue as encoded data. In this case, the `TX_INS_CRC` code would not be added to the Queue and instead software would proceed with adding the EOP and terminating the transfer with `TX_STOP`.

[Table 11-1](#) shows how the byte wide queued data is interpreted or encoded by the transmission logic in raw mode.

**TABLE 11-1: RAW MODE DATA ENCODING**

| tx_queue_data[5:0] | Encoded Symbol | tx_queue_data[5:0] | Encoded Symbol |
|--------------------|----------------|--------------------|----------------|
| 6'h00              | 5'b11110       | 6'h08              | 5'b10010       |
| 6'h01              | 5'b01001       | 6'h09              | 5'b10011       |
| 6'h02              | 5'b10100       | 6'h0A              | 5'b10110       |
| 6'h03              | 5'b10101       | 6'h0B              | 5'b10111       |
| 6'h04              | 5'b01010       | 6'h0C              | 5'b11010       |
| 6'h05              | 5'b01011       | 6'h0D              | 5'b11011       |
| 6'h06              | 5'b01110       | 6'h0E              | 5'b11100       |
| 6'h07              | 5'b01111       | 6'h0F              | 5'b11101       |

| tx_queue_data[5:0] | K-Code | Transmitted Data |
|--------------------|--------|------------------|
| 6'b1_11000         | Sync-1 | 5'b11000         |
| 6'b1_10001         | Sync-2 | 5'b10001         |
| 6'b1_01101         | EOP    | 5'b01101         |
| 6'b1_00111         | RST1   | 5'b00111         |
| 6'b1_11001         | RST2   | 5'b11001         |

| tx_queue_data[5:0] | Special Meaning |
|--------------------|-----------------|
| 8'hFE              | TX_STOP         |
| 8'hFF              | TX_INS_CRC      |

Note that the tx\_queue\_data[4:0] is passed as-is when tx\_queue\_data[5] is set to 1. Thus, software can send reserved symbols for error testing. The only caveat is that hardware cannot be used to generate and insert CRC. In this case, software should compute the necessary CRC32 and add it the data packet and skip the 0xFF code in the queue for CRC insertion.

### 11.1.1.2.3 TX Queue Programming Sequence - AMDP

The following sequence should be used when programming a sequence in AMDP. This example assumes hardware performs packet framing and CRC insertion.

1. Make sure the **GO** bit in the **TX Control Register B (TX\_CTL\_B)** is cleared, i.e., hardware is done with previous TX request.
2. If using FIFO mode, clear the TX Queue WRI pointer by writing a "1" to the **RST\_TXQ\_FIFO\_WRI\_PTR** bit of the **TX Control Register B (TX\_CTL\_B)**.
3. Write the two header bytes.
4. Write the payload data, if any.
5. Write the number of bytes to the **TX Packet Length Register (TX\_PKT\_LEN)**.
6. Check to see if it is OK to transmit via the **OK\_TO\_TX** bit in the **TX Control Register B (TX\_CTL\_B)**.
7. If **OK\_TO\_TX**: set the **GO** bit in the **TX Control Register B (TX\_CTL\_B)** to start transmission.  
Else: repeat step 6. Note: If an RX is in progress, the current TX may need to be abandoned.

# UPD350

---

## 11.1.1.2.4 TX Queue Programming Sequence - RMDP

The following sequence should be used when programming a sequence in RMDP. This example assumes hardware performs CRC insertion.

1. Make sure the **GO** bit in the **TX Control Register B (TX\_CTL\_B)** is cleared, i.e., hardware is done with previous TX request.
2. If using FIFO mode, clear the TX Queue WRI pointer by writing a “1” to the **RST\_TXQ\_FIFO\_WRI\_PTR** bit of the **TX Control Register B (TX\_CTL\_B)**.
3. Write the SOP K-Codes to the FIFO \*Sync-1, Sync-1, Sync-1, Sync-2).
4. Write two header bytes, splitting each byte into nibbles.
5. Write the payload data, if any, splitting each byte into nibbles.
6. Write the value “0xFF” to insert the CRC.
7. Write the EOP K-Code (EOP).
8. Write the value “0xFE” to terminate the transmission. Failure to write this value will cause transmission to continue indefinitely looping on the TX buffer.
9. Check to see if it is OK to transmit via the **OK\_TO\_TX** bit in the **TX Control Register B (TX\_CTL\_B)**.
10. If **OK\_TO\_TX**: set the **GO** bit in the **TX Control Register B (TX\_CTL\_B)** to start transmission.  
Else: repeat step 9. Note: If an RX is in progress, the current TX may need to be abandoned.

**Note:** The value of the **TX Packet Length Register (TX\_PKT\_LEN)** is ignored for this mode since hardware knows when to terminate the packet based on detection of **TX\_STOP** control code.

## 11.1.2 TX CONTROL

The TX Control implements the necessary control logic. It is responsible for reading the data from the TX queue and based on the data processing mode (automatic or raw), processing the data to make it suitable (nibbles with control information) for use by the TX Comm. It is also responsible for generating packet framing and terminating the packet in automatic mode, and generating messages for automatic response (GoodCRC and BIST Error Count). TX Control also handles the selection of the SOP type that is to be transmitted.

### 11.1.2.1 Transmit Requests

There are four sources of transmit requests:

- GoodCRC Ack from the receiver for a soft-reset
- GoodCRC Ack from the receiver for a normal packet
- BIST error count message from the BIST receiver
- Transmit go from the software

### 11.1.2.2 Transmit Aborts

Once packet transmission is initiated, the device will power up the analog and then wait for the bus turn-around timers and power-up timers to expire. During this wait, the transmission can be aborted by software and will be aborted by the device, when a good packet (including soft-reset), a hard reset, or a cable reset (if enabled and the SOP type of the pending TX is SOP', SOP", SOP'\_Debug or SOP''\_Debug) is received.

Once the bus turn-around time has expired (or if it was already expired) and the power up time is expired, the bus is checked for idle. If the bus is idle, the transmission is started. If the bus is not idle, the transmission is discarded and, typically, an abort status set. This discard can be disabled with the **WAIT4LINE\_IDLE** bit in the **TX Control Register A (TX\_CTL\_A)** for all packets and is also disabled for auto response triggered GoodCRC Acks for received soft-resets (unless the feature is disabled via the **DIS\_SPCL\_SR\_GCRC\_ACK** bit).

If the transmission is not discarded due to the bus being non-idle, the device waits for the bus to become idle and then, once again, waits the turn-around time. During the wait for bus idle, the transmission can be aborted by software and will be aborted by the hardware if a good packet, a hard reset or a cable reset (if enabled and the SOP type of the pending TX is SOP', SOP", SOP'\_Debug or SOP''\_Debug) is received.

Software issued hard and cable resets are not aborted due to received good packets, hard resets or cable resets.

Note that for a received good packet to abort a pending transmission, the SOP type of the received packet must match the SOP type of the pending transmission, or the SOP type of the received packet must be SOP with the SOP type of the pending transmission being non-SOP (the latter can be disabled via the [DIS\\_SOP\\_ABRTS\\_NON\\_SOP](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#)) and, for messages other than Soft-Reset, the received message ID must indicate a non-duplicated packet (Soft-Resets are never considered duplicates). Ping and GoodCRC messages do not cause a transmission to abort.

Separate TX interrupt abort bits and separate abort status registers are provided for software issued and auto-response packets.

### 11.1.2.3 Transmit Retries

Transmitted packets are retried under two scenarios: bus idle violations, and GoodCRC response timeout.

If the transmission is discarded due to the bus being non-idle, the option exists to retry instead of treating it as an abort. In order for this to occur, the packet must have been initiated by software, not be a hard or cable reset, auto response mode must be enabled, the retry count must be non-zero, and the [RETRY\\_ON\\_LINE\\_BUSY](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#) must be set. If after the specified number of retries, the transmission failed due to bus busy, the [TX\\_FAILED](#) status is set (not [TX\\_ABORTED](#)). Hard and Cable resets are not retried.

Following the transmission of a software initiated frame (other than Hard and Cable resets), the device will start a timer and wait for a GoodCRC response to be indicated by the receiver. This assumes retries and / or the wait for GoodCRC are enabled.

If a GoodCRC is received with the correct SOP type and message ID, then the wait is finished and the transmission is done. If a GoodCRC is received with the wrong SOP type or message ID, it is ignored by the transmitter (the transmitter is not even notified) and silently dropped by the receiver.

If the wait for CRC timer expires and the remaining retry count is non-zero, the original packet is re-transmitted. If the remaining retry count is zero, then the packet is not retried and a failed status is indicated.

The wait for GoodCRC will be aborted if any of the following are received:

- A hard reset
- A cable reset (if cable reset reception is enabled and the SOP type of the pending TX is SOP', SOP'', SOP'\_Debug or SOP''\_Debug)
- A soft-reset (if the SOP type of the RX is the same as that of the pending TX or the SOP type of the RX is SOP with the SOP type of the pending transmission being non-SOP)
- A good packet other than a GoodCRC or Ping (if the SOP type of the RX is the same as that of the pending TX or the SOP type of the RX is SOP with the SOP type of the pending transmission being non-SOP (the latter can be disabled via the [DIS\\_SOP\\_ABRTS\\_NON\\_SOP](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#)) and the package is not a duplicate message)

The latter two causes are considered to be protocol errors.

The wait for GoodCRC can also be aborted by software. An aborted wait for GoodCRC is not retried.

### 11.1.2.4 Transmitter Disable

In order to avoid a race condition where the software is currently issuing a transmit and the hardware is receiving a packet, the [EN\\_FWTX](#) bit in the [TX Parameters Register A \(TX\\_PARAM\\_A\)](#) is automatically cleared if a hard reset to a cable reset (if enabled - no SOP type checking is done since a transmission may not be pending) has been received (based on the [RX\\_CABLE\\_RST](#) and [RX\\_HARD\\_RST](#) bits in the [RX Interrupt Status Register \(RX\\_IRQ\\_STAT\)](#)) or if there is any data in the RX FIFO. Using the interrupt and FIFO status (level sensitive) instead of the even occurrence (edge) avoids another race condition where the software has set the [EN\\_FWTX](#) bit just following the event.

## 11.1.3 TX COMM

The TX Comm is responsible for taking the coded nibbles from TX Control, encoding it if necessary, and serializing to make it ready for transmission. It is responsible for preamble insertion, CRC calculation, and CRC insertion. It also provides the TX clock signal for the BMC encoder.

### 11.1.3.1 Preamble Insertion

The device automatically adds the alternating “0” and “1” preamble to the transmitted packet. When the transmission of the preamble is completed, data from TX Queue is processed under direction of the TX Control.

# UPD350

The number of preamble bits sent is programmable by the value of the [PREAMBLE\\_LEN](#) bit in the [TX Parameters Register B \(TX\\_PARAM\\_B\)](#).

**Note:** Setting the [PREAMBLE\\_LEN](#) field to an odd value will cause violation of the USB PD Specification which states "The preamble shall start with a "0" and shall end with a "1." An odd value will cause preamble to start with a value of "0" but it will also end in a value of "0." Setting this field to an odd value may or may not lead to functional issues. Therefore, this field should be set to an even value to remain USB PD Specification compliant.

## 11.1.3.2 TX CRC32

The transmit CRC is reset at the start of transmission (setting of the [GO](#) bit in the [TX Control Register B \(TX\\_CTL\\_B\)](#) or by triggering of automatic response by hardware).

The coded nibble data is streamed into the TX CRC32 one nibble at a time for CRC calculation. Only valid D-Code data is used in CRC calculation. All framing data (invalid D-Code) is excluded from CRC calculation.

**Note:** The CRC32 algorithm is described in the USB PD Specification.

## 11.1.3.3 TX Bit Timing

The baseband transmit signal bit time is controlled by the value in the [TX Bit-Time Count Register \(TX\\_BITTIME\\_CNT\)](#). This value determines the transmit data rate.

The count value is based on clock frequency and is given by:  
 $((\text{Clock Freq KHz} / \text{Bit Rate Kbps}) - 1)$

For example:

Clock Frequency = 48000KHz (48MHz)

Nominal Bit Rate = 300 Kbps

$\text{bit\_time\_cnt} = (48000 / 300) - 1 = 159$

## 11.1.4 AUTOMATIC RESPONSE MODE

The device supports an Automatic Response Mode (not to be confused with automatic-data processing mode). In this mode, the device will automatically send a GoodCRC message upon successful packet reception, or a BIST Error Count message upon reception of a BIST PRBS frame. This mode can be enabled by setting the [EN\\_AUTO\\_RSP\\_MODE](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#).

During normal auto-response, if the bus is found to be busy when the device attempts to send the auto-response (should not happen, except if there is noise) it will abort the transmission and the [AUTO\\_RSP\\_ABORTED](#) bit in the [TX Interrupt Status Register \(TX\\_IRQ\\_STAT\)](#) will be set. This behavior can be altered by setting the [WAIT4LINE\\_IDLE](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#). Setting this bit will force the device to wait until the bus becomes idle (refer to the [WAIT4LINE\\_IDLE](#) bit description for additional information). GoodCRCs and BIST Error Count messages are not retried even if [RETRY\\_ON\\_LINE\\_BUSY](#) in [TX\\_CTL\\_A](#) is set.

In USB Power Delivery Revision 1.0, Soft Reset had a one-strike rule and failure of Soft Reset led to Hard Reset, leading to the link being brought down, therefore the transmission of GoodCRC ACK in response to reception of Soft Reset is handled a little differently. If hardware finds that the line is busy when it attempts to send the GoodCRC ACK it will wait until the line becomes idle and then re-try the transmission. This process will happen indefinitely. This behavior is same as what happens to normal GoodCRC ACK when [WAIT4LINE\\_IDLE](#) bit is set. GoodCRCs are not retried even if the [RETRY\\_ON\\_LINE\\_BUSY](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#) is set. For USB Power Delivery Revision 3.0, Soft Resets are normally retried, therefore this function should be disabled via the [DIS\\_SPCL\\_SR\\_GCRC\\_ACK](#) bit.

The SOP type that is used for the automatically sent GoodCRC packet is the SOP type of the received packet (parsed by the receiver). The SOP type that is used for the BIST Error Count message, is selected via the [TX\\_SOP\\_SELECT](#) bit in the [TX Parameters Register A \(TX\\_PARAM\\_A\)](#).

For both GoodCRC and BIST Error Count messages, bit 8 in the packet header is taken from either the [PORT\\_POWER\\_ROLE](#) (for SOPs) or the [CABLE\\_PLUG](#) (for SOP', SOP" and \_debugs) bits within the [TX Parameters Register C \(TX\\_PARAM\\_C\)](#), depending on the SOP type that was received. Bit 5 in the packet header is taken from either the [PORT\\_DATA\\_ROLE](#) bit (for SOPs) or set to zero (for SOP', SOP" and \_debugs), depending on the SOP type that was received.

In order to avoid missing an auto response GoodCRC request, a flag is used. The flag is set with a request pulse from the receiver and is cleared when the response is sent or aborted. Along with the request flag being set, the SOP type and message ID of the request as well as the Soft Reset response indication are saved. In the event that there was a

pending auto response GoodCRC request and another packet was received resulting in another auto response GoodCRC request, the second request will replace the first request, unless the first request had a SOP type of SOP and the second request had a SOP type of SOP'\_Debug or SOP''\_Debug. This replacement occurs regardless of the setting of the [DIS\\_SOP\\_ABRTS\\_NON\\_SOP](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#). Even if a received packet does not abort a pending auto response, the pending auto response may get replaced by a new auto response.

## 11.1.5 AUTOMATIC RETRY MODE

The device also supports an Automatic Retry Mode. In this mode, when a GoodCRC message is not received in the appropriate time (i.e., before `CRCReceiveTimer` expires) the current message is retried.

Hardware will retry the message until the retry value specified in the [N\\_RETRY\\_CNT](#) field in the [TX Parameters Register C \(TX\\_PARAM\\_C\)](#) is satisfied. If the [N\\_RETRY\\_CNT](#) is set to zero, Automatic Retry Mode is disabled.

The number of retries used by the device to complete the transaction are tracked and made available to software via the [N\\_HW\\_RETRIES](#) field in the [TX Status Register \(TX\\_STAT\)](#).

An [N\\_RETRY\\_CNT](#) value of zero implies the message is attempted only once, i.e., hardware will not retry it. [N\\_RETRY\\_CNT](#) specifies the number of retries so the number of attempts is ([N\\_RETRY\\_CNT](#) + 1). Stated another way, if you want hardware to make "N" attempts to send a message then the [N\\_RETRY\\_CNT](#) field must be set to "N-1."

Reception of Hard Reset or Cable reset (when enabled and the SOP type of the pending TX is SOP', SOP'', SOP'\_Debug or SOP''\_Debug) from port partner, messages other than GoodCRC or Ping message (if the SOP types of the RX and TX match or if the SOP type of the RX is SOP with the SOP type of TX being non-SOP (the latter can be disabled via the [DIS\\_SOP\\_ABRTS\\_NON\\_SOP](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#)) and the packet was not a duplicate), or issuance of abort by software will terminate any pending auto retries.

Detection of bus collision will cause the device to abort the current transfer including any pending auto retries unless the [RETRY\\_ON\\_LINE\\_BUSY](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#) is set.

Note that disabling of automatic-retry by setting [N\\_RETRY\\_CNT](#) to zero will also disable the device's ability to wait for a GoodCRC message before a successful message transmission is indicated. This applies, for example, to the case when Soft Reset is transmitted. To circumvent this limitation, a [EXPECT\\_GOODCRC](#) bit in the [TX Parameters Register A \(TX\\_PARAM\\_A\)](#) is available. Setting this bit will cause the device to wait for a GoodCRC in response to a TX message, even when the [N\\_RETRY\\_CNT](#) field is set to zero.

**Note:** Setting [N\\_RETRY\\_CNT](#) to zero after the [GO](#) bit has been set will have no effect for the current transfer.

The expected message ID within the GoodCRC message is set by software via the [MSG\\_ID](#) field in the [TX Parameters Register A \(TX\\_PARAM\\_A\)](#). This is compared to the message ID within the received GoodCRC message.

The expected SOP type within the GoodCRC message is set by software via the [TX\\_SOP\\_SELECT](#) field in the [TX Parameters Register A \(TX\\_PARAM\\_A\)](#). This is compared to the SOP type received in the GoodCRC message. In order for the GoodCRC message to be received, it is assumed that the SOP type has been enabled via the [RX\\_SOP\\_ENABLE](#) field in the [RX Control Register B \(RX\\_CTL\\_B\)](#).

## 11.1.6 IFG TIMER

The TX turn-around timer is used to insure that a minimum bus idle time is guaranteed between packet reception and packet transmission, i.e., sending of GoodCRC message upon successful packet reception.

The value of this timer is programmable via the [TX Turnaround Time Register \(TX\\_TA\\_TIME\)](#). The value is specified in uSec. This timer uses the free-running 1us pulse so the value of this register should be 1 more than desired to ensure the minimum time.

## 11.1.7 CRC RECEIVE TIMER

This timer is enabled when the device is expected to wait for a GoodCRC ACK (i.e., automatic-retry mode is enabled by non-zero value in the [N\\_RETRY\\_CNT](#) field of the [TX Parameters Register C \(TX\\_PARAM\\_C\)](#) or if zero, [EXPECT\\_GOODCRC](#) bit in the [TX Parameters Register A \(TX\\_PARAM\\_A\)](#) is set) at the time transmission is requested. This timer can also be enabled for software usage via the [EN\\_CRC\\_RCV\\_TMR](#) bit in the [RX Control Register A \(RX\\_CTL\\_A\)](#).

If enabled, the timer starts whenever a TX packet transmission stops.

If software aborts a TX packet in between transmission with auto-retry mode enabled, this timer will not be triggered and will be disabled. If software aborts a TX packet with auto-retry disabled, then it should also disable the timer by clearing the [EN\\_CRC\\_RCV\\_TMR](#) bit in the [RX Control Register A \(RX\\_CTL\\_A\)](#).

# UPD350

---

The timeout value for CRCReceiveTimer is programmable via the **TRECEIVE** field in the **RX tReceive Time Register (RX\_TRECEIVE\_TIME)** in multiples of 10 uSec.

This timer can be used by software as the BISTReceiveErrorTimer in the BIST TX mode (the device does not automatically time BISTReceiveError) and as the CRCReceiveTimer when not using automatic retry or wait for GoodCRC modes.

## 11.1.8 ABORTING A TX IN PROCESS

Software can abort a transmission that has already started by issuing an abort via the **ABORT** bit in the **TX Control Register B (TX\_CTL\_B)**. The packet will be aborted as follows based on current phase of transmission:

- If packet transmission had not yet started because the device was waiting for the turn-around timer to expire or line to become idle, transmission will be aborted immediately.
- If the current phase is Preamble, the device will complete transfer of the current bit, append EOP, and turn the transmitter off.
- If the current phase is SOP, Data, or CRC, the device will complete transfer of the current nibble, append EOP, and turn the transmitter off.

A Hard Reset should follow this operation, which is the software's responsibility.

## 11.2 PD MAC Receiver

The PD MAC receiver is comprised of three major blocks:

- **RX Queue:**  
The RX Queue is where software reads the received messages.
- **RX Control:**  
The RX Control implements the necessary control logic. It is responsible for validating the received packet, updating the RX Queue status, and triggering automatic responses, if required.
- **RX Comm:**  
The RX Comm is comprised of the Clock and Data Recovery (CDR), RX DES (de-serializer) (serial-to-parallel converter, 4b5b decoder, and framing detector), RX CRC32 (CRC calculator, receive timer), and other logic to detect valid packet reception.

The RX Queue is where software reads the received messages.

The RX Control implements the necessary control logic. It is responsible for validating the received packet, updating the RX Queue status, and triggering automatic responses, if required.

The RX Comm is comprised of the Clock and Data Recovery (CDR), RX DES (de-serializer) (serial-to-parallel converter, 4b5b decoder, and framing detector), RX CRC32 (CRC calculator, receive timer), and other logic to detect valid packet reception.

The following sub-sections describe the various blocks and sub-blocks in more detail.

### 11.2.1 RX QUEUE

The decoded RX data (header, data objects, and CRC) is saved into an integrated 128 byte RX FIFO. The RX FIFO that is capable of storing multiple packets and provides read and write pointers.

Two bytes are added to the beginning of each packet. Byte 0 holds the packet status (SOP type and the legacy "buffer" valid bit) and byte 1 holds the packet length. An option exists to swap these values (length in byte 0, status in byte 1) and add one to the packet length (to account for the status byte). This option is used for an SMBus like block read where the first byte read indicates the length of the transfer and the remaining bytes (the status and the packet) follow. Note that the packet includes the 4 byte CRC, which is included in the length.


The following sub-sections present details of how the write and read interfaces to the FIFO appear.



## 11.2.1.1 RX FIFO Write Interface

Figure 11-1 shows how the write interface (from receive hardware's perspective) appears at various points of reception.


**FIGURE 11-1: WRITE INTERFACE VIEW OF RX FIFO**

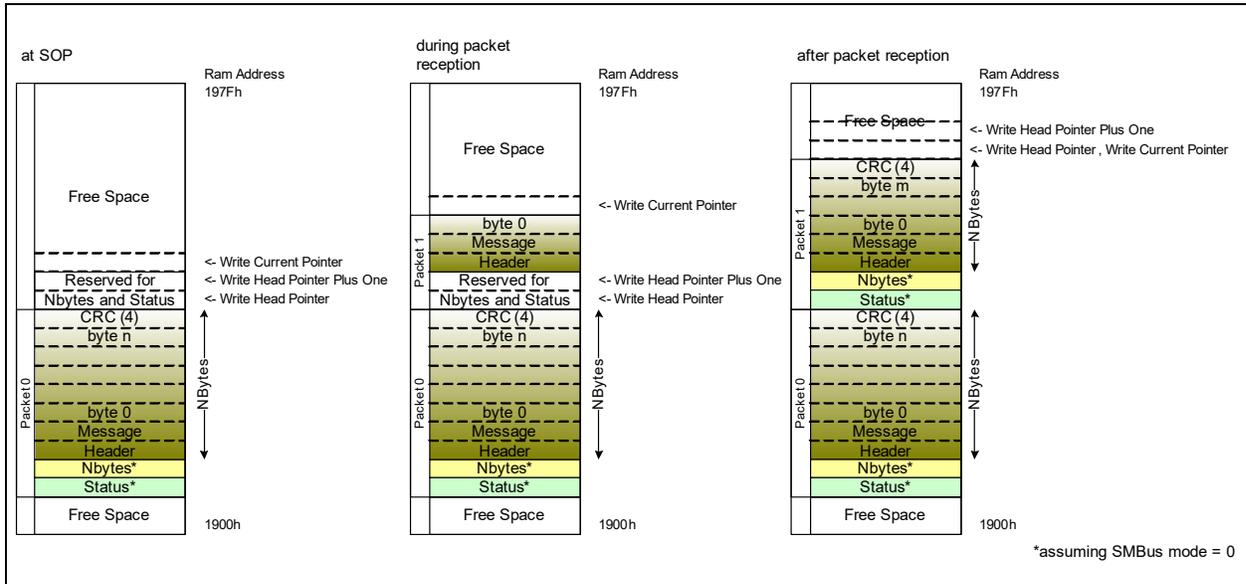

Each RX Packet is comprised of two bytes of control information and the received packet data. The Status byte indicates whether the data is valid and the SOP type that was received. A value of 0x00 in the status byte implies that the data is not valid (including the NBytes field). When bit 0 of the status byte is 1'b1, the Nbytes field indicates the length of the packet and bits 6:4 of the status byte indicates the SOP type that was received. An empty FIFO always returns a value of 0x00. However, the status byte should not be polled, but rather the `RX_FIFO_NOT_EMPTY` bit in the `RX Interrupt Status Register (RX_IRQ_STAT)` should be used. The valid bit is retained for legacy compatibility. When software reads the packet data from the FIFO, it should only read number of bytes indicated by Nbytes (in addition to the Nbytes and Status entries). Note that the byte count indicated by Nbytes includes the CRC32 data.

When SMBus mode is enabled (via the `EN_SMBUS_MODE` bit in the `RX Control Register A (RX_CTL_A)`), the Status and Nbytes fields are swapped and Nbytes is incremented by 1 to include the status byte. The swapping makes the (not-recommended) polling of the Status byte impossible for this mode. When software reads the packet data from the FIFO, it should only read number of bytes indicated by NBytes (in addition to the Nbytes entry). Figure 11-2 details the format while in SMBus mode.

**FIGURE 11-2: RX FIFO SMBUS MODE**

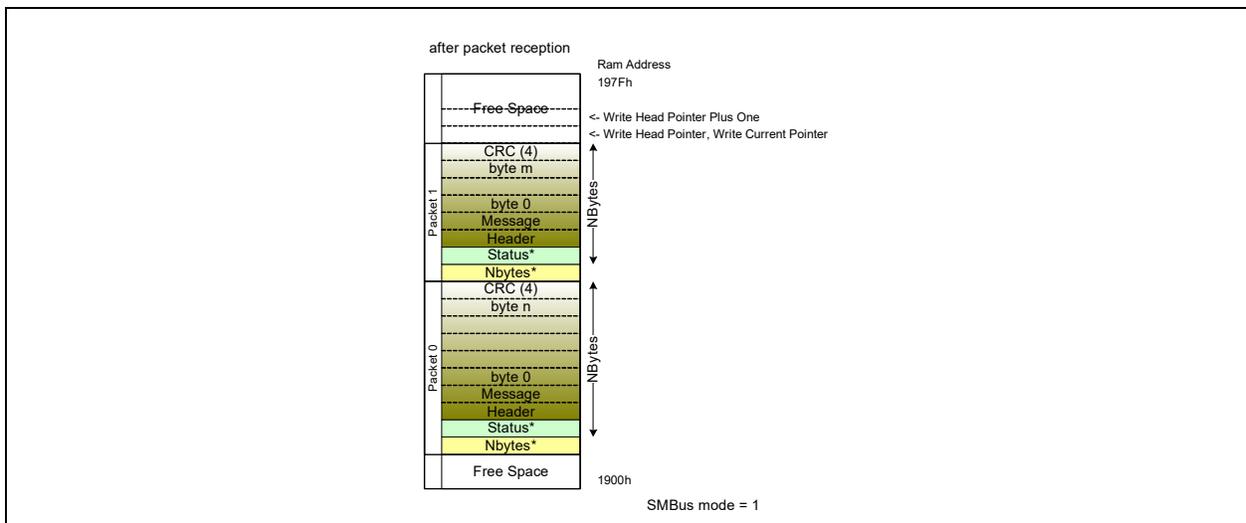

# UPD350

The packet status and NBytes format are shown in [Table 11-2](#) and [Table 11-3](#), respectively.

**TABLE 11-2: RXQ STATUS FIELD**

| Bits | Description   | Type |
|------|---|------|
| 7    | <b>RESERVED</b><br>Always reads 0.  | RO   |
| 6:4  | <b>RX_SOP_TYPE</b><br>This field indicates the SOP type that was received.<br>000b: SOP<br>001b: SOP'<br>010b: SOP"<br>011b: SOP'_Debug<br>100b: SOP''_Debug<br>101b - 111b: Reserved | RO   |
| 3:1  | <b>RESERVED</b>   | RO   |
| 0    | <b>Status</b><br>Status of queue data<br>0b: Data is invalid<br>1b: Data is valid   | RO   |

**TABLE 11-3: RXQ NUMBER OF BYTES (NBYTES) FIELD**

| Bits | Description  | Type |
|------|--|------|
| 0    | <b>NBYTES</b><br>If <a href="#">EN_SMBUS_MODE</a> is 0, this field represents the number of bytes of valid data in the packet.<br>If <a href="#">EN_SMBUS_MODE</a> is 1, this field represents the number of bytes of valid data in the packet plus 1. | RO   |

When the device detects valid start-of-packet (SOP) signaling, the current write pointer is set to the write head pointer plus 2. As packet data is received, it is written into the FIFO at the current write pointer and following each write the current write pointer is incremented. The current write pointer points to the next location to be written. Upon reaching the top of the RAM, the current write pointer wraps to 0. The byte count is maintained by the RX control block.

When a valid EOP is received and a good CRC residue is indicated by CRC logic, hardware will write the status (valid bit and received SOP type) to the location addressed by the write head pointer and the number of received bytes to the location addressed by the write head pointer plus one. SMBus mode will swap the data (and increment the number of bytes). Following the writing of the status and length, the write head pointer is updated to the current write pointer and the write head pointer plus one is updated to the current write pointer plus 1 (accounting for the wrap at the top of the RAM).

If a valid EOP is not received and the bus becomes idle, then an abnormal termination is detected. In this case, the packet is dropped, i.e., the device will not update the NBytes location or the Status location.

If a valid EOP is detected but the CRC generator indicates an invalid CRC, then the packet is corrupted. The device will drop the packet and not update the NBytes location or the Status location.

If a more data is received than will fit in the FIFO, then an overrun is detected. The excess data does not get written into the FIFO and the current write pointer is not incremented.

A separate test is made at the start of the packet to determine if there is sufficient room for the status and length bytes. In the event of a "no room for header" condition, an overrun is detected. The excess data does not get written into the FIFO and the current write pointer is not initialized.

If a packet has reached the maximum size allowed (as specified by the [RX Maximum Packet Size Register \(RX\\_MAX\\_SIZE\)](#)) and more data is received, then an oversize is detected. The excess data does not get written into the FIFO and the current write pointer is not incremented.

All pointers consist of a RAM address and a wrap indication. The wrap indication is toggled each time the pointer wraps past the top of the RAM. The wrap indication is used in the full, “no room for header” and empty comparisons to distinguish between the write pointers being a full RAM size ahead of the read pointer (full conditions in which case the wrap toggles would be opposite) and the write pointers being equal to the read pointer (empty condition in which case the wrap toggles would be equal).

All pointers and status bits are readable by the software. All pointers and wrap around status bits are writable by the software. Software is responsible for maintaining coherency between the pointer and the wrap toggle values.

The FIFO pointers can be reset by setting and clearing the [RST\\_RECEIVER](#) bit in the [RX Control Register A \(RX\\_CTL\\_A\)](#).

#### 11.2.1.1.1 Duplicate/Repeated Packet Handling

When the device is setup for automatic-response (sending of GoodCRC message), it may receive a packet multiple times because the GoodCRC response was lost. If the original packet was received successfully then the subsequent messages of that SOP type with matching message IDs are automatically dropped.

What the device does depends on the CRC status from CRC generator at EOP. If the CRC is good and the message ID from current message matches that of the previous message (stored MSG\_ID per SOP type), the device will not update the Packet's status and length locations nor will it update the write head pointer and write head pointer plus one. The FIFO space will be reclaimed at the start of the next packet. The [RX\\_PKT\\_DROPPED](#) bit in the [RX Error Interrupt Status Register \(RX\\_ERR\\_IRQ\\_STAT\)](#) will be set to indicate this condition. The device will then resend a GoodCRC response. If, however, the CRC generator indicates a bad CRC, or EOP is not received, the device will process the packet like a corrupted packet. The stored MSG\_ID will not be updated.

Note that a duplicate packet is dropped if Automatic Retry was enabled, the transmitter was waiting for a GoodCRC and a message other than a GoodCRC was received (a protocol error).

The device maintains individual count of duplicate packets dropped ([RX Duplicate Packet Count Register \(RX\\_DUP\\_PKT\\_CNT\)](#)) and corrupt packets received ([RX BadCRC Packet Count Register \(RX\\_BADCRC\\_PKT\\_CNT\)](#)). If either of these counts exceed 127, the [DBG\\_EVENT](#) bit in the [RX Error Interrupt Status Register \(RX\\_ERR\\_IRQ\\_STAT\)](#) will be set.

#### 11.2.1.1.2 GoodCRC Packet Storing and Dropping

In the case where Automatic Retry is enabled, and the transmitter was waiting for a GoodCRC, the GoodCRC response will be dropped. The device will not update the packet's status and length locations nor will it update the write head pointer and write head pointer plus one. The FIFO space will be reclaimed at the start of the next packet. Note that the GoodCRC response is dropped even if the SOP type or message ID did not match the expected value.

[Table 11-4](#) summarizes the conditions and results for storing or dropping good packets.

# UPD350

**TABLE 11-4: CONDITIONS AND RESULTS FOR DROPPING GOOD PACKETS**


| Event                            |  | Result                               |   |
|----------------------------------|--|--------------------------------------|---|
| IF<br>Expecting GoodCRC          | Received soft-reset with SOP of RX matching SOP of TX  | Packet stored with error status      | <a href="#">RX_PKT_STAT[2]</a> (PCOL_ERROR)       |
|                                  | Received GoodCRC with correct SOP type and message ID  | Packet dropped                       |   |
|                                  | Received GoodCRC with wrong SOP type or wrong message ID   |                                      |   |
|                                  | Received other than GoodCRC or Ping with SOP or RX matching SOP of TX and first message of this SOP type or message ID not matching last message ID of this SOP type (i.e., not a duplicate) | Packet stored, with error status     | <a href="#">RX_PKT_STAT[2]</a> (PCOL_ERROR)       |
| ELSE IF<br>Auto Response Enabled | Received soft-reset  | Packet stored, message ID saved      |   |
|                                  | Received other than GoodCRC or soft-reset and first message of this SOP type   |                                      |   |
|                                  | Received other than GoodCRC or soft-reset and message ID does not match last message ID of this SOP type   |                                      |   |
|                                  | Received other than GoodCRC or soft-reset and message ID matches last message ID of this SOP type  | Packet dropped with duplicate status | <a href="#">RX_PKT_STAT[1]</a> (DUPLICATE_PACKET) |
|                                  | Received GoodCRC   | Packet stored                        |   |
| ELSE                             | Received other than GoodCRC (including soft reset)   | packet stored, message ID saved      |   |
|                                  | Received GoodCRC   | Packet stored                        |   |

**Note:** If auto-response is enabled, any time a packet other than a GoodCRC is stored, a GoodCRC response is transmitted.

## 11.2.1.2 RX FIFO Read Interface

Figure 11-3 shows how the read interface appears at various points of the software read.

**FIGURE 11-3: READ INTERFACE VIEW OF RX FIFO**

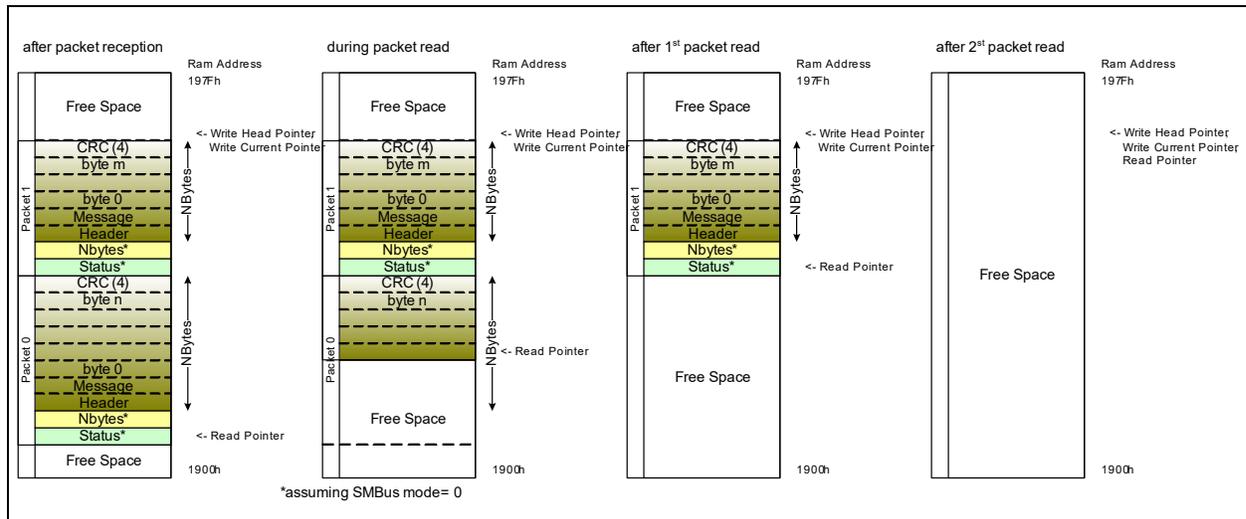

The RX FIFO read interface always uses a FIFO access mode. The read is destructive, returning the current data and releasing the FIFO space. Although the software may rewind the read pointer for test purposes, there is no guarantee that the data has not been overwritten.

After determining the validity of data in the FIFO queue by reading the [RX\\_FIFO\\_NOT\\_EMPTY](#) bit in the [RX Interrupt Status Register \(RX\\_IRQ\\_STAT\)](#), software may read the data from the RX FIFO. Software may read the entire packet without the need to recheck the [RX\\_FIFO\\_NOT\\_EMPTY](#) bit.

Although written as each byte is received, valid data in the FIFO is only indicated once the entire packet is received and validated.

Depending on the setting of the [EN\\_SMBUS\\_MODE](#) bit in the [RX Control Register A \(RX\\_CTL\\_A\)](#), either the status or the Nbytes field is read first, followed by the other. If SMBus mode is enabled, the Nbytes field is read first and will include the status byte, otherwise it is read second and just indicates the packet length. Note that the packet includes the 4 byte CRC and the length includes this.

As the FIFO is accessed, packet data is read from the FIFO at the read pointer and following each read the read pointer is incremented. The read pointer points to the next location to be read. Upon reaching the top of the RAM, the read pointer wraps to 0.

The FIFO space is released as the packet is read. There is no need for software to specifically release the buffer space.

If software needs to flush a packet without reading the data, it may do so by writing the [RX FIFO Read Pointer Register \(RX\\_FIFO\\_RD\\_PTR\)](#) and [RX FIFO Read Pointer Control Bits Register \(RX\\_FIFO\\_RD\\_PTR\\_CTL\\_BITS\)](#). Software should add the appropriate value to the read pointer, taking into account the amount of data already read. Wrap at the top of the RAM must be accounted, for both the read pointer and the [RX\\_FIFO\\_RX\\_PTR\\_WRAP](#) control bit. In order to maintain coherency, the device will hold a write to the [RX FIFO Read Pointer Register \(RX\\_FIFO\\_RD\\_PTR\)](#) in a temporary register and transfer it to the actual register when the [RX FIFO Read Pointer Control Bits Register \(RX\\_FIFO\\_RD\\_PTR\\_CTL\\_BITS\)](#) is written.

Although accessed as a FIFO, software can use any offset address in the 128 byte FIFO address range.

Although not recommended, the software can read from the FIFO if it is empty. The returned data will be 0 and the FIFO will not underrun.

All pointers consist of a RAM address and a wrap indication. The wrap indication is toggled each time the pointer wraps past the top of the RAM. The wrap indication is used in the full, "no room for header" and empty comparisons to distinguish between the write pointers being a full RAM size ahead of the read pointer (full conditions in which case the wrap toggles would be opposite) and the write pointers being equal to the read pointer (empty condition in which case the wrap toggles would be equal).

# UPD350

---

All pointers and status bits are readable by the software. All pointers and wrap around status bits are writable by the software. Software is responsible for maintaining coherency between the pointer and the wrap toggle values.

The FIFO pointers can be reset by setting and clearing the [RST\\_RECEIVER](#) bit in the [RX Control Register A \(RX\\_CTL\\_A\)](#).

Each entry in the RX FIFO represents a byte of received data. Data written to the FIFO is the header, the payload, and the CRC32. As stated earlier, only 5b symbols that correspond to valid D-codes are processed and written to the RX Queue. K-Codes cannot be passed to the RX Queue, i.e., there is no “Raw Mode” receive capability. Software will see de-framed packets only.

As mentioned earlier, the data in FIFO is the actual data and not symbols so it can be processed by software directly. Corrupted packets are not written to the Queue.

## 11.2.2 RX CONTROL

RX Control implements the logic necessary for validating a received packet, updating the RX Queue status, and triggering automatic responses, if required.

### 11.2.2.1 Duplicate Packet Detection

For duplicate packet detection, the device maintains the last message ID received per SOP type. A flag (`first_msg`) is maintained per SOP type and indicates if the stored last message ID is valid (there has been a previous packet). This information is used when a good packet is received to detect if the message ID matches the last one received for that SOP type.

The device stores the current message ID into the appropriate last message ID (as selected by the SOP of the current received packet). The message ID and flag for a specified SOP type can be reset via the [RX Message ID Stored Register \(RX\\_MSG\\_ID\\_STORED\)](#). All bits are cleared when software issues a [SW\\_RESET](#) or [PD\\_RESET](#) via the [Reset Control Register \(RESET\\_CTL\)](#).

### 11.2.2.2 RX Control of Transmit Abort

Although the actual aborting of pending transmission is done by the Transmit Control block, it is the RX Control block that makes the decision.

For pending transmissions (transmission triggered but waiting for bus idle or the bus turnaround time), the RX control block generates a pulse at the EOP. It checks 1) that the packet is a good packet (good CRC, proper nibble alignment and no symbol errors), 2) that the packet is not a Ping or GoodCRC message, 3a) that the SOP type of the received packet matches the SOP type of the pending transmission or 3b) the SOP type of the received packet is SOP with the SOP type of pending transmission being non-SOP (the latter can be disabled via the [DIS\\_SOP\\_ABRPTS\\_NON\\_SOP](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#)) and 4) that the packet is not a duplicate or is a Soft-Reset message.

For completed transmissions that are waiting for a GoodCRC to be returned, the RX Control checks 1) that the packet is a good packet (good CRC, proper nibble alignment and no symbol errors), 2) that the packet is a Soft-Reset or is not a GoodCRC message, 3a) that the SOP type of the received packet matches the SOP type of the pending transmission or 3b) the SOP type of the received packet is SOP with the SOP type of pending transmission being non-SOP (the latter can be disabled via the [DIS\\_SOP\\_ABRPTS\\_NON\\_SOP](#) bit in the [TX Control Register A \(TX\\_CTL\\_A\)](#)) and 4) that the packet is not a duplicate.

## 11.2.3 RX COMM

The RX Comm is comprised of the clock and data recovery (CDR), RX DES (de-serializer) (serial-to-parallel converter, 4b5b decoder, and framing detector), RX CRC32 (CRC calculator, receive timer), and other logic to detect valid packet reception.

### 11.2.3.1 CDR

The BMC decodes the received data and outputs the bit stream signal. This signal is applied to the input of CDR module which locks (period and phase) on to the data stream during the preamble phase and outputs the serial data and a capture strobe centered in the data window.

The CDR relies on edge-to-edge time measurement (two bit-times) during the preamble phase for period lock. An average of four successive good period measurements is used for period lock. Valid period measurement is determined by the range specified by the [RX Maximum Bit-Rate Bit Period Count Register \(RX\\_BIT\\_PER\\_CNT\\_MAX\\_BR\)](#) and [RX Minimum Bit-Rate Bit Period Count Register \(RX\\_BIT\\_PER\\_CNT\\_MIN\\_BR\)](#). Phase lock is achieved by comparing in-phase and quadrature data samples to determine whether the phase needs to be advanced or retarded.

## 11.2.3.2 RX DES (De-serializer)

The RX DES converts the received serial bit stream from the CDR into 5bit symbols, identifies and generates start-of-packet/end-of-packet/hard and cable reset signals, and decodes the symbols to 4b data.

**Note:** Note that only valid D-codes are processed to be written to the RX Queue. An invalid/reserved code is simply dropped.

### 11.2.3.2.1 SOP Detection

The SOP is detected by comparing the four most recently received 5-bit symbols to the expected SOP pattern. Per the USB PD specification, detection of 3 of the 4 SOP symbols is sufficient. This is done by creating four unique groups each containing three received symbols ({a,b,c}, {a,b,d}, {a,c,d} and {b,c,d}) with each group independently compared to its respective symbols. Any successful match indicates an SOP.

There is a separate compare for each SOP type, enabled by the [RX\\_SOP\\_ENABLE](#) field in the [RX Control Register B \(RX\\_CTL\\_B\)](#). The results are OR'ed. The SOP type is saved and used in the packet processing (auto reply, auto response and queue status). Software is allowed to change the [RX\\_SOP\\_ENABLE](#) field at any time. The internal value is held during active receive and updated from the register during idle time.

For generation of the [RX\\_SOP](#) interrupts in the [RX SOP Interrupt Status Register \(RX\\_SOP\\_IRQ\\_STAT\)](#), each SOP detection is decoded but is not AND'ed with its [RX\\_SOP\\_ENABLE](#).

### 11.2.3.2.2 Reset Detection

Hard and Cable resets are detected by comparing the four most recently received 5-bit symbols to the expected patterns. Per the USB PD specification, detection of 3 of the 4 symbols is sufficient. This is done by creating four unique groups each containing three received symbols ({a,b,c}, {a,b,d}, {a,c,d} and {b,c,d}) with each group independently compared to its respective symbols. Any successful match indicates a Hard or Cable reset respectively.

Cable Reset must be enabled via the [EN\\_CABLE\\_RESET](#) bit in the [RX Control Register A \(RX\\_CTL\\_A\)](#).

## 11.2.3.3 RX CRC32

The receive data CRC32 is computed by the RX CRC32 module. The same logic used for TX CRC generation is utilized to calculate the RX CRC.

The coded nibble data is streamed into the RX CRC32 one nibble at a time for CRC calculation. When the packet ends, the output of this module represents the computed CRC for the received packet. A value of 0xC704\_DD7B indicates a good CRC. Detection of a valid EOP symbol latches the CRC value. The latched value is compared with the expected good CRC residue value, which is used by the RX Queue to determine if the RX Queue status should be updated to reflect valid data or not.

# UPD350

---

## 11.3 PD MAC BIST

The PD MAC incorporates BIST functions as defined in the USB PD Specification. It is comprised of a TX and RX block. The BIST TX block contains a PRBS (Pseudo Random Binary Sequence) generator, BIST pattern generation logic, and its own bit-timing logic. The SOP type used by TX BIST Test Frames is a 20-bit static vector which is created by multiplexing between the five SOP ordered sets based on a register setting. The resultant 20-bit vector is simply bit selected when the packet is transmitted.

BIST TX is entered when the [BIST\\_EN](#) bit in the [BIST Control Register A \(BIST\\_CTL\\_A\)](#) is set along with [BIST\\_RX\\_EN](#) being clear. The BIST TX mode (TX type) is set using the [BIST\\_TX\\_MODE](#) field of the [BIST Control Register A \(BIST\\_CTL\\_A\)](#) and is started by first using the [BIST\\_TX\\_RST](#) bit and then by using the [BIST\\_TX\\_START/BIST\\_TX\\_STATUS](#) bit of the [BIST Control Register B \(BIST\\_CTL\\_B\)](#). Continuous BIST transmission (modes 0, 1, 2, 3, and 5) should be stopped by first using the [BIST\\_TX\\_RST](#) bit before clearing the [BIST\\_EN](#) bit. It may take up to 1 bit time for the TX to stop. [BIST\\_EN](#) should not be cleared until after this time.

The BIST RX block contains a PRBS generator and bit error detection logic. BIST RX is used only during the BIST Receiver Test. BIST RX is entered when the [BIST\\_EN](#) bit in the [BIST Control Register A \(BIST\\_CTL\\_A\)](#) is set along with [BIST\\_RX\\_EN](#). The BIST error counter is reset using the [BIST\\_CLR\\_ERR\\_CNT](#) bit of the [BIST Control Register B \(BIST\\_CTL\\_B\)](#).

For information on the BIST registers, refer to [Section 11.4.5, "PD MAC BIST Registers,"](#) on page 170.



## 11.4 Power Delivery MAC Registers

This section details the Power Delivery MAC registers. For an overview of the entire device register map, refer to [Section 4.0, "Register Map,"](#) on page 18.

**TABLE 11-5: POWER DELIVERY MAC REGISTER MAP**

| Address       | Register Name (Symbol)  |
|---------------|---|
| 1800h – 1849h | PD MAC TX Queue/FIFO (74 bytes) (See <a href="#">Section 11.1.1, "TX Queue"</a> for additional info)  |
| 184Ah – 18FFh | Reserved for future expansion   |
| 1900h – 197Fh | PD MAC RX FIFO (128 bytes) (See <a href="#">Section 11.2.1, "RX Queue"</a> for additional info)       |
| 1980h – 19FFh | Reserved for future expansion   |
| 1A00h         | <a href="#">TX Control Register A (TX_CTL_A)</a>  |
| 1A01h         | <a href="#">TX Status Register (TX_STAT)</a>  |
| 1A02h         | <a href="#">TX Parameters Register C (TX_PARAM_C)</a>   |
| 1A03h         | <a href="#">TX Packet Length Register (TX_PKT_LEN)</a>  |
| 1A04h         | <a href="#">TX Parameters Register A (TX_PARAM_A)</a>   |
| 1A05h         | <a href="#">TX Control Register B (TX_CTL_B)</a>  |
| 1A06h         | <a href="#">TX Parameters Register B (TX_PARAM_B)</a>   |
| 1A07h         | <a href="#">TX Bit-Time Count Register (TX_BITTIME_CNT)</a>   |
| 1A08h         | <a href="#">TX Turnaround Time Register (TX_TA_TIME)</a>  |
| 1A09h         | <a href="#">TX Abort Status Register (TX_ABORT_STAT)</a>  |
| 1A0Ah         | <a href="#">TX Auto-Response Abort Status Register (TX_AR_ABORT_STAT)</a>                             |
| 1A0Bh         | <a href="#">TX Power Up Time Register (TX_POWER_UP_TIME)</a>  |
| 1A0Ch         | <a href="#">TX Power Down Time Register (TX_POWER_DOWN_TIME)</a>                                      |
| 1A0Dh – 1A3Fh | Reserved for future expansion   |
| 1A40h         | <a href="#">RX Control Register A (RX_CTL_A)</a>  |
| 1A41h         | <a href="#">RX Control Register B (RX_CTL_B)</a>  |
| 1A42h         | <a href="#">RX Maximum Bit-Rate Bit Period Count Register (RX_BIT_PER_CNT_MAX_BR)</a>                 |
| 1A43h         | <a href="#">RX Minimum Bit-Rate Bit Period Count Register (RX_BIT_PER_CNT_MIN_BR)</a>                 |
| 1A44h         | <a href="#">RX Status Register (RX_STAT)</a>  |
| 1A45h         | <a href="#">RX Packet Status Register (RX_PKT_STAT)</a>   |
| 1A46h         | <a href="#">RX tReceive Time Register (RX_TRECEIVE_TIME)</a>  |
| 1A47h         | <a href="#">RX BadCRC Packet Count Register (RX_BADCRC_PKT_CNT)</a>                                   |
| 1A48h         | <a href="#">RX Duplicate Packet Count Register (RX_DUP_PKT_CNT)</a>                                   |
| 1A49h         | <a href="#">RX Hard Reset Detection Window Register (RX_HR_DET_WINDOW)</a>                            |
| 1A4Ah         | <a href="#">RX Last GoodCRC Packet High Byte Register (RX_LAST_GCRC_PKT_HI)</a>                       |
| 1A4Bh         | <a href="#">RX Last GoodCRC Packet Low Byte Register (RX_LAST_GCRC_PKT_LO)</a>                        |
| 1A4Ch         | <a href="#">RX Message ID Stored Register (RX_MSG_ID_STORED)</a>                                      |
| 1A4Dh         | <a href="#">RX Maximum Packet Size Register (RX_MAX_SIZE)</a>   |
| 1A4Eh – 1A4Fh | Reserved for future expansion   |
| 1A50h         | <a href="#">RX FIFO Read Pointer Register (RX_FIFO_RD_PTR)</a>  |
| 1A51h         | <a href="#">RX FIFO Read Pointer Control Bits Register (RX_FIFO_RD_PTR_CTL_BITS)</a>                  |
| 1A52h         | <a href="#">RX FIFO Write Current Pointer Register (RX_FIFO_WR_CURRENT_PTR)</a>                       |
| 1A53h         | <a href="#">RX FIFO Write Current Pointer Control Bits Register (RX_FIFO_WR_CURRENT_PTR_CTL_BITS)</a> |
| 1A54h         | <a href="#">RX FIFO Write Head Pointer Register (RX_FIFO_WR_HEAD_PTR)</a>                             |
| 1A55h         | <a href="#">RX FIFO Write Head Pointer Control Bits Register (RX_FIFO_WR_HEAD_PTR_CTL_BITS)</a>       |
| 1A56h         | <a href="#">RX FIFO Write Head Pointer Plus One Register (RX_FIFO_WR_HEAD_PTR_PLUS_ONE)</a>           |

# UPD350

**TABLE 11-5: POWER DELIVERY MAC REGISTER MAP (CONTINUED)**

| Address       | Register Name (Symbol)  |
|---------------|---|
| 1A57h         | RX FIFO Write Head Pointer Plus One Control Bits Register (RX_FIFO_WR_HEAD_PTR_PLUS_ONE_CTL_BITS) |
| 1A58h – 1A7Fh | Reserved for future expansion   |
| 1A80h         | MAC Interrupt Status Register (MAC_IRQ_STAT)  |
| 1A81h         | TX Interrupt Status Register (TX_IRQ_STAT)  |
| 1A82h         | RX Interrupt Status Register (RX_IRQ_STAT)  |
| 1A83h         | RX Error Interrupt Status Register (RX_ERR_IRQ_STAT)  |
| 1A84h         | Power Management Interrupt Status Register (PM_IRQ_STAT)  |
| 1A85h         | RX SOP Interrupt Status Register (RX_SOP_IRQ_STAT)  |
| 1A86h         | TX Interrupt Enable Register (TX_IRQ_EN)  |
| 1A87h         | RX Interrupt Enable Register (RX_IRQ_EN)  |
| 1A88h         | RX Error Interrupt Enable Register (RX_ERR_IRQ_EN)  |
| 1A89h         | Power Management Interrupt Enable and Control Register (PM_IRQ_EN)                                |
| 1A8Ah         | RX SOP Interrupt Enable Register (RX_SOP_IRQ_EN)  |
| 1A8Bh         | Reset Control Register (RESET_CTL)  |
| 1A8Ch – 1A9Fh | Reserved for future expansion   |
| 1AA0h         | BMC RX High Level Full Bit Maximum Time Register (BMC_RX_HI_FB_MAX_TIME)                          |
| 1AA1h         | BMC RX High Level Full Bit Minimum Time Register (BMC_RX_HI_FB_MIN_TIME)                          |
| 1AA2h         | BMC RX Low Level Full Bit Maximum Time Register (BMC_RX_LO_FB_MAX_TIME)                           |
| 1AA3h         | BMC RX Low Level Full Bit Minimum Time Register (BMC_RX_LO_FB_MIN_TIME)                           |
| 1AA4h         | BMC RX High Level Half Bit Maximum Time Register (BMC_RX_HI_HB_MAX_TIME)                          |
| 1AA5h         | BMC RX High Level Half Bit Minimum Time Register (BMC_RX_HI_HB_MIN_TIME)                          |
| 1AA6h         | BMC RX Low Level Half Bit Maximum Time Register (BMC_RX_LO_HB_MAX_TIME)                           |
| 1AA7h         | BMC RX Low Level Half Bit Minimum Time Register (BMC_RX_LO_HB_MIN_TIME)                           |
| 1AA8h         | BMC RX Squelch Assert Time Register (BMC_RX_SQL_ASSERT_TIME)                                      |
| 1AA9h         | BMC RX Squelch Hold Time Register (BMC_RX_SQL_HOLD_TIME)  |
| 1AAAh – 1AAFh | Reserved for future expansion   |
| 1AB0h         | BMC TX Bit-Time Count Register (BMC_TX_BITTIME_CNT)   |
| 1AB1h         | BMC Transition Window Time Register (BMC_TRANSITION_WINDOW_TIME)                                  |
| 1AB2h – 1ABFh | Reserved for future expansion   |
| 1AC0h         | BIST Control Register A (BIST_CTL_A)  |
| 1AC1h         | BIST Control Register B (BIST_CTL_B)  |
| 1AC2h         | BIST Error Count High Register (BIST_ERR_CNT_HI)  |
| 1AC3h         | BIST Error Count Low Register (BIST_ERR_CNT_LO)   |
| 1AC4h – 1AC6h | Reserved for future expansion   |
| 1AC7h         | BIST RX Status Register (BIST_RX_STAT)  |
| 1AC8h – 1BFFh | Reserved for future expansion   |

**Note:** RESERVED address space must not be written under any circumstances. Failure to heed this warning may result in untoward operation and unexpected results.

## 11.4.1 PD MAC TX REGISTERS

The following sub-sections describe the various registers associated with the PD MAC TX logic.

### 11.4.1.1 TX Control Register A (TX\_CTL\_A)

Address: [1A00h](#) Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | <b>RESERVED</b>   | RO   | -       |
| 6    | <p><b>RETRY_ON_LINE_BUSY</b><br/>Normally hardware will abort a TX packet (including all retry attempts) if the line is Busy when hardware attempts to transmit the packet. (Note that transmission of GoodCRC ACK in response for Soft Reset is an exception to this, see the <a href="#">DIS_SPCL_SR_GCRC_ACK</a> bit.)</p> <p>Setting this bit will force hardware to not completely abort the transmission, but rather it will retry the packet up to <a href="#">N_RETRY_CNT</a> times. Failure after <a href="#">N_RETRY_CNT</a> times results in <a href="#">TX_FAILED</a> status in the <a href="#">TX Interrupt Status Register (TX_IRQ_STAT)</a> rather than a <a href="#">TX_ABORTED</a> status.</p> <p>The following conditions will still abort the TX packet:</p> <ul style="list-style-type: none"> <li>• Hard reset received</li> <li>• Cable reset received (if enabled and the SOP type of the pending TX is SOP', or SOP", SOP' _Debug or SOP" _Debug)</li> <li>• Good, non-duplicate, non-Ping, non-GoodCRC packet (including soft-reset) received with RX and TX SOP types matching or RX SOP type equaling SOP with TX SOP type not equaling SOP (can be disabled)</li> <li>• Software sets the <a href="#">ABORT</a> bit in the <a href="#">TX Control Register B (TX_CTL_B)</a>.</li> </ul> | R/W  | 0b      |
| 5    | <p><b>DIS_SOP_ABRTS_NON_SOP</b><br/>Normally, when a SOP packet is received, a pending non-SOP packet (including wait for a GoodCRC) will be aborted. When this bit is set, a non-SOP packet will only be aborted by a packet with the same non-SOP type.</p>   | R/W  | 0b      |
| 4    | <p><b>DIS_SPCL_SR_GCRC_ACK</b><br/>Disable special treatment of GoodCRC ACK in response to Soft Reset. By default, in auto-response mode a line busy condition will not abort GoodCRC ACK transmission in response to Soft Reset reception. Setting this bit will disable this behavior and instead GoodCRC ACK transmission for Soft Reset will be processed the same as GoodCRC ACK for other packets.</p> <p><b>Note:</b> When this bit is set, the <a href="#">WAIT4LINE_IDLE</a> bit will affect GoodCRC ACK for Soft Reset as well.</p>   | R/W  | 0b      |

# UPD350

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 3    | <p><b>WAIT4LINE_IDLE</b><br/>Normally hardware will abort a TX packet (including all retry attempt) if the line is Busy when hardware attempts to transmit the packet. (Note that transmission of GoodCRC ACK in response for Soft Reset is an exception to this, see the <a href="#">DIS_SPCL_SR_GCRC_ACK</a> bit.)</p> <p>Setting this bit will force hardware to not abort the transmission, but rather wait until line becomes idle and then transmit the message. The <a href="#">RETRY_ON_LINE_BUSY</a> option has lower priority then this function.</p> <p>The following conditions will still abort the TX packet:</p> <ul style="list-style-type: none"> <li>• Hard reset received</li> <li>• Cable reset received (if enabled and the SOP type of the pending TX is SOP', or SOP", SOP' _Debug or SOP" _Debug)</li> <li>• Good, non-duplicate packet, non-Ping, non-GoodCRC (including soft-reset) received with RX and TX SOP types matching or RX SOP type equaling SOP with TX SOP type not equaling SOP (can be disabled)</li> <li>• Software sets the <a href="#">ABORT</a> bit in the <a href="#">TX Control Register B (TX_CTL_B)</a>.</li> </ul> | R/W  | 0b      |
| 2    | <p><b>EN_AUTO_RSP_MODE</b><br/>Enable automatic sending of GoodCRC message and BIST Error Count message by hardware.<br/>0: Auto GoodCRC Message disabled (default)<br/>1: Auto GoodCRC Message enabled</p> <p><b>Note:</b> Disabling Auto Response Mode will also disable automatic retry by hardware, i.e., hardware will ignore the <a href="#">N_RETRY_CNT</a> field of the <a href="#">TX Parameters Register C (TX_PARAM_C)</a>.</p>  | R/W  | 0b      |
| 1    | <p><b>EN_FMQ</b><br/>Enable FIFO Mode queuing on the TX Queue's write interface.<br/>0: Buffer Mode - TX Queue is accessed like a buffer/CSR (Default)<br/>1: FIFO Mode</p>   | R/W  | 0b      |
| 0    | <p><b>EN_RMDP</b><br/>Enable Raw Mode Data Processing.<br/>0: Automatic Mode Data Processing (default)<br/>1: Enable Raw Mode Data Processing</p>   | R/W  | 0b      |

## 11.4.1.2 TX Status Register (TX\_STAT)

Address: 1A01h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | <b>RESERVED</b>   | RO   | -       |
| 6:4  | <p><b>N_HW_RETRIES</b><br/>Number of attempts by hardware to send a message successfully.</p> <p>This field is automatically cleared when the <b>GO</b> bit in the <b>TX Control Register B (TX_CTL_B)</b> is set.</p> <p>This field is meaningful only if a TX was successful. It is informational only.</p> <p>0: Initial message was successful. This value must be correlated with the <b>TX_ABORTED</b> bit. If a TX message was aborted, this bit is meaningless.<br/>&gt;0: Number of retries performed by the device. The maximum value depends on the <b>N_RETRY_CNT</b> field in the <b>TX Parameters Register C (TX_PARAM_C)</b> register.</p> | RO   | 000b    |
| 3:1  | <b>RESERVED</b>   | RO   | -       |
| 0    | <p><b>TX_ACTIVE</b><br/>Transmitter is active.<br/>0: Transmitter is idle<br/>1: Transmitter is active</p> <p>Software can monitor this bit to determine if transmission is in progress. De-assertion of this bit does not imply successful message transmission, only that the transmitter is no longer active and has stopped transmitting.</p>   | RO   | 0b      |

# UPD350

## 11.4.1.3 TX Parameters Register C (TX\_PARAM\_C)

Address: 1A02h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | <b>PORT_DATA_ROLE</b><br>This field is used as the Port Data Role field for hardware generated packet header for packets that use SOP signaling.<br>0: UFP<br>1: DFP<br><b>Note:</b> SOP' and SOP" always send a 0 bit for the Port Data Role.  | R/W  | 0b      |
| 6:4  | <b>N_RETRY_CNT</b><br>Number of retries allowed.<br><br>Set this to zero to disable automatic hardware retry (i.e., when software will take care of retries).<br><br>If N_RETRY_CNT is set to zero, but hardware is expected to wait for Good-CRC, the <a href="#">EXPECT_GOODCRC</a> bit should be set in the <a href="#">TX Parameters Register A (TX_PARAM_A)</a> , otherwise TX will be considered complete as soon as packet transmission is complete.<br><b>Note:</b> Hard and Cable Resets are not automatically retried since there is no feedback to indicate a failure. | R/W  | 000b    |
| 3    | <b>CABLE_PLUG</b><br>This field is used as the Cable Plug field for hardware generated packet header for packets that use SOP' and SOP" signaling.<br>0: DFP or UFP<br>1: Cable Plug  | R/W  | 0b      |
| 2    | <b>PORT_POWER_ROLE</b><br>This field is used as the Port Power Role field for hardware generated packet header for packets that use SOP signaling.<br>0: Sink<br>1: Source  | R/W  | 0b      |
| 1:0  | <b>RESERVED</b>   | RO   | -       |

## 11.4.1.4 TX Packet Length Register (TX\_PKT\_LEN)

Address: [1A03h](#) Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:6  | <b>RESERVED</b>  | RO   | -       |
| 5:0  | <p><b>PKT_LEN</b><br/>Queued packet length in bytes.<br/>Hardware uses this value in Auto Mode to determine when to insert the CRC.</p> <p>PKT_LEN = bytes in header + bytes in data objects</p> <p><b>Note:</b> This applies to Auto Mode queue only and not to Raw Mode queue. Raw Mode queue has special code to insert CRC and terminate the transmission.</p> <p><b>Note:</b> A value of '0' is invalid for this field.</p> | R/W  | 000000b |

## 11.4.1.5 TX Parameters Register A (TX\_PARAM\_A)

Address: [1A04h](#) Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7    | <p><b>EXPECT_GOODCRC</b><br/>This bit is used when the <a href="#">N_RETRY_CNT</a> field in the <a href="#">TX Parameters Register C (TX_PARAM_C)</a> is set to zero but hardware is expected to wait for Good-CRC in response to a TX message.</p> <p>If <a href="#">N_RETRY_CNT</a> is non-zero and <a href="#">EN_AUTO_RSP_MODE</a> in the <a href="#">TX Control Register A (TX_CTL_A)</a> is set, then hardware automatically waits for Good-CRC and this bit has no effect.</p>  | R/W  | 0b      |
| 6:4  | <p><b>TX_SOP_SELECT</b><br/>This field selects the SOP used for normal TX packets, for Returned BIST Counters packets (in response to RX BIST Test Frames) and for TX BIST Test Frames.</p> <p>This value is also used to verify the expected SOP type in the GoodCRC response when Auto retry is enabled.</p> <p>000: SOP<br/>001: SOP'<br/>010: SOP"<br/>011: SOP'_Debug<br/>100: SOP''_Debug<br/>101 - 111: Reserved</p> <p><b>Note:</b> For Auto retry mode, it is assumed that the expected SOP type is also enabled in the <a href="#">RX Control Register B (RX_CTL_B)</a>.</p> | R/W  | 000b    |

# UPD350

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 3    | <p><b>EN_FWTX</b><br/>Enable software issued transmission.</p> <p>This bit is effective only at the moment the <b>GO</b> bit is set by software and is intended to cover race conditions where it is not possible for software to back off from setting the <b>GO</b> bit in response to a valid RX.</p> <p>This bit is automatically held cleared by hardware if the <b>RX Interrupt Status Register (RX_IRQ_STAT)</b> indicates reception of a Hard Reset, or a Cable Reset, or if there is any data in the RX FIFO and, thus, software must set it prior to each transmission it wants to issue.</p> <p>When this bit is cleared, a software issued transmission will be aborted.</p> <p><b>Note:</b> This is not an Abort bit. Clearing this bit will have no effect on a transmission that has already been issued to hardware. Such transmissions will be aborted automatically by hardware as appropriate. To abort a transmission in progress, use the <b>ABORT</b> bit in the <b>TX Control Register B (TX_CTL_B)</b>.</p> <p><b>Note:</b> Setting of this bit does not prevent hardware issued transmissions.</p> <p><b>Note:</b> This bit is reset by assertion of <b>PD_RESET</b>.</p> | R/W  | 0b      |
| 2:0  | <p><b>MSG_ID</b><br/>Message ID. This value is used to verify the expected message ID in the GoodCRC response.</p> <p><b>Note:</b> Hardware will not insert this value into the TX message header. For proper normal operation, software must program the same value in bits[11:9] of message header.</p> <p><b>Note:</b> Software must set this to zero when it processes a Hard Reset, Cable Reset or Soft Reset.</p>  | R/W  | 000b    |



## 11.4.1.6 TX Control Register B (TX\_CTL\_B)

Address: 1A05h Size: 8 bits

| Bits | Description  | Type   | Default |
|------|--|--------|---------|
| 7:6  | <b>RESERVED</b>  | RO     | -       |
| 5    | <p><b>TX_CABLE_RESET</b><br/>Setting this bit to 1 together with the <b>GO</b> bit will cause hardware configured for Auto Mode data processing to transmit a Cable Reset. Any data in the TX Queue and related registers is ignored.</p> <p>This bit is not applicable to Raw Mode data processing since Cable Reset packets can be explicitly specified in the TX Queue. It is ignored for Raw Mode.</p> <p>This bit can only be set if the <b>GO</b> bit is not currently set.</p> <p>The <b>TX_HARD_RESET</b> bit has precedence and if set along with this bit, this bit will not set.</p> <p>This bit is cleared by hardware at end of packet transmission. This bit is reset by assertion of <b>PD_RESET</b>. Software can only write 1 to this bit and therefore can not clear it once set.</p> <p><b>Note:</b> Cable Reset is not automatically retried (there is no feedback to indicate a failure). It is up to software to perform Cable Reset retries.</p> <p><b>Note:</b> This bit will be cleared upon completion of any packet transmission, so it should be set only after <b>GO</b> bit is cleared after completion of the prior transmission.</p> | W1S/SC | 0b      |
| 4    | <p><b>OK_TO_TX</b><br/>Channel is idle and it is OK to transmit. Software should monitor this bit before setting the <b>GO</b> bit.<br/>0: Software should not set the <b>GO</b> bit<br/>1: Software can set the <b>GO</b> bit.</p> <p>The following conditions will cause hardware to set this bit to 0:</p> <ul style="list-style-type: none"> <li>• BMC line idle timer indicating line is busy.</li> <li>• Hardware may be processing an automatic response to a received packet.</li> </ul>   | RO     | 1b      |
| 3    | <p><b>RST_TXQ_FIFO_WRI_PTR</b><br/>Setting this bit will reset the TX Queue's write interface FIFO pointer. When using FIFO Mode Queuing, software must always write a '1' to this bit prior to putting data in the FIFO.</p> <p>Hardware does not latch this bit and it will read back as zero. Hardware may automatically reset the pointer when the <b>GO</b> bit is cleared (i.e., hardware is done with current transmission).</p>  | WO     | 0b      |

# UPD350

| Bits | Description  | Type   | Default |
|------|--|--------|---------|
| 2    | <p><b>TX_HARD_RESET</b><br/>Setting this bit to 1 together with the <b>GO</b> bit will cause hardware configured for Auto Mode data processing to transmit a Hard Reset. Any data in the TX Queue and related registers is ignored.</p> <p>This bit is not applicable to Raw Mode data processing since a Hard Reset packet can be explicitly specified in the TX Queue. It is ignored for Raw Mode.</p> <p>This bit can only be set if the <b>GO</b> bit is not currently set.</p> <p>This bit is cleared by hardware at end of packet transmission. This bit is reset by assertion of <b>PD_RESET</b>. Software can only write 1 to this bit and therefore can not clear it once set.</p> <p><b>Note:</b> Hard Reset is not automatically retried (there is no feedback to indicate a failure). It is up to software to perform Hard Reset retries.</p> <p><b>Note:</b> This bit will be cleared upon completion of any packet transmission, so it should be set only after the <b>GO</b> bit is cleared after completion of the prior transmission.</p>   | W1S/SC | 0b      |
| 1    | <p><b>ABORT</b><br/>Setting this bit will abort the current transmission in progress as soon as possible. Writing a '0' has no effect.</p> <p>Hardware does not latch this bit and it will read back as zero.</p> <p>Hardware will finish the current nibble transmission, send EOP, and then terminate transmission. If this bit is set during preamble phase, then the current bit of the preamble will be completed prior to termination.</p> <p>Software should use the <b>TX_EOP</b> status bit in the <b>TX Interrupt Status Register (TX_IRQ_STAT)</b> to determine when the current packet has been terminated.</p>  | WO     | 0b      |
| 0    | <p><b>GO</b><br/>Writing a 1 to this bit will:</p> <ul style="list-style-type: none"> <li>• Start transmission of the packet in the TX queue on to the wire or:</li> <li>• Send Hard Reset if the <b>TX_HARD_RESET</b> bit of this register is set and data processing mode is set to Auto (i.e., the <b>EN_RMDP</b> bit in the <b>TX Control Register A (TX_CTL_A)</b> is not set).</li> <li>• Send Cable Reset if the <b>TX_CABLE_RESET</b> bit of this register is set and data processing mode is set to Auto (i.e., the <b>EN_RMDP</b> bit in the <b>TX Control Register A (TX_CTL_A)</b> is not set).</li> </ul> <p>Hardware will clear this bit when transmission is complete. This bit is reset by assertion of <b>PD_RESET</b>. Software can only write 1 to this bit and therefore can not clear it once set. Clearing of this bit by hardware does not indicate the message was sent successfully.</p> <p>Hardware may detect bus collision and abort transmission. In this case, the <b>TX_ABORTED</b> bit in the <b>TX Interrupt Status Register (TX_IRQ_STAT)</b> will be set and an interrupt to MCU will be generated.</p> | W1S/SC | 0b      |

## 11.4.1.7 TX Parameters Register B (TX\_PARAM\_B)

Address: **1A06h** Size: 8 bits

| Bits | Description   | Type | Default  |
|------|---|------|----------|
| 7    | <b>RESERVED</b>   | RO   | -        |
| 6:0  | <p><b>PREAMBLE_LEN</b><br/>Number of preamble bits to send.<br/>Range: 1-127, specification: 64d (default)</p> <p>A value of 0 is invalid and hardware does not check for validity. Software should use the default value for normal operation.</p> <p>Setting this field to an odd value will cause violation of the USB PD Specification which states "The preamble shall start with a "0" and shall end with a "1". An odd value will cause preamble to start with a value of "0" but it will also end in a value of "0." This may or may not lead to functional issues. This field should be set to an even value to remain spec compliant.</p> | R/W  | 1000000b |

## 11.4.1.8 TX Bit-Time Count Register (TX\_BITTIME\_CNT)

Address: **1A07h** Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <p><b>BIT_TIME_CNT</b><br/>Bit-time counter value. The TX logic uses this value to determine the bit-time for transmission (nominal bit rate is 300Kbps). This register can be used to adjust bit-time for testing purpose (adjusting bitrate).</p> <p>Count value is based on clock frequency and is given by:<br/> <math display="block">((\text{Clock Freq KHz} / \text{Bit Rate Kbps}) - 1)</math>                     i.e.,<br/>                     Clock Frequency = 48000KHz (48MHz)<br/>                     Nominal Bit Rate = 300 Kbps<br/> <math display="block">\text{BIT\_TIME\_CNT} = (48000 / 300) - 1 = 159</math> </p> | R/W  | 00h     |

# UPD350

## 11.4.1.9 TX Turnaround Time Register (TX\_TA\_TIME)

Address: 1A08h Size: 8 bits

This register controls the IFG timer.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:6  | <b>RESERVED</b>  | RO   | -       |
| 5:0  | <b>TA_TIME</b><br>Turnaround time in us.<br>Range: 1-63, specification: 25us<br><br>A value of 0 is invalid and hardware does not check for validity.<br><br>Hardware uses a free running 1us pulse generator, thus, the value of this field should be 1 more than desired to ensure the minimum time (26d). | R/W  | 010101b |

## 11.4.1.10 TX Abort Status Register (TX\_ABORT\_STAT)

Address: 1A09h Size: 8 bits

This field is used in conjunction with the [TX\\_ABORTED](#) interrupt and provides details for why the TX was aborted. Bits in this register are sticky, i.e., once any bit is set by hardware this field cannot be updated by hardware until software clears the field.

**Note:** Bits in this register are set by hardware and must be cleared by software. The bits are not mutually exclusive, i.e., more than one bit may be set depending on the circumstance.

| Bits | Description  | Type  | Default |
|------|--|-------|---------|
| 7    | <b>TX_ABORT_STAT[7]</b><br>While waiting for GoodCRC, TX aborted due to Protocol Error (i.e., received other than GoodCRC or Ping message while waiting for GoodCRC or Receiving a Hard or Cable Reset.) | R/W1C | 0b      |
| 6    | <b>TX_ABORT_STAT[6]</b><br>During software issued TX, TX was aborted due to RX (including Hard or Cable Reset) while waiting for bus turnaround or waiting for line to go idle.                          | R/W1C | 0b      |
| 5    | <b>TX_ABORT_STAT[5]</b><br>Auto-retry aborted due to RX (including Hard or Cable Reset) while waiting for bus turnaround or while waiting for line to go idle.   | R/W1C | 0b      |
| 4    | <b>TX_ABORT_STAT[4]</b><br>Auto-retry aborted due to line being busy after bus turnaround.   | R/W1C | 0b      |
| 3    | <b>RESERVED</b>  | RO    | -       |
| 2    | <b>TX_ABORT_STAT[2]</b><br>During software issued TX, line was busy after bus turnaround.  | R/W1C | 0b      |
| 1    | <b>TX_ABORT_STAT[1]</b><br>Software issued abort while software issued TX was in process.  | R/W1C | 0b      |
| 0    | <b>TX_ABORT_STAT[0]</b><br>Software issued <a href="#">GO</a> with TX disabled.  | R/W1C | 0b      |

## 11.4.1.11 TX Auto-Response Abort Status Register (TX\_AR\_ABORT\_STAT)

Address: **1A0Ah** Size: 8 bits

This field is used in conjunction with the [AUTO\\_RSP\\_ABORTED](#) interrupt and provides details for why the TX was aborted. Bits in this register are sticky, i.e., once any bit is set by hardware this field cannot be updated by hardware until software clears the field.

**Note:** Bits in this register are set by hardware and must be cleared by software. The bits are not mutually exclusive, i.e., more than one bit may be set depending on the circumstance.

| Bits | Description  | Type  | Default |
|------|--|-------|---------|
| 7    | <b>RESERVED</b>  | RO    | -       |
| 6    | <b>TX_AR_ABORT_STAT[6]</b><br>Auto-response aborted due to RX (including Hard or Cable Reset) while waiting for bus turnaround or while waiting for line to go idle. | R/W1C | 0b      |
| 5:4  | <b>RESERVED</b>  | RO    | -       |
| 3    | <b>TX_AR_ABORT_STAT[3]</b><br>Line was busy after bus turnaround time during auto-response.  | R/W1C | 0b      |
| 2    | <b>RESERVED</b>  | RO    | -       |
| 1    | <b>TX_AR_ABORT_STAT[1]</b><br>Software issued abort while auto-response was in process.  | R/W1C | 0b      |
| 0    | <b>RESERVED</b>  | RO    | -       |

## 11.4.1.12 TX Power Up Time Register (TX\_POWER\_UP\_TIME)

Address: **1A0Bh** Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>TX_POWER_UP_TIME</b><br>TX Power Up Time before transmitting (unit is 8 clock cycles).<br>Range: 0-255 (Actual time is 5 clocks larger.)<br><br>The analog requires a minimum time of 5us to power up.<br><br>Count value is based on clock frequency and is given by:<br>$TX\_POWER\_UP\_TIME = \text{power up time } \mu\text{S} \times \text{Clock Freq MHz} / 8$<br>i.e.,<br>Clock Frequency = 48MHz<br>power up time = 5 uS<br>$TX\_POWER\_UP\_TIME = 5 \times 48 / 8 = 30$ | R/W  | 00h     |

# UPD350

---

---

## 11.4.1.13 TX Power Down Time Register (TX\_POWER\_DOWN\_TIME)

Address: 1A0Ch Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <p><b>TX_POWER_DOWN_TIME</b><br/>TX Power Down Time after transmitting (unit is 8 clock cycles).<br/>Range: 0-255 (Actual time is 2 clocks larger.)</p> <p>The analog requires a minimum time of 1us before powering down.</p> <p>Count value is based on clock frequency and is given by:<br/><math>TX\_POWER\_DOWN\_TIME = \text{power down time } \mu\text{S} \times \text{Clock Freq MHz} / 8</math><br/>i.e.,<br/>Clock Frequency = 48MHz<br/>power down time = 1 uS<br/><math>TX\_POWER\_DOWN\_TIME = 1 \times 48 / 8 = 6</math></p> | R/W  | 00h     |

## 11.4.2 PD MAC RX REGISTERS

The following sub-sections describe the various registers associated with the PD MAC RX logic.

### 11.4.2.1 RX Control Register A (RX\_CTL\_A)

Address: [1A40h](#) Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:6  | <b>RESERVED</b>   | RO   | -       |
| 5    | <p><b>EN_LOOPBACK</b><br/>Enable loopback. This bit allows the MAC to receive its own transmission.</p> <p><b>Note:</b> Loopback happens at the pin where TX and RX are connected together.</p>   | R/W  | 0b      |
| 4    | <p><b>EN_RCV</b><br/>Enable Receiver. Software should set this bit when it is done configuring the receiver. Setting this bit will enable the receiver to start normal operation.</p> <p>If this bit is set while receive activity is in progress it will take effect after current receive activity is over. If this bit is cleared while a receive is being processed it will take effect after current receive is finished.</p> <p>This bit will be automatically cleared by hardware upon reception of Hard Reset or a Cable Reset to prevent normal packet reception.</p> <p>After POR or SW_RESET, Hard and Cable Reset reception is disabled until EN_RCV is set. Thereafter, clearing of EN_RCV (by software or hardware) has no impact to reception of Hard or Cable Reset, i.e., hardware will process Hard or Cable Reset even with EN_RCV cleared.</p> <p>If software wishes to re-initialize receive timing parameters after EN_RCV has been set once it must first reset the UPD_MAC_v2 using SW_RESET. This bit is not reset by assertion of PD_RESET.</p> | R/W  | 0b      |
| 3    | <p><b>RST_RECEIVER</b><br/>Setting this bit will reset the receiver Queue. Software should set this bit if receiver hardware may be out of sync with software. Hardware latches this bit so it must be cleared by software to resume receiver operation. Receiver hardware is also reset when PD_RESET bit in RESET_CTL register is set.</p>  | R/W  | 0b      |

# UPD350

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 2    | <p><b>EN_CRC_RCV_TMR</b><br/>Enable CRCReceiveTimer.<br/>0: CRCReceiveTimer disabled (default)<br/>1: CRCReceiveTimer Enabled</p> <p>This bit is used by software only when it is not using auto-retry mode.</p> <p>When auto-retry is enabled (<a href="#">EN_AUTO_RSP_MODE</a> in the <a href="#">TX Control Register A (TX_CTL_A)</a> is set and <a href="#">N_RETRY_CNT</a> is non-zero) or when the transmitter is set to wait for the GoodCRC message (<a href="#">EXPECT_GOODCRC</a> is set and <a href="#">N_RETRY_CNT</a> is zero), the CRCReceiveTimer is automatically enabled in hardware. If GoodCRC message is not received prior to timer expiration, then an interrupt will be generated. <a href="#">CRC_RCV_TIMEOUT</a> bit in the <a href="#">TX Interrupt Status Register (TX_IRQ_STAT)</a> will be set.</p> <p>If auto-retry and wait for GoodCRC are disabled, the software can set this bit to enable CRCReceiveTimer prior to starting transmission to help time tReceive. Once enabled, the timer will start automatically at the end of transmission; however, software must disable the timer when a GoodCRC message is received. If not disabled, timer expiration will generate an interrupt.</p> <p>Once expired, the CRCReceiveTimer remains expired until start of another packet transmission when it reloads.</p> <p>This timer can also be used for BIST transmissions as the BISTReceiveError-Timer.</p> | R/W  | 0b      |
| 1    | <p><b>EN_SMBUS_MODE</b><br/>Enable SMBus block read FIFO format.<br/>0: First location in packet is status, second location is packet length<br/>1: First location in packet is packet length + 1, second location is status</p>   | R/W  | 0b      |
| 0    | <p><b>EN_CABLE_RESET</b><br/>Enable Cable Reset Detection.<br/>0: Cable Reset Detection (default)<br/>1: Cable Reset Detection Enabled</p>   | R/W  | 0b      |



## 11.4.2.2 RX Control Register B (RX\_CTL\_B)

Address: [1A41h](#) Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | <b>RESERVED</b>   | RO   | -       |
| 6:2  | <b>RX_SOP_ENABLE</b><br>SOP Types enabled to be received. Includes RX BIST Test Frames.<br>Bit 2 - SOP<br>Bit 3 - SOP'<br>Bit 4 - SOP"<br>Bit 5 - SOP'_Debug<br>Bit 6 - SOP''_Debug<br>Software is allowed to change the field at any time. An internal copy is held during active receive and updated from the register during idle time | R/W  | 00001b  |
| 1:0  | <b>RESERVED</b>   | RO   | -       |

## 11.4.2.3 RX Maximum Bit-Rate Bit Period Count Register (RX\_BIT\_PER\_CNT\_MAX\_BR)

Address: [1A42h](#) Size: 8 bits

The value of this register, together with value of the [RX Minimum Bit-Rate Bit Period Count Register \(RX\\_BIT\\_PER\\_CNT\\_MIN\\_BR\)](#), is used by the CDR to determine valid bit-time (also referenced as bit-period) of the RX signal.

$RX\_BIT\_PER\_CNT\_MIN\_BR > \text{valid bit time} > RX\_BIT\_PER\_CNT\_MAX\_BR$ .

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>RX_BIT_PER_CNT_MAX_BR</b><br>Bit period count at maximum bit-rate.<br>$= (((\text{clock\_freq\_KHz} / \text{max\_bit\_rate\_Kbps}) * (100 - \text{tolerance}) / 100) - 1)$<br><br>WARNING: If macros are defined in C code, then math must be arranged so that integer overflow does not occur. | R/W  | 00h     |

# UPD350

## 11.4.2.4 RX Minimum Bit-Rate Bit Period Count Register (RX\_BIT\_PER\_CNT\_MIN\_BR)

Address: 1A43h Size: 8 bits

The value of this register, together with value of the [RX Maximum Bit-Rate Bit Period Count Register \(RX\\_BIT\\_PER\\_CNT\\_MAX\\_BR\)](#), is used by the CDR to determine valid bit-time (also referenced as bit-period) of the RX signal.

$RX\_BIT\_PER\_CNT\_MIN\_BR > \text{valid bit time} > RX\_BIT\_PER\_CNT\_MAX\_BR$ .

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>RX_BIT_PER_CNT_MIN_BR</b><br>Bit period count at minimum bit-rate.<br>$= (((\text{clock\_freq\_KHz} / \text{min\_bit\_rate\_Kbps}) * (100 + \text{tolerance}) / 100) - 1)$<br><br>WARNING: If macros are defined in C code, then math must be arranged so that integer overflow does not occur. | R/W  | 00h     |

## 11.4.2.5 RX Status Register (RX\_STAT)

Address: 1A44h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:2  | <b>RESERVED</b>   | RO   | -       |
| 1    | <b>RX_IN_PROCESS</b><br>Receiver is active.<br>Hardware is receiving a packet, i.e., line is busy and transmitter is not active.  | RO   | 0b      |
| 0    | <b>LINE_STATE</b><br>0: Line is idle<br>1: Line is busy (BMC line idle timer indicating line is busy)<br><br>If this bit is "1", a receive might be in progress and software should wait for the message reception to complete. If it is "0", software may set the <a href="#">GO</a> bit.<br><br>Hardware will take further action until the very last possible moment to avoid bus contention. Bus contention is still possible and not 100% avoidable.<br><br>In cases where hardware takes preventative measures to avoid bus contention, the TX packet will be aborted. Software will be informed of this via an interrupt and setting of the <a href="#">TX_ABORTED</a> bit in the <a href="#">TX Interrupt Status Register (TX_IRQ_STAT)</a> . | RO   | 0b      |

## 11.4.2.6 RX Packet Status Register (RX\_PKT\_STAT)

Address: 1A45h Size: 8 bits

This register is applicable only when using auto-response/retry modes. This register is used in conjunction with the following bits to provide additional information regarding the status of a received packet:

- [RX\\_DONE](#) bit in the [RX Interrupt Status Register \(RX\\_IRQ\\_STAT\)](#)
- [RX\\_PCOL\\_ERROR](#) bit in the [RX Error Interrupt Status Register \(RX\\_ERR\\_IRQ\\_STAT\)](#)
- [RX\\_PKT\\_DROPPED](#) bit in the [RX Error Interrupt Status Register \(RX\\_ERR\\_IRQ\\_STAT\)](#)
- [RX\\_BUF\\_OVR\\_RUN](#) bit in the [RX Error Interrupt Status Register \(RX\\_ERR\\_IRQ\\_STAT\)](#)

Bits in this register are sticky, i.e., once any bit is set by hardware this field cannot be updated by hardware until software clears the field.

A value of 0x00 indicates no errors, while a value of 0xFF indicates that the packet status is currently unknown. Other values are interpreted as specified in the bit definitions for this register.

**Note:** There no status for having received a GoodCRC message with matching MSG\_ID. Successful completion of a TX is indication that a valid GoodCRC ACK was received.

**Note:** Bits in this register are set by hardware and must be cleared by software. The bits are not mutually exclusive, i.e., more than one bit may be set depending on the circumstance.

| Bits | Description  | Type  | Default |
|------|--|-------|---------|
| 7    | <b>RESERVED</b>  | RO    | -       |
| 6    | <b>RX_PKT_STAT[6]</b><br>ODD_NIBBLES. Received packet dropped because it had odd number of nibbles in data phase. Not set if <a href="#">RX_PKT_STAT[3]</a> (RX_OVER_SIZE) is set regardless of bad CRC, symbol errors or odd nibbles. <a href="#">RX_BAD_PKT</a> interrupt is asserted.                       | R/W1C | 0b      |
| 5    | <b>RX_PKT_STAT[5]</b><br>SYM_ERROR. There was a symbol error in packet but BAD_CRC was not reported. Not set if <a href="#">RX_PKT_STAT[3]</a> (RX_OVER_SIZE) is set regardless of bad CRC, symbol errors or odd nibbles. <a href="#">RX_BAD_PKT</a> interrupt is asserted.                                    | R/W1C | 0b      |
| 4    | <b>RX_PKT_STAT[4]</b><br>RX_FIFO_FULL. Received packet had to be dropped because the FIFO was full either at SOP or during data. <a href="#">RX_BUF_OVR_RUN</a> interrupt is asserted.   | R/W1C | 0b      |
| 3    | <b>RX_PKT_STAT[3]</b><br>RX_OVER_SIZE. Received packet had to be dropped because it was larger than the maximum size set in the RX Maximum Packet Size Register. <a href="#">RX_BAD_PKT</a> interrupt is asserted.   | R/W1C | 0b      |
| 2    | <b>RX_PKT_STAT[2]</b><br>PCOL_ERROR. Received other than GoodCRC or Ping message when GoodCRC was expected. <a href="#">RX_PCOL_ERROR</a> interrupt is asserted.   | R/W1C | 0b      |
| 1    | <b>RX_PKT_STAT[1]</b><br>DUPLICATE_PACKET. Applicable to auto-response mode. <a href="#">RX_PKT_DROPPED</a> interrupt is asserted.   | R/W1C | 0b      |
| 0    | <b>RX_PKT_STAT[0]</b><br>BAD_CRC. RX packet had bad CRC. <a href="#">RX_BAD_PKT</a> interrupt is asserted. This bit is also forced set if symbol error or odd nibble count occurs. It is not set if <a href="#">RX_PKT_STAT[3]</a> (RX_OVER_SIZE) is set, regardless of bad CRC, symbol errors or odd nibbles. | R/W1C | 0b      |

# UPD350

## 11.4.2.7 RX tReceive Time Register (RX\_TRECEIVE\_TIME)

Address: [1A46h](#) Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>TRECEIVE</b><br>CRCReceiveTimer timeout value (tReceive) in 10's of micro seconds.<br><br>Timeout value = field value * 10 (us)<br><br>Range: 0-255, specification: 900-1100us (90-110)<br><br><b>Note:</b> A value of 0 is invalid and hardware does not check for validity.<br><b>Note:</b> Hardware uses a free running 1us pulse generator, thus, this CRCReceiveTimer may be 1us less than that expected.<br><b>Note:</b> Reset value is programmed to be 1000us (+/- 2%). | R/W  | 64h     |

## 11.4.2.8 RX BadCRC Packet Count Register (RX\_BADCRC\_PKT\_CNT)

Address: [1A47h](#) Size: 8 bits

This register keeps track of the number of packets received with bad CRC (any packet with valid SOP but bad CRC or invalid EOP or symbol error). This register is for debug purpose only.

If enabled, an interrupt can be generated when the count of this register reaches 128.

| Bits | Description  | Type  | Default |
|------|--|-------|---------|
| 7:0  | <b>BADCRC_PKT_CNT</b><br>Number of bad packets received, i.e., with Bad CRC or invalid EOP or symbol error.<br><br>When the value of this register becomes greater than 127, the <a href="#">DBG_EVENT</a> bit in the <a href="#">RX Interrupt Status Register (RX_IRQ_STAT)</a> will be set.<br><br>Any write to this register will clear all bits.<br><br><b>Note:</b> This register is not affected by packets received during BIST Receiver Test. All these packets will be corrupted. | R/WAC | 00h     |

## 11.4.2.9 RX Duplicate Packet Count Register (RX\_DUP\_PKT\_CNT)

Address: [1A48h](#) Size: 8 bits

This register keeps track of the number of the number of duplicate packets received. It is applicable only when Automatic Response Mode is enabled. This register is for debug purpose only and hardware does not use the value for anything. If enabled, an interrupt can be generated when the count of this register reaches 128.

| Bits | Description   | Type  | Default |
|------|---|-------|---------|
| 7:0  | <p><b>DUP_PKT_CNT</b><br/>Number of duplicate packets received. Applicable when Auto Response Mode is enabled.</p> <p>When the value of this register becomes greater than 127, the <a href="#">DBG_EVENT</a> bit in the <a href="#">RX Interrupt Status Register (RX_IRQ_STAT)</a> will be set.</p> <p>Any write to this register will clear all bits.</p> | R/WAC | 00h     |

## 11.4.2.10 RX Hard Reset Detection Window Register (RX\_HR\_DET\_WINDOW)

Address: [1A49h](#) Size: 8 bits

| Bits | Description  | Type | Default  |
|------|--|------|----------|
| 7    | <b>RESERVED</b>  | RO   | -        |
| 6:0  | <p><b>RX_HR_DET_WINDOW</b><br/>Value of Hard Reset detection window in number of bits.<br/>This field determines when a detected Hard Reset or Cable Reset will be considered valid.</p> | R/W  | 1011110b |

## 11.4.2.11 RX Last GoodCRC Packet High Byte Register (RX\_LAST\_GCRC\_PKT\_HI)

Address: [1A4Ah](#) Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <p><b>RX_LAST_GCRC_PKT_HI</b><br/>Bits [15:8] of received GoodCRC message.</p> <p>This register is only valid when auto-retry is enabled. Since GoodCRC message in auto-retry mode is not stored in the RX queue, this register provides a means for software to examine the last GoodCRC message received.</p> | RO   | 00h     |

# UPD350

## 11.4.2.12 RX Last GoodCRC Packet Low Byte Register (RX\_LAST\_GCRC\_PKT\_LO)

Address: [1A4Bh](#) Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>RX_LAST_GCRC_PKT_LO</b><br>Bits [7:0] of received GoodCRC message.<br><br>This register is only valid when auto-retry is enabled. Since GoodCRC message in auto-retry mode is not stored in the RX queue, this register provides a means for software to examine the last GoodCRC message received. | RO   | 00h     |

## 11.4.2.13 RX Message ID Stored Register (RX\_MSG\_ID\_STORED)

Address: [1A4Ch](#) Size: 8 bits

This register indicates if a last message ID was stored for each SOP type. A write to the appropriate bit will clear the last stored message ID for the SOP type indicated. When cleared, the next packet received for the SOP type will not be considered a duplicate. Software should clear the appropriate bit when it processes a Soft Reset.

Bits in this register are set by hardware and must be cleared by software.

This register is also cleared when software issues a [SW\\_RESET](#) or [PD\\_RESET](#) via the [Reset Control Register \(RESET\\_CTL\)](#).

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:5  | <b>RESERVED</b>  | RO   | -       |
| 4:0  | <b>RX_MSG_ID_STORED</b><br>This field indicates that a last message ID was stored for the SOP type.<br>Bit 0: SOP<br>Bit 1: SOP'<br>Bit 2: SOP"<br>Bit 3: SOP'_Debug<br>Bit 4: SOP''_Debug | W1C  | 00000b  |

## 11.4.2.14 RX Maximum Packet Size Register (RX\_MAX\_SIZE)

Address: [1A4Dh](#) Size: 8 bits

The value of this register sets the maximum receive packet size, including the 4 bytes of CRC.

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>RX_MAX_SIZE</b><br>Maximum receive packet size including the 4 byte CRC. | R/W  | 22h     |

## 11.4.2.15 RX FIFO Read Pointer Register (RX\_FIFO\_RD\_PTR)

Address: [1A50h](#) Size: 8 bits

This register contains the RX FIFO read pointer. Software may update this register to flush a packet based on the known packet length and starting point.

Software must keep the RX FIFO Read Pointer Control Bits Register coherent with this register if software were to update this register.

In order to maintain coherency, writes to this register are held in a temporary register and are transferred to the actual register when the RX FIFO Read Pointer Control Bits Register is written.

| Bits | Description  | Type | Default  |
|------|--|------|----------|
| 7    | <b>RESERVED</b>  | RO   | -        |
| 6:0  | <b>RX_FIFO_RD_PTR</b><br>This field contains the RX FIFO read pointer. | R/W  | 0000000b |

## 11.4.2.16 RX FIFO Read Pointer Control Bits Register (RX\_FIFO\_RD\_PTR\_CTL\_BITS)

Address: [1A51h](#) Size: 8 bits

This register contains the auxiliary control bits of the RX FIFO read pointer.

Software must keep these bits coherent with the RX FIFO Read Pointer if software were to update the latter.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7    | <b>RX_FIFO_EMPTY</b><br>This field indicates that the RX FIFO is empty (RX FIFO Write Head Pointer equals the RX FIFO Read Pointer.)   | RO   | 1b      |
| 6:2  | <b>RESERVED</b>  | RO   | -       |
| 1    | <b>RX_FIFO_RD_PTR_AT_TOP</b><br>This field indicates that the RX FIFO read pointer is at the top of the RAM (location 127).  | RO   | 0b      |
| 0    | <b>RX_FIFO_RX_PTR_WRAP</b><br>This field toggles each time the RX FIFO read pointer wraps past the top of the RAM (location 127). If software updates the RX FIFO read pointer such that it wraps, this bit must be toggled. | R/W  | 0b      |

# UPD350

## 11.4.2.17 RX FIFO Write Current Pointer Register (RX\_FIFO\_WR\_CURRENT\_PTR)

Address: 1A52h Size: 8 bits

This register contains the RX FIFO write current pointer. This pointer indicates where the next received byte of data will be stored. This register is for debug and test purpose only and should not normally be written.

Software must maintain coherency between this and the other Write Pointer Registers.

There is no hardware holding register to maintain write coherency between this and the other Write Pointer Registers. It is assumed that this register is only written while there is no active receive.

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | RESERVED  | RO   | -       |
| 6:0  | <b>RX_FIFO_WR_CURRENT_PTR</b><br>This field contains the RX FIFO write current pointer. | R/W  | 000000b |

## 11.4.2.18 RX FIFO Write Current Pointer Control Bits Register (RX\_FIFO\_WR\_CURRENT\_PTR\_CTL\_BITS)

Address: 1A53h Size: 8 bits

This register contains the auxiliary control bits of the RX FIFO write current pointer. This register is for debug and test purpose only and should not normally be written.

Software must maintain coherency between this and the other Write Pointer Registers.

There is no hardware holding register to maintain write coherency between this and the other Write Pointer Registers. It is assumed that this register is only written while there is no active receive.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7    | <b>RX_FIFO_FULL</b><br>This field indicates that the RX FIFO is full (RX FIFO Write Current Pointer equals the RX FIFO Read Pointer.)              | RO   | 0b      |
| 6:2  | RESERVED   | RO   | -       |
| 1    | <b>RX_FIFO_WR_CURRENT_PTR_AT_TOP</b><br>This field indicates that the RX FIFO write current pointer is at the top of the RAM (location 127).       | RO   | 0b      |
| 0    | <b>RX_FIFO_WR_CURRENT_PTR_WRAP</b><br>This field toggles each time the RX FIFO write current pointer wraps past the top of the RAM (location 127). | R/W  | 0b      |



## 11.4.2.19 RX FIFO Write Head Pointer Register (RX\_FIFO\_WR\_HEAD\_PTR)

Address: [1A54h](#) Size: 8 bits

This register contains the RX FIFO write head pointer. This pointer indicates where the next received packet starts. This register is for debug and test purpose only and should not normally be written.

Software must maintain coherency between this and the other Write Pointer Registers.

There is no hardware holding register to maintain write coherency between this and the other Write Pointer Registers. It is assumed that this register is only written while there is no active receive.

| Bits | Description   | Type | Default  |
|------|---|------|----------|
| 7    | <b>RESERVED</b>   | RO   | -        |
| 6:0  | <b>RX_FIFO_WR_HEAD_PTR</b><br>This field contains the RX FIFO write head pointer. | R/W  | 0000000b |

## 11.4.2.20 RX FIFO Write Head Pointer Control Bits Register (RX\_FIFO\_WR\_HEAD\_PTR\_CTL\_BITS)

Address: [1A55h](#) Size: 8 bits

This register contains the auxiliary control bits of the RX FIFO write head pointer. This register is for debug and test purpose only and should not normally be written.

Software must maintain coherency between this and the other Write Pointer Registers.

There is no hardware holding register to maintain write coherency between this and the other Write Pointer Registers. It is assumed that this register is only written while there is no active receive.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7    | <b>RX_FIFO_NO_ROOM_FOR_HEADER</b><br>This field indicates that the RX FIFO has no space for the RX header (status and length) (RX FIFO Write Head Pointer equals the RX FIFO Read Pointer or RX FIFO Write Head Pointer Plus One equals the RX FIFO Read Pointer). | RO   | 0b      |
| 6:3  | <b>RESERVED</b>  | RO   | -       |
| 2    | <b>RX_FIFO_WR_HEAD_PTR_AT_2ND_FROM_TOP</b><br>This field indicates that the RX FIFO write head pointer is one below the top of the RAM (location 126).   | RO   | 0b      |
| 1    | <b>RX_FIFO_WR_HEAD_PTR_AT_TOP</b><br>This field indicates that the RX FIFO write head pointer is at the top of the RAM (location 127).   | RO   | 0b      |
| 0    | <b>RX_FIFO_WR_HEAD_PTR_WRAP</b><br>This field toggles each time the RX FIFO write head pointer wraps past the top of the RAM (location 127).   | R/W  | 0b      |

# UPD350

## 11.4.2.21 RX FIFO Write Head Pointer Plus One Register (RX\_FIFO\_WR\_HEAD\_PTR\_PLUS\_ONE)

Address: [1A56h](#) Size: 8 bits

This register contains the RX FIFO write head pointer plus one. This pointer indicates where the next received packet starts plus one. This register is for debug and test purpose only and should not normally be written.

Software must maintain coherency between this and the other Write Pointer Registers.

There is no hardware holding register to maintain write coherency between this and the other Write Pointer Registers. It is assumed that this register is only written while there is no active receive.

| Bits | Description   | Type | Default  |
|------|---|------|----------|
| 7    | RESERVED  | RO   | -        |
| 6:0  | <b>RX_FIFO_WR_HEAD_PTR_PLUS_ONE</b><br>This field contains the RX FIFO write head pointer plus one. | R/W  | 0000001b |

## 11.4.2.22 RX FIFO Write Head Pointer Plus One Control Bits Register (RX\_FIFO\_WR\_HEAD\_PTR\_PLUS\_ONE\_CTL\_BITS)

Address: [1A57h](#) Size: 8 bits

This register contains the auxiliary control bits of the RX FIFO write head pointer plus one. This register is for debug and test purpose only and should not normally be written.

Software must maintain coherency between this and the other Write Pointer Registers.

There is no hardware holding register to maintain write coherency between this and the other Write Pointer Registers. It is assumed that this register is only written while there is no active receive.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:1  | RESERVED   | RO   | -       |
| 0    | <b>RX_FIFO_WR_HEAD_PTR_PLUS_ONE_WRAP</b><br>This field toggles each time the RX FIFO write head pointer plus one wraps past the top of the RAM (location 127). | R/W  | 0b      |

## 11.4.3 PD MAC INTERRUPT STATUS AND ENABLE REGISTERS

The following sub-sections describe the various registers associated with the PD MAC interrupts.

Refer to [Section 8.1, "System Interrupts," on page 35](#) for additional information on system level interrupt control.

### 11.4.3.1 MAC Interrupt Status Register (MAC\_IRQ\_STAT)

Address: **1A80h**      Size: **8 bits**

This register reflects the summary status of the various interrupt sources. If any of these bits are set, the **MAC\_INT** interrupt bit in the [Interrupt Status Register \(INT\\_STS\)](#) will be active (if enabled).

Bits in this register are read only and reflect the combined result of the other PD MAC interrupt status registers.

There is no corresponding enable register, since all interrupts have enables at lower levels of the hierarchy.

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:5  | <b>RESERVED</b>   | RO   | -       |
| 4    | <b>RX_SOP_IRQ_STAT</b><br>RX SOP status. This bit is set when any bit in the <a href="#">RX SOP Interrupt Status Register (RX_SOP_IRQ_STAT)</a> is set and enabled via the <a href="#">RX SOP Interrupt Enable Register (RX_SOP_IRQ_EN)</a> .<br><br>This bit can only be cleared by clearing or disabling the bit(s) in the <a href="#">RX SOP Interrupt Status Register (RX_SOP_IRQ_STAT)</a> .                                     | RO   | 0b      |
| 3    | <b>PM_IRQ_STAT</b><br>Power Management status. This bit is set when any bit in the <a href="#">Power Management Interrupt Status Register (PM_IRQ_STAT)</a> is set and enabled via the <a href="#">Power Management Interrupt Enable and Control Register (PM_IRQ_EN)</a> .<br><br>This bit can only be cleared by clearing or disabling the bit(s) in the <a href="#">Power Management Interrupt Status Register (PM_IRQ_STAT)</a> . | RO   | 0b      |
| 2    | <b>RX_ERR_IRQ_STAT</b><br>RX Error status. This bit is set when any bit in the <a href="#">RX Error Interrupt Status Register (RX_ERR_IRQ_STAT)</a> is set and enabled via the <a href="#">RX Error Interrupt Enable Register (RX_ERR_IRQ_EN)</a> .<br><br>This bit can only be cleared by clearing or disabling the bit(s) in the <a href="#">RX Error Interrupt Status Register (RX_ERR_IRQ_STAT)</a> .                             | RO   | 0b      |
| 1    | <b>RX_IRQ_STAT</b><br>RX status. This bit is set when any bit in the <a href="#">RX Interrupt Status Register (RX_IRQ_STAT)</a> is set and enabled via the <a href="#">RX Interrupt Enable Register (RX_IRQ_EN)</a> .<br><br>This bit can only be cleared by clearing or disabling the bit(s) in the <a href="#">RX Interrupt Status Register (RX_IRQ_STAT)</a> .   | RO   | 0b      |
| 0    | <b>TX_IRQ_STAT</b><br>TX status. This bit is set when any bit in the <a href="#">TX Interrupt Status Register (TX_IRQ_STAT)</a> is set and enabled via the <a href="#">TX Interrupt Enable Register (TX_IRQ_EN)</a> .<br><br>This bit can only be cleared by clearing or disabling the bit(s) in the <a href="#">TX Interrupt Status Register (TX_IRQ_STAT)</a> .   | RO   | 0b      |

# UPD350

## 11.4.3.2 TX Interrupt Status Register (TX\_IRQ\_STAT)

Address: 1A81h Size: 8 bits

This register reflects the status of various [TX\\_IRQ\\_STAT](#) sources. Whether an interrupt is generated or not depends on the values in the [TX Interrupt Enable Register \(TX\\_IRQ\\_EN\)](#).

Bits in this register are set by hardware and must be cleared by software.

| Bits | Description   | Type  | Default |
|------|---|-------|---------|
| 7    | <b>AUTO_RSP_ABORTED</b><br>A TX auto-response message was aborted. Reason for why the TX was aborted may be determined by reading the <a href="#">TX Auto-Response Abort Status Register (TX_AR_ABORT_STAT)</a> .   | R/W1C | 0b      |
| 6    | <b>AUTO_RSP_SENT</b><br>Hardware has sent an auto-response. This bit is set when hardware is finished sending an auto-response.   | R/W1C | 0b      |
| 5    | <b>OK_TO_TX</b><br>It is now OK to transmit. This bit is set when <a href="#">OK_TO_TX</a> bit in <a href="#">TX Control Register B (TX_CTL_B)</a> changes from 0 to 1 indicating that it is OK for software to initiate transmission.  | R/W1C | 1b      |
| 4    | <b>CRC_RCV_TIMEOUT</b><br>CRC Receive Timer expired. This is a TX failure. This interrupt should be enabled only when Automatic Retry Mode is disabled.<br><br>The <a href="#">EN_CRC_RCV_TMR</a> bit in the <a href="#">RX Control Register A (RX_CTL_A)</a> must be set to enable the timer for use by software.<br><br><b>Note:</b> CRC Receive Timer is also used in BIST Mode to time reception of BIST Error Count message.   | R/W1C | 0b      |
| 3    | <b>TX_EOP</b><br>Hardware is done sending a packet. Note this does not mean that a valid EOP framing symbol was sent. It only means that packet transmission ended, i.e., transmitter was turned off.<br><br>This bit set after each TX attempt.<br><br>This can be used to signal when a Hard or Cable Reset is finished transmission since it does not have a GoodCRC response so the <a href="#">TX_DONE</a> bit will not be set - or if Auto Retry Mode is disabled in which case the hardware is done when the transmitter turns off.<br><br>This bit is used by software to trigger internal timers. Software must be carefully when it enables/disables this interrupt because this bit is set after each TX completion. | R/W1C | 0b      |
| 2    | <b>TX_ABORTED</b><br>A TX message was aborted. Reason for why the TX was aborted may be determined by reading the <a href="#">TX Abort Status Register (TX_ABORT_STAT)</a> .  | R/W1C | 0b      |

| Bits | Description   | Type  | Default |
|------|---|-------|---------|
| 1    | <p><b>TX_FAILED</b><br/>Applicable in Auto Retry Mode only (or when GoodCRC timer is enabled).</p> <p>This interrupt indicates a TX message request failed to complete for one of the following reasons:</p> <ul style="list-style-type: none"> <li>• GoodCRC timer expired</li> <li>• Maximum number of retries exceeded</li> </ul> <p><b>Note:</b> Software may enable the GoodCRC timer without enabling Auto Retry. In this case this interrupt will be generated when GoodCRC timer expires. It is software's responsibility to disable the GoodCRC timer on reception of GoodCRC message to prevent generation of this interrupt.</p> | R/W1C | 0b      |
| 0    | <p><b>TX_DONE</b><br/>Applicable in Auto Retry Mode only. A TX message request is successfully completed, i.e., the message is acknowledged with GoodCRC by recipient.</p> <p>This bit is not set for messages that don't get a GoodCRC message, i.e., Hard or Cable Reset. <b>TX_EOP</b> should be used in such situations.</p> <p>When Auto Retry Mode is disabled, <b>TX_EOP</b> should be used to determine when packet is done transmitting.</p>   | R/W1C | 0b      |

### 11.4.3.3 RX Interrupt Status Register (RX\_IRQ\_STAT)

Address: 1A82h      Size: 8 bits

This register reflects the status of various **RX\_IRQ\_STAT** sources. Whether an interrupt is generated or not depends on the values in the **RX Interrupt Enable Register (RX\_IRQ\_EN)**.

Bits in this register are set by hardware and must be cleared by software.

| Bits | Description   | Type  | Default |
|------|---|-------|---------|
| 7    | <p><b>RX_FIFO_NOT_EMPTY</b><br/>RX FIFO is not empty. This bit is set whenever the RX FIFO has data to be read. Typically set when a valid packet is finished being received and cleared once all data has been read.</p> <p><b>Note:</b> This bit is read only and is cleared once the FIFO is empty.</p>  | RO    | 0b      |
| 6    | <p><b>LINE_WENT_IDLE</b><br/>Line is now idle. This bit is set when hardware detects no activity on the PD bus.</p> <p><b>Note:</b> This bit is not line status, it is an event. If line is already idle when this interrupt is enabled, this bit will be set immediately. If line is busy when this interrupt is enabled, this bit will be set when line goes idle.</p> <p>Software can use this to be informed when either TX is over or RX is over.</p> <p>This will only work while clocks are enabled.</p> | R/W1C | 1b      |
| 5    | <p><b>RX_CABLE_RST</b><br/>Cable Reset Message received.</p>  | R/W1C | 0b      |
| 4    | <b>RESERVED</b>   | RO    | -       |
| 3    | <p><b>RX_HARD_RST</b><br/>Hard Reset Message received.</p>  | R/W1C | 0b      |

# UPD350

| Bits | Description  | Type  | Default |
|------|--|-------|---------|
| 2    | <b>RX_EOP</b><br>Hardware detected valid EOP framing. A bad EOP or abnormal termination will cause packet to be dropped.<br><br>This bit is set for only of frames that started with an SOP type that was enabled via the <a href="#">RX Control Register B (RX_CTL_B)</a> .   | R/W1C | 0b      |
| 1    | <b>RX_SOP</b><br>Hardware detected valid SOP framing sequence.<br><br>This bit is set for any SOP type that is enabled via the <a href="#">RX Control Register B (RX_CTL_B)</a> .  | R/W1C | 0b      |
| 0    | <b>RX_DONE</b><br>RX message is successfully received.<br><br>The following conditions apply: <ul style="list-style-type: none"><li>• In Auto Retry Mode, expected GoodCRC messages are dropped and therefore not indicated.</li><li>• In Auto Response Mode, duplicate packets are dropped and therefore not indicated</li></ul> <b>Note:</b> In Auto Response Mode, this bit is set before the GoodCRC response is sent and regardless of its successful transmission. | R/W1C | 0b      |

## 11.4.3.4 RX Error Interrupt Status Register (RX\_ERR\_IRQ\_STAT)

Address: 1A83h Size: 8 bits

This register reflects the status of various [RX\\_ERR\\_IRQ\\_STAT](#) sources. Whether an interrupt is generated or not depends on the values in the [RX Error Interrupt Enable Register \(RX\\_ERR\\_IRQ\\_EN\)](#).

Bits in this register are set by hardware and must be cleared by software.

| Bits | Description  | Type  | Default |
|------|--|-------|---------|
| 7    | <b>DBG_EVENT</b><br>Debug event occurred: <ul style="list-style-type: none"> <li>Count of packets with bad CRC reached limit. Provides indication of link quality.</li> <li>Count of duplicate packets reached limit. Provides indication dropped GoodCRC packets by receiver.</li> </ul> <b>Note:</b> Software must read both count registers in order to determine which of the above two conditions caused the event.<br><br><b>Note:</b> Unlike other RX IRQ status bits, which are triggered by strobes, this bit is persistent, i.e., if the register causing the interrupt is not cleared prior to clearing the interrupt then this bit will set again. | R/W1C | 0b      |
| 6:4  | <b>RESERVED</b>  | RO    | -       |
| 3    | <b>RX_BAD_PKT</b><br>Received corrupt packet (Bad CRC, Symbol Error, Oversize or ODD nibble count). <a href="#">RX_PKT_STAT[0]</a> (BAD_CRC), <a href="#">RX_PKT_STAT[5]</a> (SYM_ERROR), <a href="#">RX_PKT_STAT[6]</a> (ODD_NIBBLES) or <a href="#">RX_PKT_STAT[3]</a> (RX_OVER_SIZE) in the <a href="#">RX Packet Status Register (RX_PKT_STAT)</a> will be set.  | R/W1C | 0b      |
| 2    | <b>RX_BUF_OVR_RUN</b><br>Receiving packet but no buffer space available. In this case, the <a href="#">RX_PKT_STAT[4]</a> (RX_FIFO_FULL) bit in the <a href="#">RX Packet Status Register (RX_PKT_STAT)</a> will be set.<br><br>Received packet will be dropped.   | R/W1C | 0b      |
| 1    | <b>RX_PCOL_ERROR</b><br>Applicable to Auto Retry Mode only. Hardware detected protocol error. i.e., received other than GoodCRC or Ping message when a GoodCRC message was expected.<br><br>Received message will be placed in RXQ and <a href="#">RX_DONE</a> be will be set.<br><br>Auto Retry will be aborted and <a href="#">TX_ABORTED</a> bit will be set.   | R/W1C | 0b      |
| 0    | <b>RX_PKT_DROPPED</b><br>RX packet is dropped due to: <ul style="list-style-type: none"> <li>Duplicate packet in Auto Response Mode</li> <li>GoodCRC message in Auto Retry Mode</li> </ul>   | R/W1C | 0b      |

# UPD350

## 11.4.3.5 Power Management Interrupt Status Register (PM\_IRQ\_STAT)

Address: [1A84h](#) Size: 8 bits

This register reflects the status of various [PM\\_IRQ\\_STAT](#) sources. Whether an interrupt is generated or not depends on the values in the [Power Management Interrupt Enable and Control Register \(PM\\_IRQ\\_EN\)](#).

Bits in this register are set by hardware and must be cleared by software.

| Bits | Description   | Type  | Default |
|------|---|-------|---------|
| 7:1  | <b>RESERVED</b>   | RO    | -       |
| 0    | <b>UPD_ACT_WS</b><br>USB PD activity detected. Set asynchronously by assertion of the receive input signal at the beginning of any activity.<br><br>To prevent metastability this interrupt should only be enabled when software plans to stop the clocks.<br><br>Clearing the <a href="#">USB_PD_ACT_WS_EN</a> bit will actually prevent this bit from being set unlike the other interrupt status bits.<br><br>This bit is not affected by either <a href="#">UPD_CLK_STOP_EN</a> or <a href="#">UPD_WU_EN</a> .<br><br>USB PD Activity status is available in other register bits during normal operation. | R/W1C | 0b      |

## 11.4.3.6 RX SOP Interrupt Status Register (RX\_SOP\_IRQ\_STAT)

Address: [1A85h](#) Size: 8 bits

This register reflects the status of the occurrence of various received SOP types. The SOP type does not need to be enabled via the [RX Control Register B \(RX\\_CTL\\_B\)](#) in order for a status bit to be set. Whether an interrupt is generated or not depends on the value of the [RX SOP Interrupt Enable Register \(RX\\_SOP\\_IRQ\\_EN\)](#).

The bits in this register are not cascaded into the RX Interrupt Status Register but instead are enabled and OR'ed into their own interrupt signal output.

Bits in this register are set by hardware and must be cleared by software.

| Bits | Description   | Type  | Default |
|------|---|-------|---------|
| 7:5  | <b>RESERVED</b>   | RO    | -       |
| 4:0  | <b>RX_SOP</b><br>Hardware detected valid SOP framing sequence.<br>Bit 0: SOP<br>Bit 1: SOP'<br>Bit 2: SOP"<br>Bit 3: SOP'_Debug<br>Bit 4: SOP''_Debug | R/W1C | 00000b  |



## 11.4.3.7 TX Interrupt Enable Register (TX\_IRQ\_EN)

Address: 1A86h Size: 8 bits

Setting a bit in this register will enable to corresponding source to generate an interrupt. Note that only interrupt generation is affected. The [TX Interrupt Status Register \(TX\\_IRQ\\_STAT\)](#) will still reflect the status of the event.

All interrupts are disabled after POR.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7    | <b>AUTO_RSP_ABORTED_EN</b><br>Setting this bit enables the <a href="#">AUTO_RSP_ABORTED</a> interrupt. | R/W  | 0b      |
| 6    | <b>AUTO_RSP_SENT_EN</b><br>Setting this bit enables the <a href="#">AUTO_RSP_SENT</a> interrupt.       | R/W  | 0b      |
| 5    | <b>OK_TO_TX_EN</b><br>Setting this bit enables the <a href="#">OK_TO_TX</a> interrupt.                 | R/W  | 0b      |
| 4    | <b>CRC_RCV_TIMEOUT_EN</b><br>Setting this bit enables the <a href="#">CRC_RCV_TIMEOUT</a> interrupt.   | R/W  | 0b      |
| 3    | <b>TX_EOP_EN</b><br>Setting this bit enables the <a href="#">TX_EOP</a> interrupt.                     | R/W  | 0b      |
| 2    | <b>TX_ABORTED_EN</b><br>Setting this bit enables the <a href="#">TX_ABORTED</a> interrupt.             | R/W  | 0b      |
| 1    | <b>TX_FAILED_EN</b><br>Setting this bit enables the <a href="#">TX_FAILED</a> interrupt.               | R/W  | 0b      |
| 0    | <b>TX_DONE_EN</b><br>Setting this bit enables the <a href="#">TX_DONE</a> interrupt.                   | R/W  | 0b      |

## 11.4.3.8 RX Interrupt Enable Register (RX\_IRQ\_EN)

Address: 1A87h Size: 8 bits

Setting a bit in this register will enable to corresponding source to generate an interrupt. Note that only interrupt generation is affected. The [RX Interrupt Status Register \(RX\\_IRQ\\_STAT\)](#) will still reflect the status of the event.

All interrupts are disabled after POR.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7    | <b>RX_FIFO_NOT_EMPTY_EN</b><br>Setting this bit enables the <a href="#">RX_FIFO_NOT_EMPTY</a> interrupt. | R/W  | 0b      |
| 6    | <b>LINE_WENT_IDLE_EN</b><br>Setting this bit enables the <a href="#">LINE_WENT_IDLE</a> interrupt.       | R/W  | 0b      |
| 5    | <b>RX_CABLE_RST_EN</b><br>Setting this bit enables the <a href="#">RX_CABLE_RST</a> interrupt.           | R/W  | 0b      |
| 4    | <b>RESERVED</b>  | RO   | -       |
| 3    | <b>RX_HARD_RST_EN</b><br>Setting this bit enables the <a href="#">RX_HARD_RST</a> interrupt.             | R/W  | 0b      |
| 2    | <b>RX_EOP_EN</b><br>Setting this bit enables the <a href="#">RX_EOP</a> interrupt.                       | R/W  | 0b      |
| 1    | <b>RX_SOP_EN</b><br>Setting this bit enables the <a href="#">RX_SOP</a> interrupt.                       | R/W  | 0b      |
| 0    | <b>RX_DONE_EN</b><br>Setting this bit enables the <a href="#">RX_DONE</a> interrupt.                     | R/W  | 0b      |

# UPD350

## 11.4.3.9 RX Error Interrupt Enable Register (RX\_ERR\_IRQ\_EN)

Address: 1A88h Size: 8 bits

Setting a bit in this register will enable to corresponding source to generate an interrupt. Note that only interrupt generation is affected. The [RX Error Interrupt Status Register \(RX\\_ERR\\_IRQ\\_STAT\)](#) will still reflect the status of the event.

All interrupts are disabled after POR.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7    | <b>DBG_EVENT_EN</b><br>Setting this bit enables the <a href="#">DBG_EVENT</a> interrupt.           | R/W  | 0b      |
| 6:4  | <b>RESERVED</b>  | RO   | -       |
| 3    | <b>RX_BAD_PKT_EN</b><br>Setting this bit enables the <a href="#">RX_BAD_PKT</a> interrupt.         | R/W  | 0b      |
| 2    | <b>RX_BUF_OVR_RUN_EN</b><br>Setting this bit enables the <a href="#">RX_BUF_OVR_RUN</a> interrupt. | R/W  | 0b      |
| 1    | <b>RX_PCOL_ERROR_EN</b><br>Setting this bit enables the <a href="#">RX_PCOL_ERROR</a> interrupt.   | R/W  | 0b      |
| 0    | <b>RX_PKT_DROPPED_EN</b><br>Setting this bit enables the <a href="#">RX_PKT_DROPPED</a> interrupt. | R/W  | 0b      |

## 11.4.3.10 Power Management Interrupt Enable and Control Register (PM\_IRQ\_EN)

Address: 1A89h Size: 8 bits

Setting a bit in this register will enable to corresponding source to generate an interrupt. Note that only interrupt generation is affected. The [Power Management Interrupt Status Register \(PM\\_IRQ\\_STAT\)](#) will still reflect the status of the event.

All interrupts are disabled after POR. This register also enables clock start and stop requests.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:4  | <b>RESERVED</b>  | RO   | -       |
| 3    | <b>UPD_CLK_STOP_EN</b><br>If this bit is set, the MAC, upon going idle, will request that the system clock be stopped.<br><br>If this bit is cleared, software is responsible to return the device to sleep mode.<br><br>This bit does not affect the wake up interrupt ( <a href="#">UPD_ACT_WS</a> ) generation.<br><br><b>Note:</b> This bit does not affect the MAC's indication that it requires the clock. Even if this bit is cleared, the MAC, once it is idle, will indicate that it does not need the clock. | R/W  | 0b      |

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 2    | <p><b>UPD_WU_EN</b><br/>If this bit is set, the MAC, upon detecting receive activity, will request that the system clock be started.</p> <p>This bit does not affect the wake up interrupt (<a href="#">UPD_ACT_WS</a>) generation.</p> <p><b>Note:</b> Once clocks have been started, this bit does not affect the MAC's indication that it requires the clock. Even if this bit is cleared, the MAC, once it is non-idle (i.e. squelch is active), will indicate that it requires the clock. Only the period between the asynchronous wake up and the start of squelch is affected.</p> | R/W  | 0b      |
| 1    | <b>RESERVED</b>   | RO   | -       |
| 0    | <p><b>USB_PD_ACT_WS_EN</b><br/>Setting this bit enables the <a href="#">UPD_ACT_WS</a> interrupt.</p>   | R/W  | 0b      |

### 11.4.3.11 RX SOP Interrupt Enable Register (RX\_SOP\_IRQ\_EN)

Address: [1A8Ah](#) Size: 8 bits

Setting a bit in this register will enable to corresponding source to generate an interrupt. Note that only interrupt generation is affected. The [RX SOP Interrupt Status Register \(RX\\_SOP\\_IRQ\\_STAT\)](#) will still reflect the status of the event.

All interrupts are disabled after POR.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:5  | <b>RESERVED</b>  | RO   | -       |
| 4:0  | <p><b>RX_SOP_EN</b><br/>Setting a bit enables the corresponding <a href="#">RX_SOP</a> interrupt.</p> <p>Bit 0: SOP<br/>Bit 1: SOP'<br/>Bit 2: SOP"<br/>Bit 3: SOP'_Debug<br/>Bit 4: SOP''_Debug</p> | R/W  | 00000b  |

# UPD350

## 11.4.3.12 Reset Control Register (RESET\_CTL)

Address: [1A8Bh](#) Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | <p><b>SW_RESET</b><br/>Software generated PD MAC reset. Software can use this bit to reset the PD MAC to its POR state.</p> <p>Software should toggle this bit, i.e., set it and clear it. After clearing this bit, software will have to re initialize the PD MAC, including the BMC registers.</p> <p>This bit is reset by <b>RESET_N</b>.</p>  | R/W  | 0b      |
| 6    | <p><b>BMC_SW_RESET</b><br/>Software generated BMC reset. Software can use this bit to reset the BMC encoder/decoder to its POR state.</p> <p>Software should toggle this bit, i.e., set it and clear it. The BMC registers are NOT affected by this reset.</p>  | R/W  | 0b      |
| 5:1  | <b>RESERVED</b>   | RO   | -       |
| 0    | <p><b>PD_RESET</b><br/>Software should set this bit when it is done processing a PD Hard Reset, Cable Reset or Cable Reset so hardware can return to PD Reset state. Software should toggle this bit, i.e., set it and clear it.</p> <p>The following are reset by PD_RESET:</p> <ul style="list-style-type: none"> <li>• RX_CTL FSM goes to POR state except Hard and Cable Reset processing remains enabled if it was previously enabled by enabling the receiver.</li> <li>• TX_CTL FSM goes to POR state.</li> <li>• TX parallel to serial and 4b5b encoder</li> <li>• TX Control Register B (TX_CTL_B) GO, TX_HARD_RESET, TX_CABLE_RESET bits</li> <li>• TX Parameters Register A (TX_PARAM_A) EN_FWTX bit</li> </ul> <p>The following are not reset:</p> <ul style="list-style-type: none"> <li>• All PD MAC registers, except as listed above.</li> <li>• Various TX packet counters are NOT reset (NUM_PD_PACKETS_SENT, NUM_MISSING_GCRC_MSG, NUM_MISSING_GCRC_MSG_SENT).</li> <li>• Various RX packet counters are NOT reset (RX_BADCRC_PKT_CNT, RX_DUP_PKT_CNT, NUM_PD_PACKETS_RECVD).</li> <li>• RX FIFO is NOT reset.</li> <li>• RX CDR, 4b5b decoder, and CRC are not reset.</li> <li>• TX IFG timer and CRC are not reset.</li> <li>• BIST and Power Management functions are not reset.</li> <li>• BMC encoder/decoder.</li> </ul> | R/W  | 0b      |

## 11.4.4 PD MAC BMC ENCODER/DECODER REGISTERS

The following sub-sections describe the various registers associated with the PD MAC BMC Encoder/Decoder.

### 11.4.4.1 BMC RX High Level Full Bit Maximum Time Register (BMC\_RX\_HI\_FB\_MAX\_TIME)

Address: [1AA0h](#) Size: 8 bits

The value of this register together with the value of the [BMC RX High Level Full Bit Minimum Time Register \(BMC\\_RX\\_HI\\_FB\\_MIN\\_TIME\)](#) is used by the BMC decoder to determine the valid full bit time for a high level RX signal. This time should take into account both the bit rate range and duty cycle distortion of the received signal.

BMC\_RX\_HI\_FB\_MAX\_TIME > valid high time > BMC\_RX\_HI\_FB\_MIN\_TIME

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>BMC_RX_HI_FB_MAX_TIME</b><br>Time in clock cycles at minimum bit-rate and worst duty cycle distortion.<br>$= (((\text{clock\_freq\_KHz} / \text{min\_bit\_rate\_Kbps}) * (100 + \text{tolerance}) / 100) - 1)$<br><b>Note:</b> A value of 202 (decimal) is recommended for this field. | R/W  | 00h     |

### 11.4.4.2 BMC RX High Level Full Bit Minimum Time Register (BMC\_RX\_HI\_FB\_MIN\_TIME)

Address: [1AA1h](#) Size: 8 bits

The value of this register together with the value of the [BMC RX High Level Full Bit Maximum Time Register \(BMC\\_RX\\_HI\\_FB\\_MAX\\_TIME\)](#) is used by the BMC decoder to determine the valid full bit time for a high level RX signal. This time should take into account both the bit rate range and duty cycle distortion of the received signal.

BMC\_RX\_HI\_FB\_MAX\_TIME > valid high time > BMC\_RX\_HI\_FB\_MIN\_TIME

BMC\_RX\_HI\_FB\_MIN\_TIME > BMC\_RX\_HI\_FB\_MAX\_TIME

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>BMC_RX_HI_FB_MIN_TIME</b><br>Time in clock cycles at maximum bit-rate and worst duty cycle distortion.<br>$= (((\text{clock\_freq\_KHz} / \text{max\_bit\_rate\_Kbps}) * (100 - \text{tolerance}) / 100) - 1)$<br><b>Note:</b> A value of 116 (decimal) is recommended for this field. | R/W  | 00h     |

### 11.4.4.3 BMC RX Low Level Full Bit Maximum Time Register (BMC\_RX\_LO\_FB\_MAX\_TIME)

Address: [1AA2h](#) Size: 8 bits

The value of this register together with the value of the [BMC RX Low Level Full Bit Minimum Time Register \(BMC\\_RX\\_LO\\_FB\\_MIN\\_TIME\)](#) is used by the BMC decoder to determine the valid full bit time for a low level RX signal. This time should take into account both the bit rate range and duty cycle distortion of the received signal.

BMC\_RX\_LO\_FB\_MAX\_TIME > valid low time > BMC\_RX\_LO\_FB\_MIN\_TIME

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>BMC_RX_LO_FB_MAX_TIME</b><br>Time in clock cycles at minimum bit-rate and worst duty cycle distortion.<br>$= (((\text{clock\_freq\_KHz} / \text{min\_bit\_rate\_Kbps}) * (100 + \text{tolerance}) / 100) - 1)$<br><b>Note:</b> A value of 202 (decimal) is recommended for this field. | R/W  | 00h     |

# UPD350

## 11.4.4.4 BMC RX Low Level Full Bit Minimum Time Register (BMC\_RX\_LO\_FB\_MIN\_TIME)

Address: [1AA3h](#) Size: 8 bits

The value of this register together with the value of the [BMC RX Low Level Full Bit Maximum Time Register \(BMC\\_RX\\_LO\\_FB\\_MAX\\_TIME\)](#) is used by the BMC decoder to determine the valid full bit time for a low level RX signal. This time should take into account both the bit rate range and duty cycle distortion of the received signal.

$BMC\_RX\_LO\_FB\_MAX\_TIME > \text{valid low time} > BMC\_RX\_LO\_FB\_MIN\_TIME$

$BMC\_RX\_LO\_FB\_MIN\_TIME > BMC\_RX\_LO\_HB\_MAX\_TIME$

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>BMC_RX_LO_FB_MIN_TIME</b><br>Time in clock cycles at maximum bit-rate and worst duty cycle distortion.<br>$= (((\text{clock\_freq\_KHz} / \text{max\_bit\_rate\_Kbps}) * (100 - \text{tolerance}) / 100) - 1)$<br><b>Note:</b> A value of 116 (decimal) is recommended for this field. | R/W  | 00h     |

## 11.4.4.5 BMC RX High Level Half Bit Maximum Time Register (BMC\_RX\_HI\_HB\_MAX\_TIME)

Address: [1AA4h](#) Size: 8 bits

The value of this register together with the value of the [BMC RX High Level Half Bit Minimum Time Register \(BMC\\_RX\\_HI\\_HB\\_MIN\\_TIME\)](#) is used by the BMC decoder to determine the valid half bit time for a high level RX signal. This time should take into account both the bit rate range and duty cycle distortion of the received signal.

$BMC\_RX\_HI\_HB\_MAX\_TIME > \text{valid high time} > BMC\_RX\_HI\_HB\_MIN\_TIME$

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>BMC_RX_HI_HB_MAX_TIME</b><br>Time in clock cycles at minimum bit-rate and worst duty cycle distortion.<br>$= ((1 / 2) * ((\text{clock\_freq\_KHz} / \text{min\_bit\_rate\_Kbps}) * (100 + \text{tolerance}) / 100) - 1)$<br><b>Note:</b> A value of 110 (decimal) is recommended for this field. | R/W  | 00h     |

## 11.4.4.6 BMC RX High Level Half Bit Minimum Time Register (BMC\_RX\_HI\_HB\_MIN\_TIME)

Address: [1AA5h](#) Size: 8 bits

The value of this register together with the value of the [BMC RX High Level Half Bit Maximum Time Register \(BMC\\_RX\\_HI\\_HB\\_MAX\\_TIME\)](#) is used by the BMC decoder to determine the valid half bit-time for a high level RX signal. This time should take into account both the bit rate range and duty cycle distortion of the received signal.

$BMC\_RX\_HI\_HB\_MAX\_TIME > \text{valid high time} > BMC\_RX\_HI\_HB\_MIN\_TIME$

$BMC\_RX\_HI\_FB\_MIN\_TIME > BMC\_RX\_HI\_HB\_MAX\_TIME$

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>BMC_RX_HI_HB_MIN_TIME</b><br>Time in clock cycles at maximum bit-rate and worst duty cycle distortion.<br>$= ((1 / 2) * ((\text{clock\_freq\_KHz} / \text{max\_bit\_rate\_Kbps}) * (100 - \text{tolerance}) / 100) - 1)$<br><b>Note:</b> A value of 48 (decimal) is recommended for this field. | R/W  | 00h     |

## 11.4.4.7 BMC RX Low Level Half Bit Maximum Time Register (BMC\_RX\_LO\_HB\_MAX\_TIME)

Address: [1AA6h](#) Size: 8 bits

The value of this register together with the value of the [BMC RX Low Level Half Bit Minimum Time Register \(BMC\\_RX\\_LO\\_HB\\_MIN\\_TIME\)](#) is used by the BMC decoder to determine the valid half bit-time for a low level RX signal. This time should take into account both the bit rate range and duty cycle distortion of the received signal.

BMC\_RX\_LO\_HB\_MAX\_TIME > valid low time > BMC\_RX\_LO\_HB\_MIN\_TIME

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>BMC_RX_LO_HB_MAX_TIME</b><br>Time in clock cycles at minimum bit-rate and worst duty cycle distortion.<br>$=((1 / 2) * ((\text{clock\_freq\_KHz} / \text{min\_bit\_rate\_Kbps}) * (100 + \text{tolerance}) / 100) - 1)$<br><b>Note:</b> A value of 110 (decimal) is recommended for this field. | R/W  | 00h     |

## 11.4.4.8 BMC RX Low Level Half Bit Minimum Time Register (BMC\_RX\_LO\_HB\_MIN\_TIME)

Address: [1AA7h](#) Size: 8 bits

The value of this register together with the value of the [BMC RX Low Level Half Bit Maximum Time Register \(BMC\\_RX\\_LO\\_HB\\_MAX\\_TIME\)](#) is used by the BMC decoder to determine the valid half bit-time for a low level RX signal. This time should take into account both the bit rate range and duty cycle distortion of the received signal.

BMC\_RX\_LO\_HB\_MAX\_TIME > valid low time > BMC\_RX\_LO\_HB\_MIN\_TIME

BMC\_RX\_LO\_FB\_MIN\_TIME > BMC\_RX\_LO\_HB\_MAX\_TIME

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>BMC_RX_LO_HB_MIN_TIME</b><br>Time in clock cycles at maximum bit-rate and worst duty cycle distortion.<br>$=((1 / 2) * ((\text{clock\_freq\_KHz} / \text{max\_bit\_rate\_Kbps}) * (100 - \text{tolerance}) / 100) - 1)$<br><b>Note:</b> A value of 48 (decimal) is recommended for this field. | R/W  | 00h     |

# UPD350

## 11.4.4.9 BMC RX Squelch Assert Time Register (BMC\_RX\_SQL\_ASSERT\_TIME)

Address: 1AA8h Size: 8 bits

The value of this register is used by the BMC decoder to determine when there is a valid signal. If three edges of the receive signal are seen within this time, then the “squelch” goes active. This time should take into account the minimum bit rate but does not need to account for the duty cycle distortion of the received signal. A typical assert time would be 3 maximum half bit times pulse desired tolerance.

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>BMC_RX_SQL_ASSERT_TIME</b><br>Time in clock cycles x 4 at minimum bit-rate.<br><br>assert time uS = $(\text{BMC\_RX\_SQL\_ASSERT\_TIME} \times 4 + 1) / \text{clock\_freq MHz}$<br><br>A typical assert time would be 3 maximum half bit times plus desired tolerance.<br><br><b>Note:</b> A value of 70 (decimal) is recommended for this field. | R/W  | 00h     |

## 11.4.4.10 BMC RX Squelch Hold Time Register (BMC\_RX\_SQL\_HOLD\_TIME)

Address: 1AA9h Size: 8 bits

The value of this register is used by the BMC decoder to provide time for the CDR circuit to output the final bit of data. A typical hold time would be 1 maximum half bit time pulse desired tolerance.

**Note:** The Squelch Drop time is based on the BMC RX Maximum High and Low Time registers.

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <b>BMC_RX_SQL_HOLD_TIME</b><br>Time in clock cycles x 4 at minimum bit-rate.<br><br>hold time uS = $(\text{BMC\_RX\_SQL\_HOLD\_TIME} \times 4 + 1) / \text{clock\_freq MHz}$<br><br>typical value = $((1 / 2) * ((\text{clock\_freq\_KHz} / \text{min\_bit\_rate\_Kbps}) * (100 + \text{tolerance}) / 100) - 1) / 4$<br><br><b>Note:</b> A value of 23 (decimal) is recommended for this field. | R/W  | 00h     |



## 11.4.4.11 BMC TX Bit-Time Count Register (BMC\_TX\_BITTIME\_CNT)

Address: [1AB0h](#) Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <p><b>BMC_TX_BIT_TIME_CNT</b><br/>Bit-time counter value. The BMC encoder uses this value to determine the bit-timing for the last bit of data. This register can be used to adjust bit-time for testing purpose (adjusting bitrate).</p> <p>Count value is based on clock frequency and is given by:<br/> <math>((\text{Clock Freq KHz} / \text{Bit Rate Kbps}) - 1)</math><br/>                     i.e.,<br/>                     Clock Frequency = 48000KHz (48MHz)<br/>                     Nominal Bit Rate = 300 Kbps<br/> <math>\text{bit\_time\_cnt} = (48000 / 300) - 1 = 159</math></p> <p><b>Note:</b> A value of 159 (decimal) is recommended for this field.</p> | R/W  | 00h     |

## 11.4.4.12 BMC Transition Window Time Register (BMC\_TRANSITION\_WINDOW\_TIME)

Address: [1AB1h](#) Size: 8 bits

The value of this register is used by the BMC decoder to determine when the line is IDLE. Detection is active when 3 transitions occur at the receiver within a time window of [BMC\\_TRANSITION\\_WINDOW\\_TIME](#). After waiting [BMC\\_TRANSITION\\_WINDOW\\_TIME](#) without detecting 3 transitions, the bus is considered idle. The USB PD Specification calls for 12uS minimum and 20uS maximum.

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:0  | <p><b>BMC_TRANSITION_WINDOW_TIME</b><br/>Time in clock cycles x 4</p> <p><math>\text{transition time } \mu\text{S} = (\text{BMC\_TRANSITION\_WINDOW\_TIME} \times 4) / \text{clock\_freq MHz}</math></p> <p>Per the USB PD Specification, this value should be set between 12uS and 20uS. This would be a value between 144 and 240 at 48MHz.</p> <p><b>Note:</b> Unlike the <a href="#">TX Turnaround Time Register (TX_TA_TIME)</a>, this hardware does not use a pre-scaler, therefore the time specified is accurate.</p> <p><b>Note:</b> A value of 200 (decimal) is recommended for this field.</p> | R/W  | 00h     |

# UPD350

## 11.4.5 PD MAC BIST REGISTERS

The following sub-sections describe the various registers associated with the PD MAC Built-In Self Test (BIST).

### 11.4.5.1 BIST Control Register A (BIST\_CTL\_A)

Address: [1AC0h](#) Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:5  | <b>RESERVED</b>  | RO   | -       |
| 4    | <b>BIST_RX_EN</b><br>Enable BIST Receiver.<br><br>Setting this bit will: <ul style="list-style-type: none"><li>• Enable the BIST receiver.</li><li>• Reset the PRBS generator in the BIST RX logic so it is ready to compare incoming BIST PRBS pattern.</li><li>• Reset the BIST error count registers (<a href="#">BIST Error Count High Register (BIST_ERR_CNT_HI)</a> and <a href="#">BIST Error Count Low Register (BIST_ERR_CNT_LO)</a>).</li></ul> Normally this bit is set only when BIST receiver mode is required; however, this bit can be set to enable loopback BIST testing by disabling Automatic Response Mode and enabling the RX loopback (setting the <a href="#">EN_LOOPBACK</a> bit in the <a href="#">RX Control Register A (RX_CTL_A)</a> ).<br><br>This bit must be cleared and set by software every time a new BIST RX request comes in.<br><b>Note:</b> In BIST loopback test mode, BIST TX must be manually triggered for each TX packet since functional receiver path is disabled. | R/W  | 0b      |
| 3    | <b>BIST_EN</b><br>Enable BIST. Set this bit when BIST logic is activated.<br>This bit together with the <a href="#">EN_LOOPBACK</a> bit in the <a href="#">RX Control Register A (RX_CTL_A)</a> is used by hardware to block received data from going into functional path. This means that when loopback is enabled in BIST mode hardware cannot detect hard reset.<br><br>This bit also powers up the BMC transmitter for BIST mode operation. Software should set this bit for a sufficient amount of time (5us) before trigger transmission of BIST frame via <a href="#">BIST_TX_START/BIST_TX_STATUS</a> .   | R/W  | 0b      |
| 2:0  | <b>BIST_TX_MODE</b><br>Set BIST Test Mode. Only the following mode is supported:<br>010b: BIST Carrier Test Mode-2 (alternating '1's and '0's)<br><br>All other modes are reserved and should not be used.   | R/W  | 000b    |

## 11.4.5.2 BIST Control Register B (BIST\_CTL\_B)

Address: 1AC1h Size: 8 bits

| Bits | Description   | Type  | Default |
|------|---|-------|---------|
| 7:3  | <b>RESERVED</b>   | RO    | -       |
| 2    | <b>BIST_CLR_ERR_CNT</b><br>Clears the BIST error count registers <a href="#">BIST Error Count High Register (BIST_ERR_CNT_HI)</a> and <a href="#">BIST Error Count Low Register (BIST_ERR_CNT_LO)</a> .   | WO    | 0b      |
| 1    | <b>BIST_TX_RST</b><br>Reset the TX logic and PRBS generator. Software must set this bit once before starting the BIST test, i.e., setting <a href="#">BIST_TX_START/BIST_TX_STATUS</a> bit for the first time.<br><br>Since this bit resets the PRBS generator it should not be set again until the current BIST test is ended.<br><br>This bit is not latched and will always read '0'<br><br>The PRBS generator cannot be reset by <a href="#">BIST_TX_START/BIST_TX_STATUS</a> because that would reset it for each TX BIST frame.<br>This bit should be used to stop the continuous BIST TX mode (2). It may take up to 1 bit time for the TX to stop. <a href="#">BIST_EN</a> should not be cleared until after this time.<br><br><b>Note:</b> If this bit is set simultaneously with <a href="#">BIST_TX_START/BIST_TX_STATUS</a> , it takes precedence and will void <a href="#">BIST_TX_START/BIST_TX_STATUS</a> .  | WO    | 0b      |
| 0    | <b>BIST_TX_START/BIST_TX_STATUS</b><br>Start BIST transmission. Setting this bit will trigger transmission of BIST frame.<br><br>This bit is not latched and reading it will return the status of current BIST transmission.<br><br>Depending on BIST Mode, transmission will either continue indefinitely (unless <a href="#">BIST_TX_RST</a> is asserted) or stop after sending a BIST PRBS frame.<br><br>BIST does not support sending of next BIST frame automatically. It must be triggered by software by first clearing and then re-setting this bit.<br><br><b>Note:</b> This bit cannot be set simultaneously with <a href="#">BIST_TX_RST</a> . <a href="#">BIST_TX_RST</a> has precedence and will void <a href="#">BIST_TX_START/BIST_TX_STATUS</a> .<br><br>In BIST RX mode, hardware will automatically send the BIST Error Count message if the <a href="#">EN_AUTO_RSP_MODE</a> bit in the <a href="#">TX Control Register A (TX_CTL_A)</a> is set. | WO/RO | 0b      |

# UPD350

## 11.4.5.3 BIST Error Count High Register (BIST\_ERR\_CNT\_HI)

Address: [1AC2h](#) Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>BIST_ERR_CNT_HI[7:0]</b><br>Upper byte of BIST error count (bits 15-8) (BIST_ERR_CNT[15:8]) | RO   | 00h     |

## 11.4.5.4 BIST Error Count Low Register (BIST\_ERR\_CNT\_LO)

Address: [1AC3h](#) Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:0  | <b>BIST_ERR_CNT_LO[7:0]</b><br>Lower byte of BIST error count (bits 7-0) (BIST_ERR_CNT[7:0]) | RO   | 00h     |

## 11.4.5.5 BIST RX Status Register (BIST\_RX\_STAT)

Address: [1AC7h](#) Size: 8 bits

This register is used to help with functional testing of PD AFE on ATE. Hardware is configured to transmit BIST PRBS frames. At the same time, loopback mode is enabled and BIST receive mode is enabled. Now when a PRBS frame is transmitted it is also received and compared. This register provides information when the BIST PRBS frame is done receiving and whether there were any errors detected.

| Bits | Description   | Type  | Default |
|------|---|-------|---------|
| 7:2  | <b>RESERVED</b>   | RO    | -       |
| 1    | <b>BIST_RX_ERROR</b><br>This bit is valid only when <a href="#">BIST_RX_DONE</a> bit is set.<br><br>A value of "0" indicates that BIST PRBS frame was received without errors.<br>A value of "1" indicates that BIST PRBS frame was received with errors. | RO    | 0b      |
| 0    | <b>BIST_RX_DONE</b><br>Successfully received a BIST RX FRAME.<br>Writing a "1" to this bit will clear it.   | R/W1C | 0b      |

## 12.0 POWER SWITCH

To enable the device to efficiently support dead battery use cases, an integrated power switch is provided to select between two external +3.3V supplies:

- **3V3\_ALW**: +3.3V main power supply input to integrated power switch.
- **3V3\_VBUS**: +3.3V power supply input derived from VBUS to the integrated power switch.

The power switch allows the core to be powered from **3V3\_ALW** normally, and from **3V3\_VBUS** when **3V3\_ALW** is not present. This effectively allows connection detection and system wakeup without external processor intervention (external processor in sleep mode).


Attached to **3V3\_ALW** and **3V3\_VBUS** are two FET switches. The first FET switches have a diode across the output.

There are three voltage comparators. **VBUS\_PWRGD** is on when **3V3\_VBUS** exceeds 2.7V. **3V3\_ALW\_PWRGD** is on when **3V3\_ALW** exceeds 2.7V. **VCORE\_PWRGD** is on when the core voltage reaches an operational level.

If **VCORE\_PWRGD** is not asserted, the part is held in reset. If both **VBUS\_PWRGD** and **3V3\_ALW\_PWRGD** are not asserted, the part is held in reset, regardless of the state of the **VCORE\_PWRGD**.

A block diagram of the internal power switch can be seen in [Figure 12-1](#).

**FIGURE 12-1: POWER SWITCH BLOCK DIAGRAM**

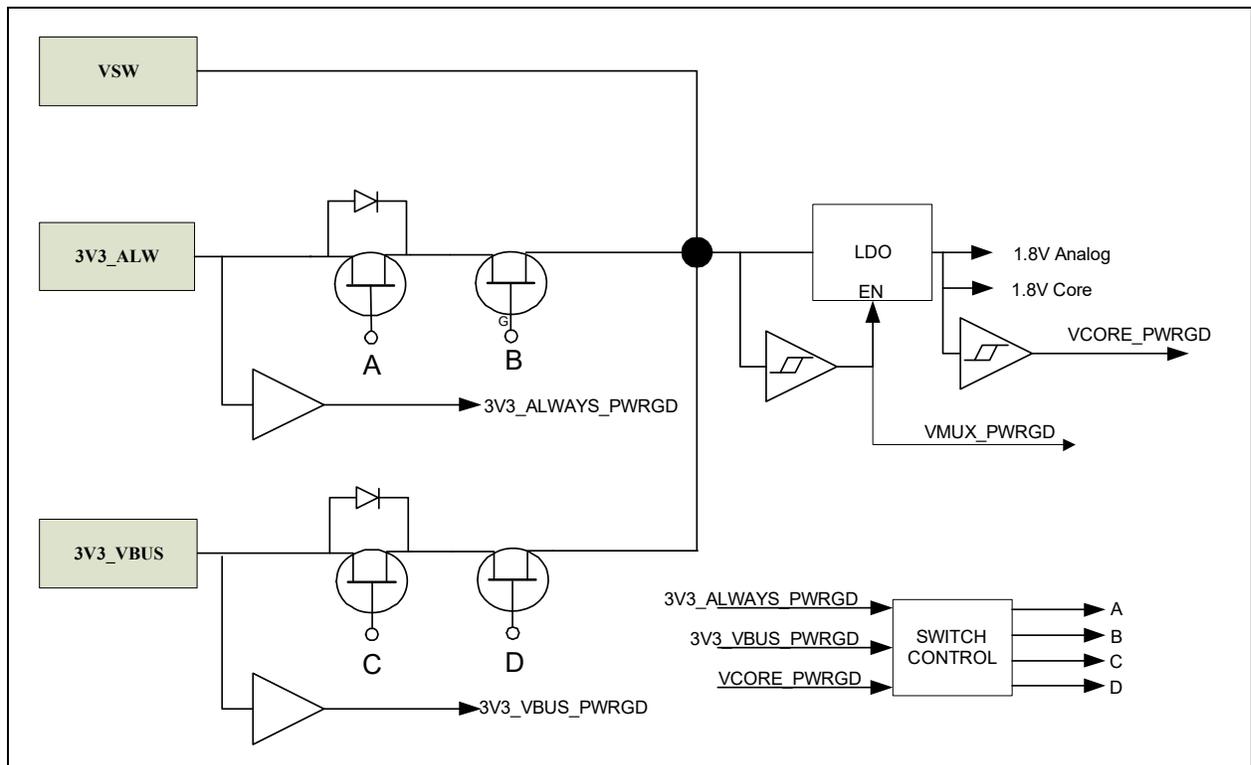


# UPD350

## 12.1 Operation

### 12.1.1 POWER UP

When the device is powering up, both VBUS\_PWRGD and 3V3\_ALW\_PWRGD are low. Under these conditions, switches A and C are open, B and D are closed. The voltage going to the input of the core regulator is the higher of 3V3\_ALW and 3V3\_VBUS. The diodes prevent back drive.


**FIGURE 12-2: POWER SWITCH: POWERING UP**

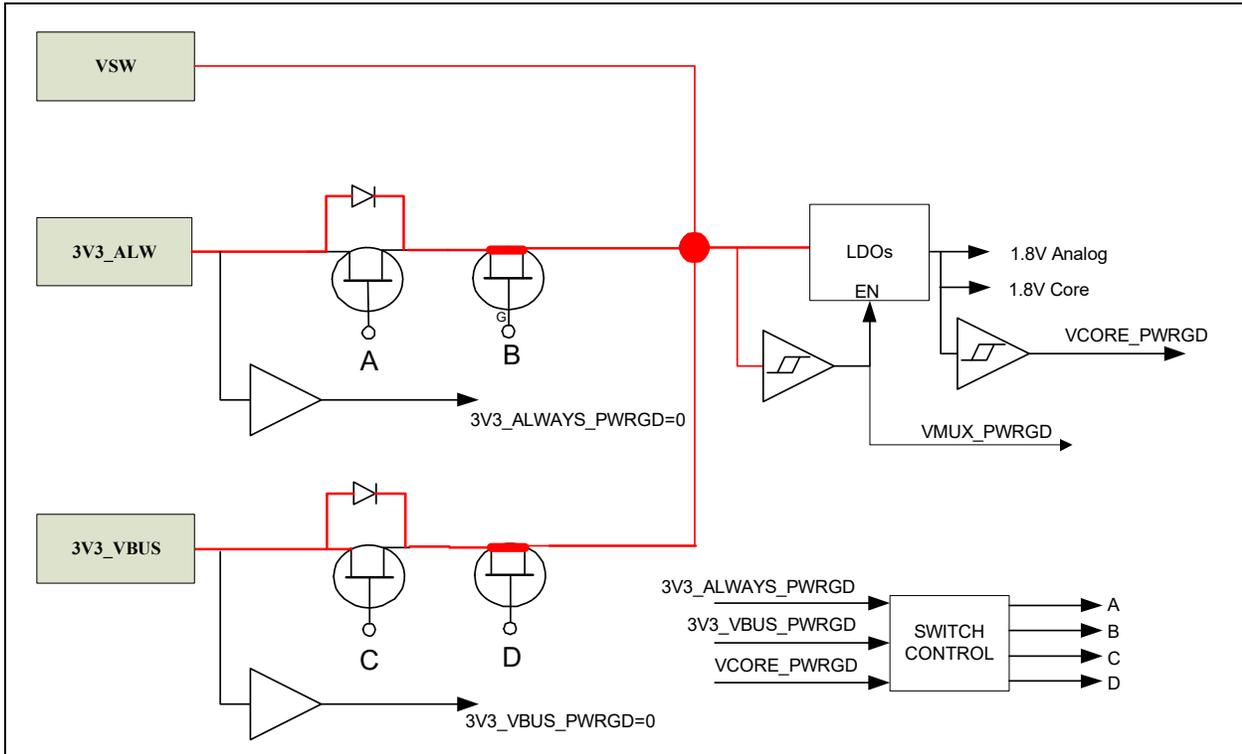


## 12.1.2 3V3\_ALW ONLY POWERS UP

In this case, only 3V3\_ALW powers up (VBUS\_PWRGD = 0 and 3V3\_ALW\_PWRGD = 1). When this occurs, FET switch D is opened. After 50us, FET switch A is shorted. This sequence eliminates the possibility of back-drive when the diode is shorted to eliminate the voltage drop.

**FIGURE 12-3: POWER SWITCH: POWERING UP STEP ONE**

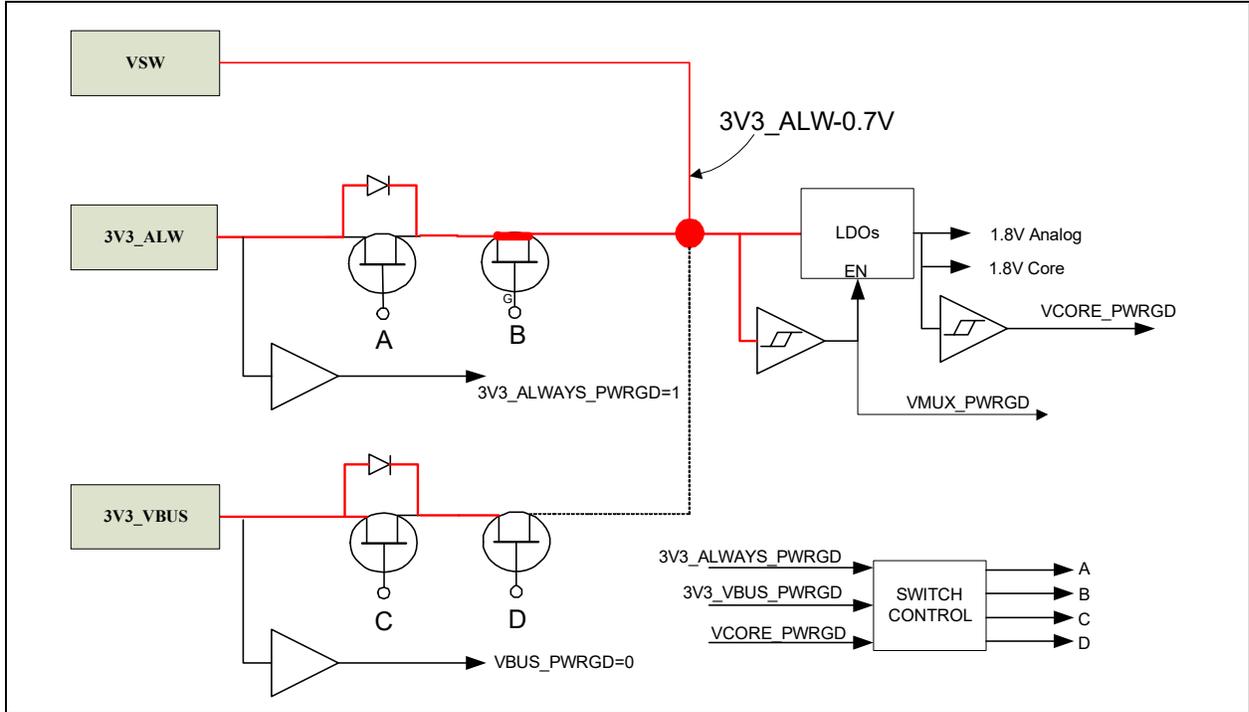

**FIGURE 12-4: POWER SWITCH: POWERING UP STEP TWO**

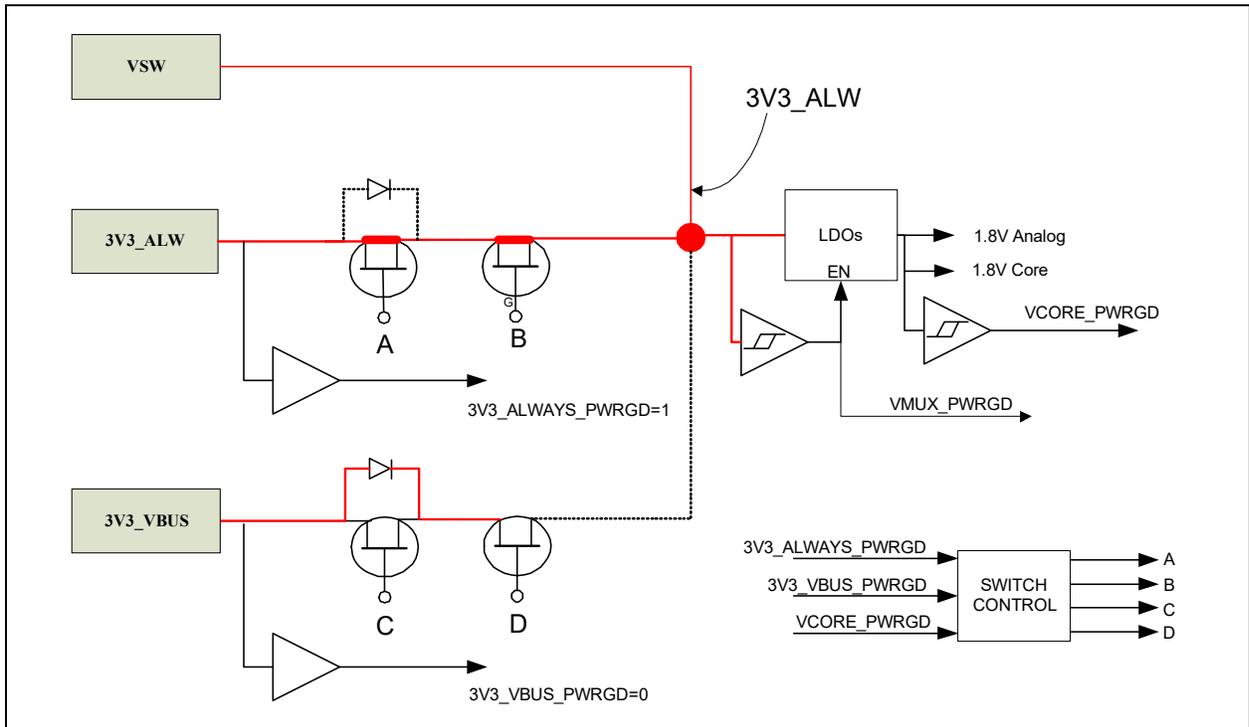


# UPD350


## 12.1.3 VBUS ONLY POWERS UP

This is the opposite example from the previous case. In this case, only VBUS powers up ( $3V3\_ALW\_PWRGD = 0$  throughout, and  $VBUS\_PWRGD = 1$  when the threshold is hit). Once  $VBUS\_PWRGD$  is valid, the internal regulator is turned on and normal operation begins. At no time during this process is the  $3V3\_ALW$  rail back driven. When VBUS is available and  $3V3\_ALW$  is not, VBUS can supply 500mA or more. VBUS can also be in one of two modes. The first is a normal supply mode that can supply 500mA or more. VBUS can also be in a high impedance mode where the output voltage drop linearly with current supplied (known as vSafeDB in the USB PD specification). The voltage and current relationship is shown in the Figure 12-5.

**FIGURE 12-5: POWER SWITCH: VBUS OUTPUT IN HIGH IMPEDANCE MODE**

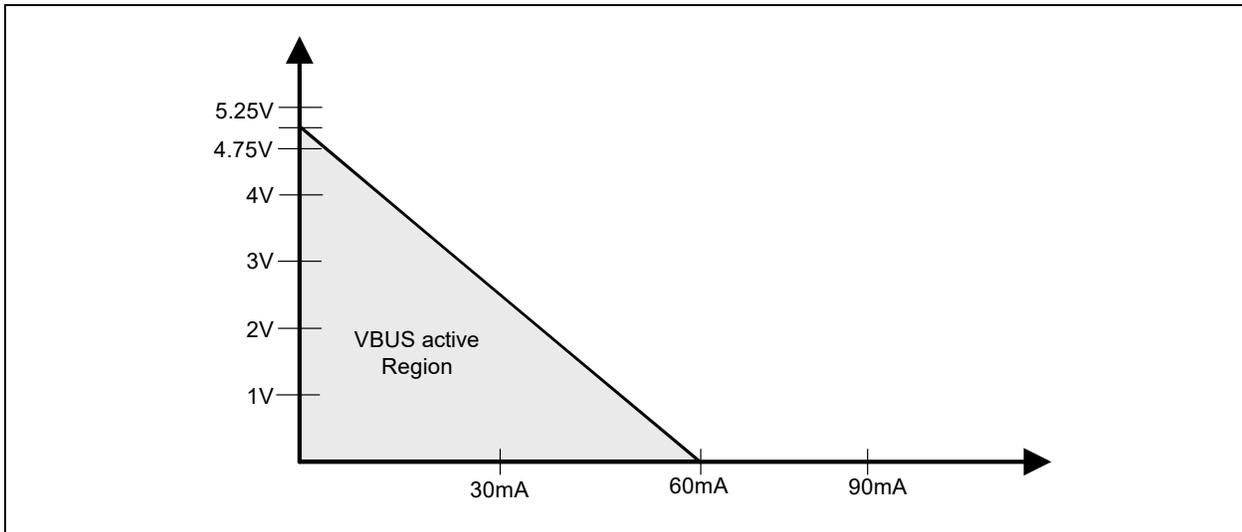


**FIGURE 12-6: POWER SWITCH: VBUS ONLY POWER UP STEP ONE**

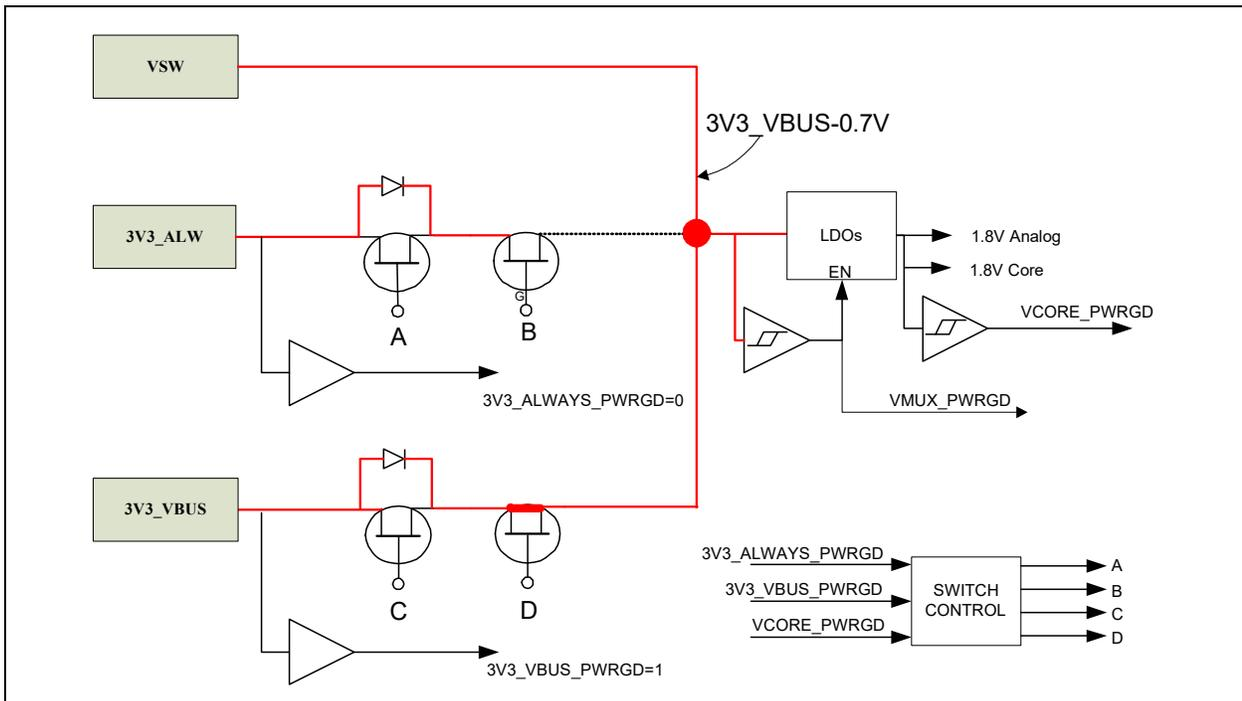




**FIGURE 12-7: POWER SWITCH: VBUS ONLY POWER UP STEP TWO**

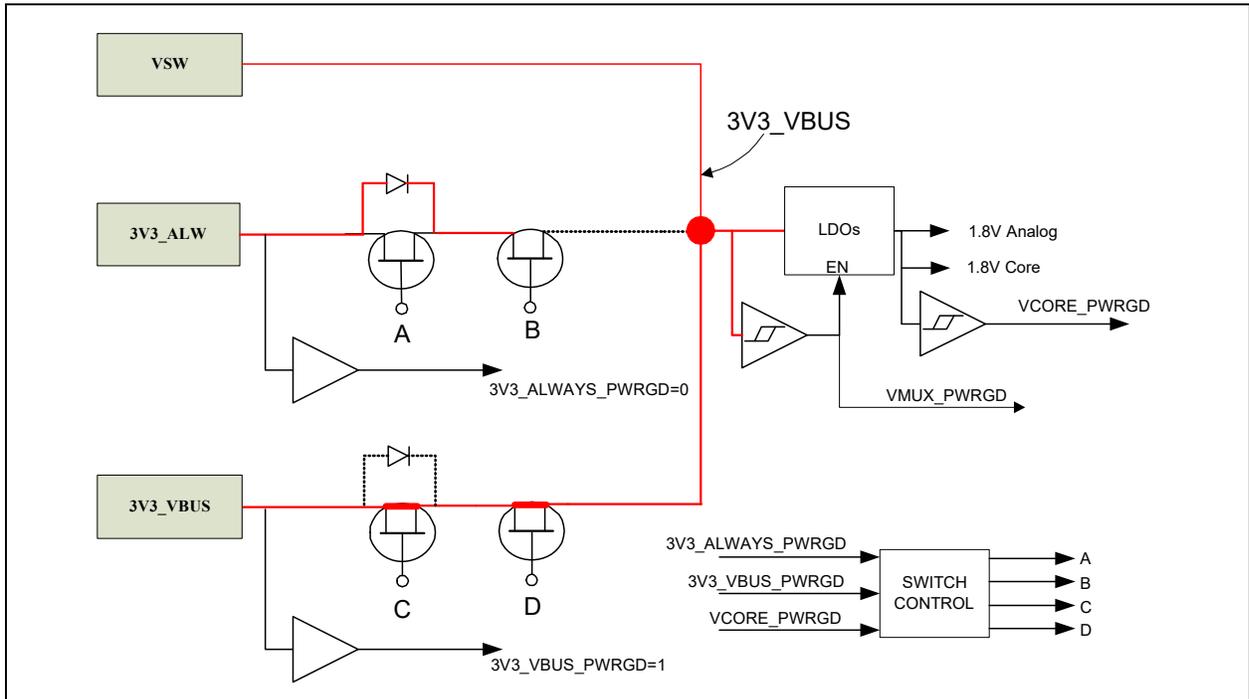

## 12.1.4 VBUS POWERED UP FOLLOWED BY 3V3\_ALW COMING UP

In this case, VBUS is already powered up and 3V3\_ALW starts to come up (and will take over and power the core). [Figure 12-8](#) shows the VBUS only state.


**FIGURE 12-8: POWER SWITCH: VBUS FOLLOWED BY 3V3\_ALW STEP ONE**

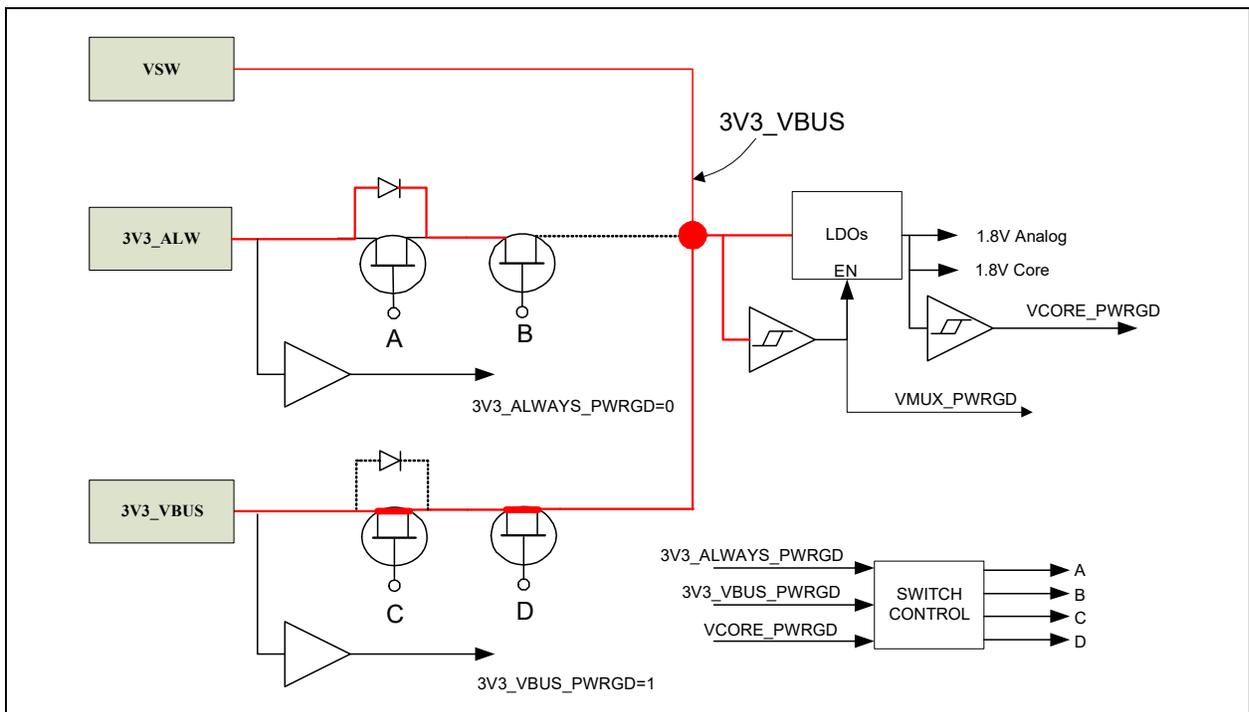

# UPD350


Once 3V3\_ALW\_PWRGD is detected, FET switch C is opened. The diode is required because 3V3\_ALW could be greater than or less than VBUS. The voltage at the input to the LDO drops to 3V3\_VBUS-0.7V.

**FIGURE 12-9: POWER SWITCH: VBUS FOLLOWED BY 3V3\_ALW STEP TWO**

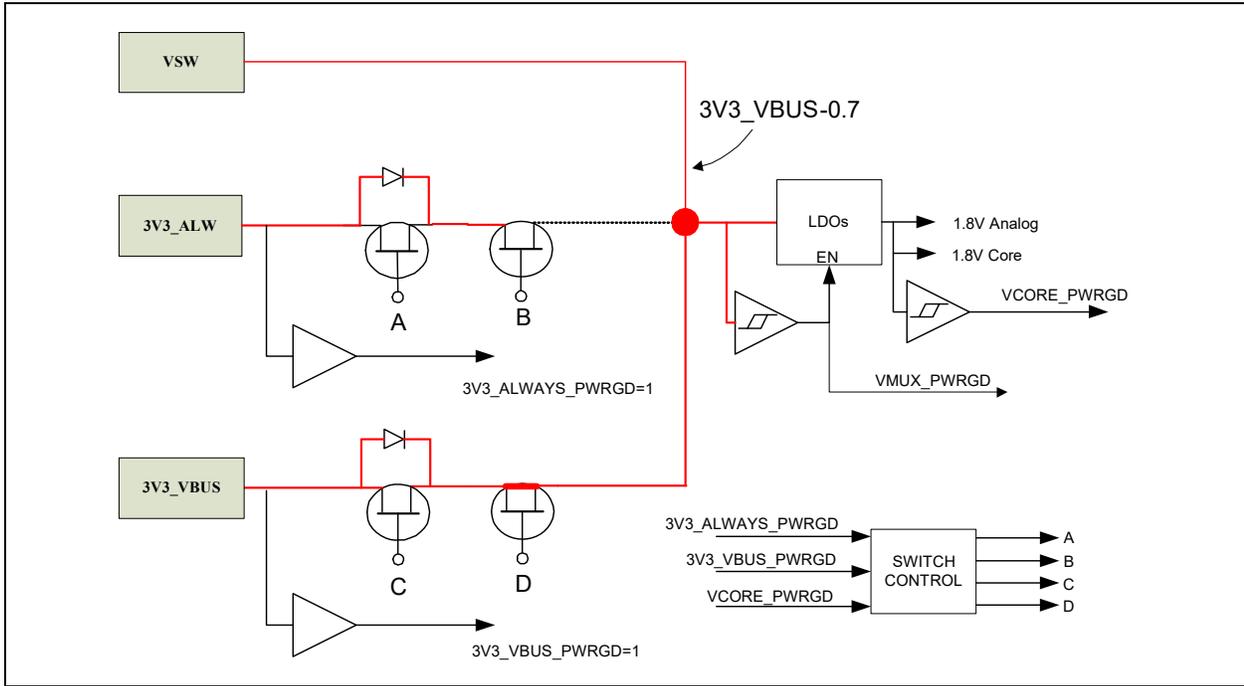


50us after FET C is opened, FET B is shorted. The two diodes ensure there is no back drive. The input to the core regulator will be at the higher voltage of VBUS - 0.7V or 3V3\_ALW - 0.7V.

**FIGURE 12-10: POWER SWITCH: VBUS FOLLOWED BY 3V3\_ALW STEP THREE**

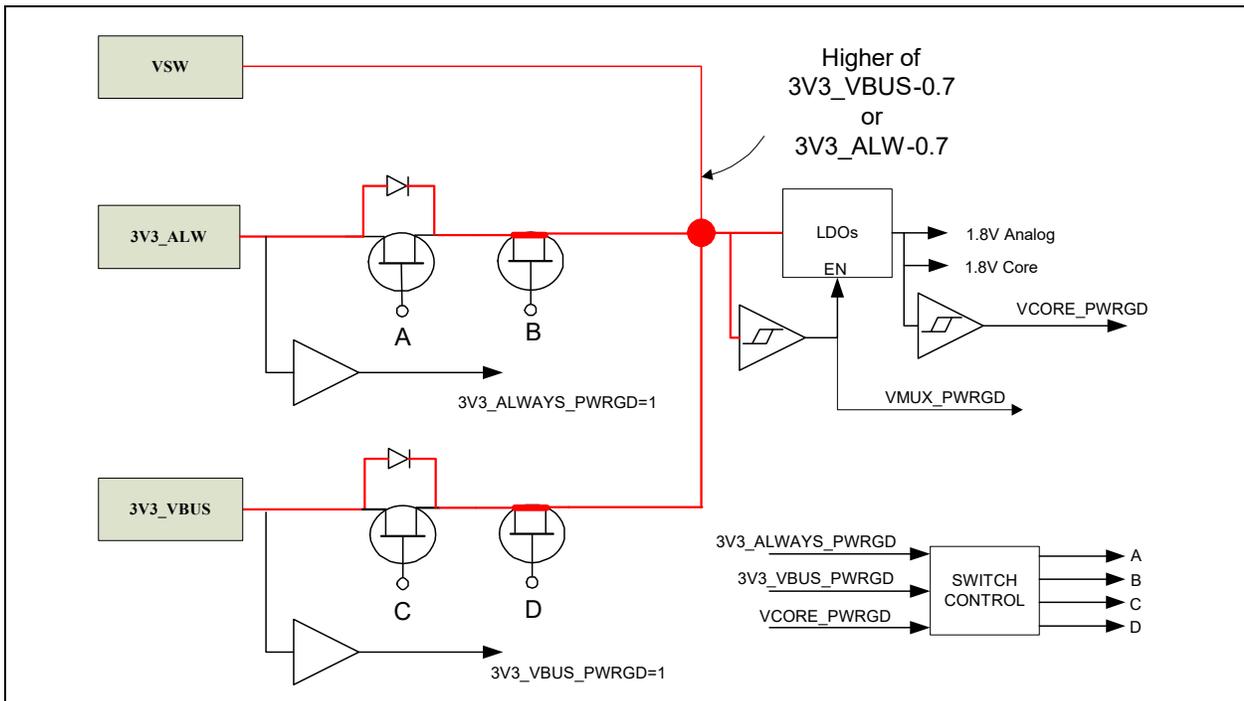


50us after FET B is shorted, FET D is opened. The core regulator input is now 3V3\_ALW - 0.7V.

**FIGURE 12-11: POWER SWITCH: VBUS FOLLOWED BY 3V3\_ALW STEP FOUR**

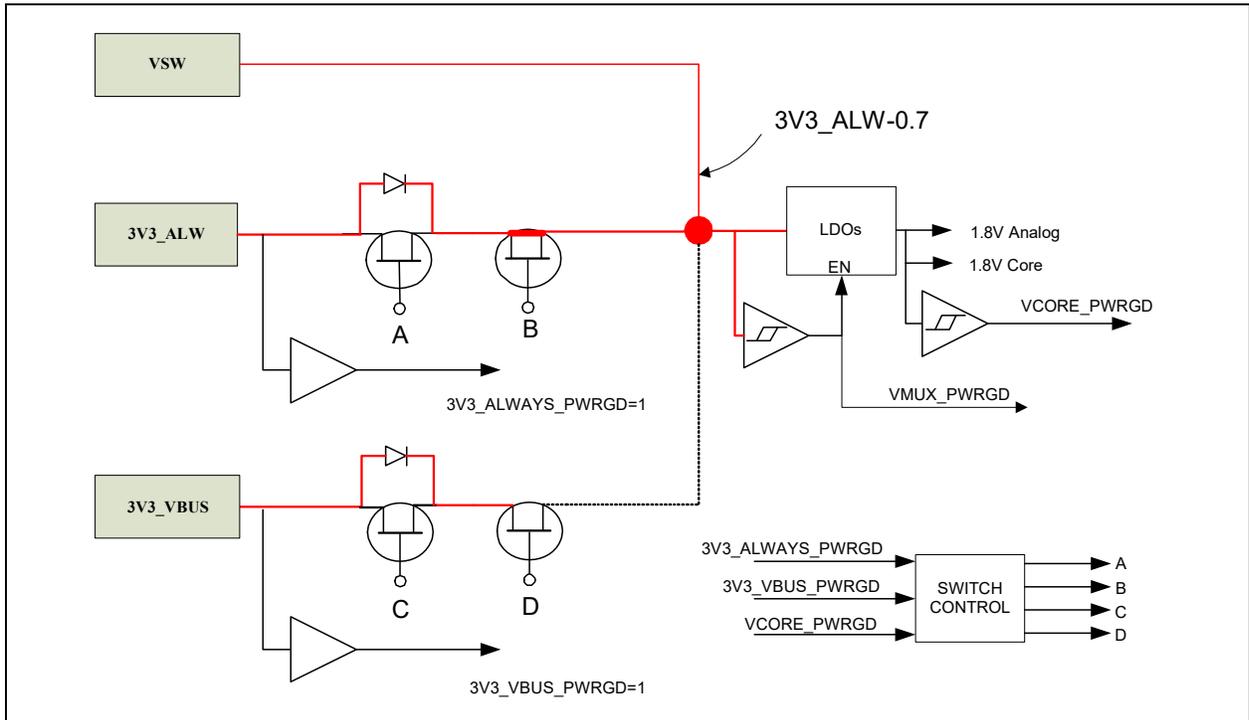

In the final step, 50us after FET D is opened, FET A is shorted. The input to the core regulator now becomes 3V3\_ALW.

**FIGURE 12-12: POWER SWITCH: VBUS FOLLOWED BY 3V3\_ALW STEP FIVE**

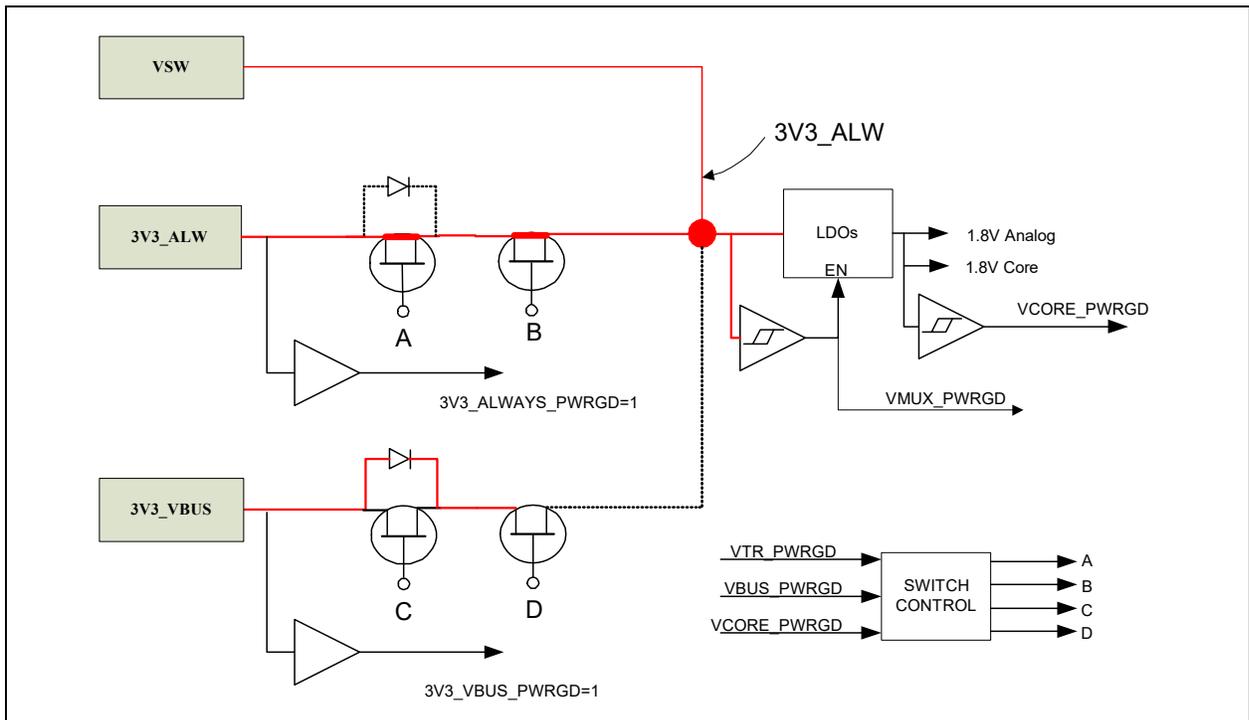

# UPD350

## 12.1.5 3V3\_ALW POWERED UP FOLLOWED BY VBUS COMING UP

In this case, 3V3\_ALW is already powered up and VBUS starts to come up. 3V3\_ALW will remain the power source for the core and no changes will be made to the FET switches.


## 12.1.6 POWERED UP WITH VBUS AND 3V3\_ALW, VBUS GOING AWAY

In this case, 3V3\_ALW and VBUS are both present. The core is always powered from 3V3\_ALW. If VBUS goes away, nothing changes in the voltage to the core. An interrupt will be generated to the processor to let it know that VBUS status changed.

## 12.1.7 POWERED UP WITH VBUS AND 3V3\_ALW, 3V3\_ALW GOING AWAY


In this case, 3V3\_ALW and VBUS are both present. The core is always powered from 3V3\_ALW. If 3V3\_ALW goes away, the switch will first transition to the initial power on state, then transition to the VBUS only state.

**FIGURE 12-13: POWER SWITCH: VBUS PRESENT, 3V3\_ALW GOING AWAY STEP ONE**

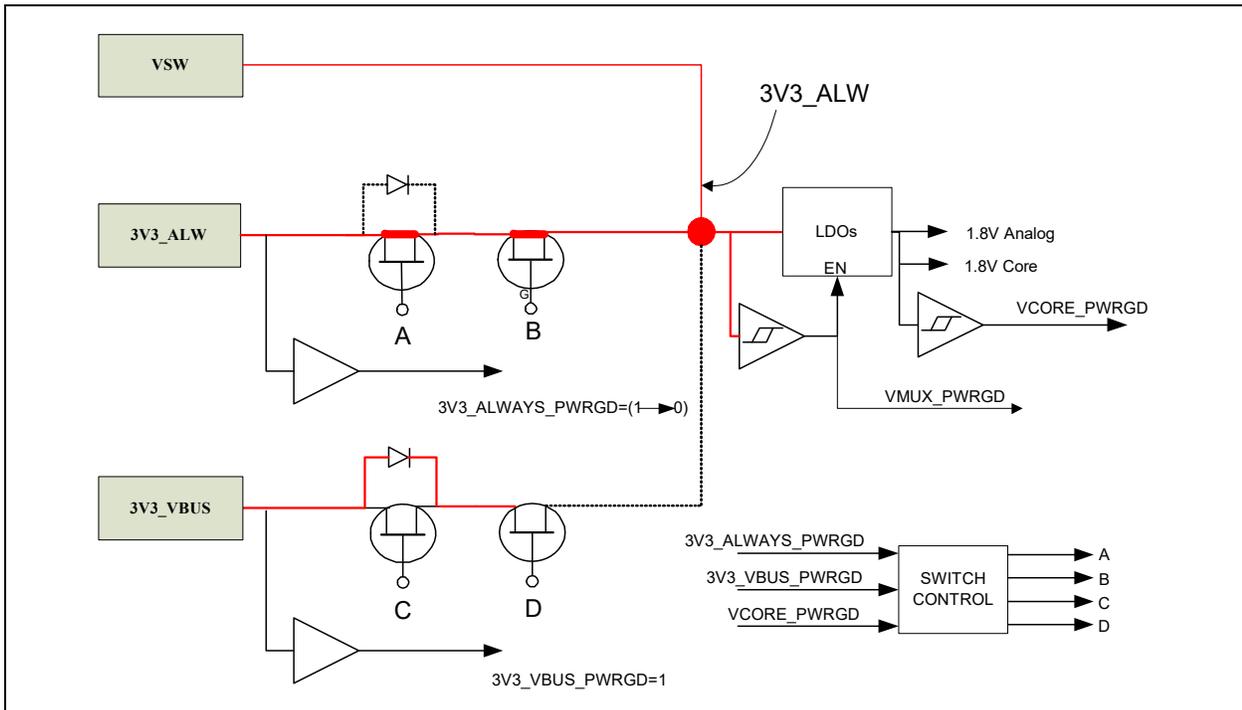


First FET A is opened. The voltage at the core regulator input goes to 3V3\_ALW-0.7

**FIGURE 12-14: POWER SWITCH: VBUS PRESENT, 3V3\_ALW GOING AWAY STEP TWO**

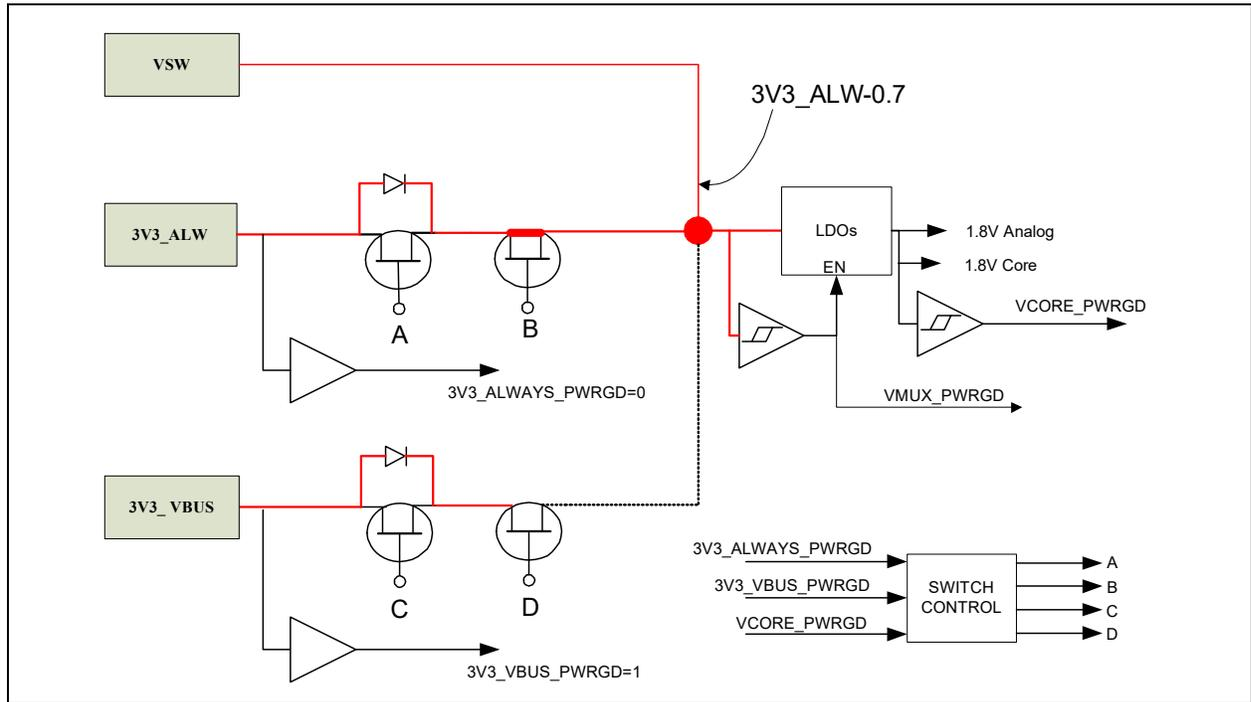

50uS later, the FET is closed. The voltage at the input of the core regulator will be the higher of 3V3\_ALW-0.7 or 3V3\_VBUS-0.7. Core regulator may fall out of regulation.


**FIGURE 12-15: POWER SWITCH: VBUS PRESENT, 3V3\_ALW GOING AWAY STEP THREE**

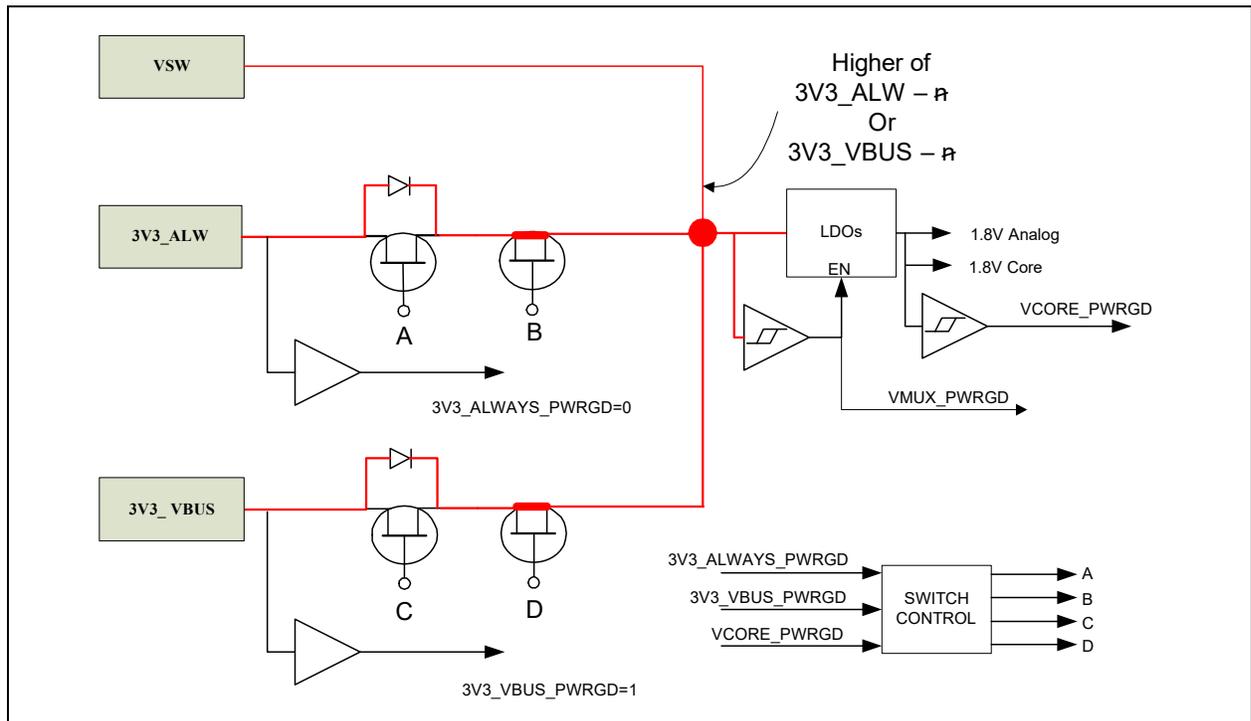

# UPD350


50uS later, FET B is opened. The voltage at the input of the core regulator is  $V_{BUS}-0.7V$ .

**FIGURE 12-16: POWER SWITCH: VBUS PRESENT, 3V3\_ALW GOING AWAY STEP FOUR**

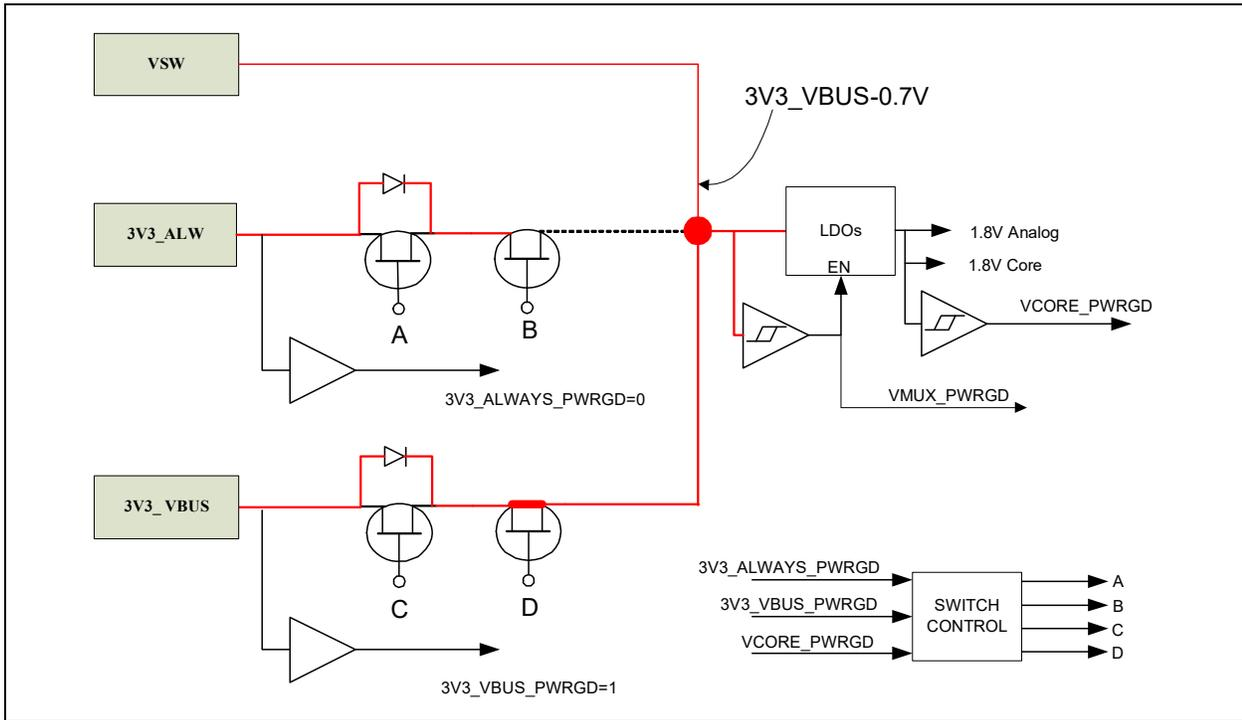

50uS later, FET C is shorted. The voltage at the input of the core regulator is  $3V3\_VBUS$ .

**FIGURE 12-17: POWER SWITCH: VBUS PRESENT, 3V3\_ALW GOING AWAY STEP FIVE**

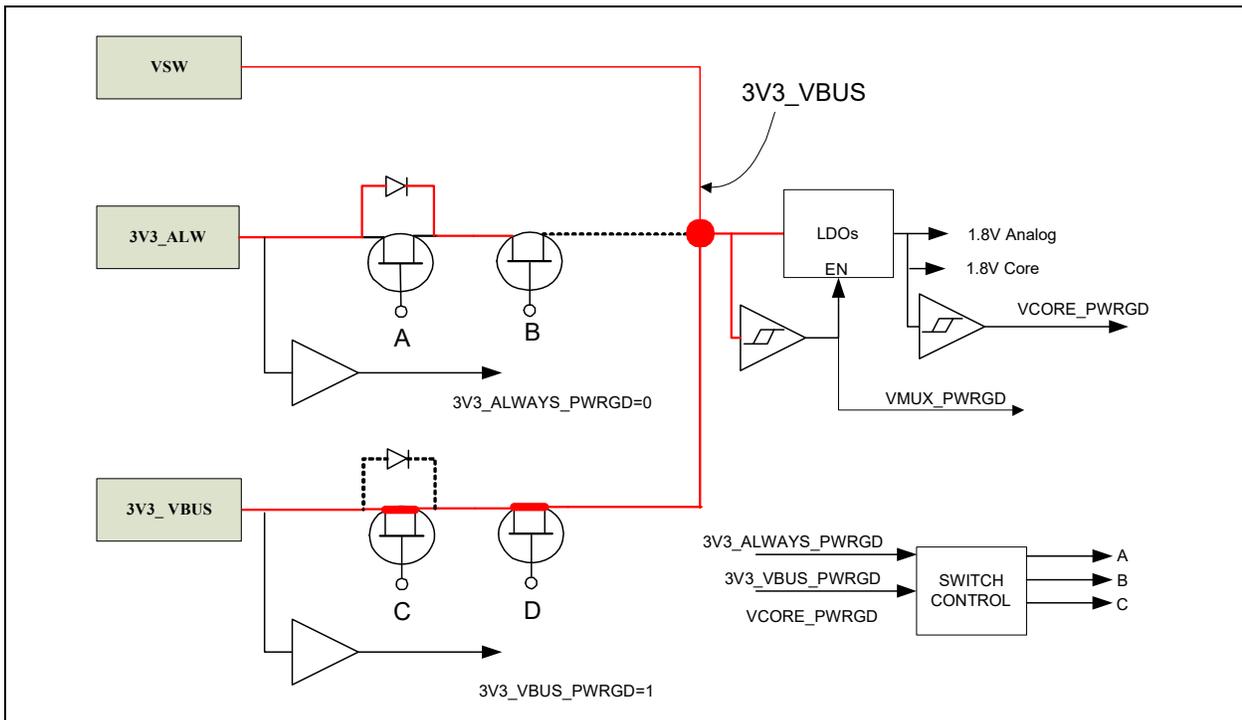

## 12.2 Software Override

In the event that both 3V3\_VBUS and 3V3\_ALW are available, the Power Switch automatically selects 3V3\_ALW for operation. This can be overridden by software the [VBUS Switch Enable Override \(VBUS\\_SW\\_EN\\_OVR\)](#) bit of the [Power Switch Control Register \(PWR\\_SW\\_CTL\)](#), which forces the switch to operate off of VBUS. When this bit is set, the auto-switch mechanism of the switch is disabled.

## 12.3 Power Switch Interrupts

The power switch interrupt alerts software to changes in the state of the Power Switch. These events are listed in the [Power Switch Interrupt Status Register \(PWR\\_INT\\_STS\)](#). The interrupt persists until the asserted bits in the [Power Switch Interrupt Status Register \(PWR\\_INT\\_STS\)](#) are cleared. Individual interrupt events can be enabled via the [Power Switch Interrupt Enable Register \(PWR\\_INT\\_EN\)](#). Power switch interrupt status sources are capable of triggering asynchronous wakes.

## 12.4 Power Switch Registers

This section details the power switch registers. For an overview of the entire device register map, refer to [Section 4.0, "Register Map,"](#) on page 18.

**TABLE 12-1: POWER SWITCH REGISTER MAP**

| Address       | Register Name (Symbol)  |
|---------------|---|
| 1C00h         | <a href="#">Power Switch Control Register (PWR_SW_CTL)</a>            |
| 1C01h         | <a href="#">Power Switch Status Register (PWR_SW_STS)</a>             |
| 1C02h         | <a href="#">Power Switch Interrupt Status Register (PWR_INT_STS)</a>  |
| 1C03h         | <a href="#">Power Switch Interrupt Enable Register (PWR_INT_EN)</a>   |
| 1C04h         | <a href="#">Power Switch State Status Register (PWR_SW_STATE_STS)</a> |
| 1C05h – 1FFFh | Reserved for future expansion   |

### 12.4.1 POWER SWITCH CONTROL REGISTER (PWR\_SW\_CTL)

Address: 1C00h      Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:2  | <b>RESERVED</b>  | RO   | -       |
| 1    | <b>Power Switch Enable (PM_SW_ENB)</b><br>This active low signal enables the power switch.   | R/W  | 0b      |
| 0    | <b>VBUS Switch Enable Override (VBUS_SW_EN_OVR)</b><br>When this bit is asserted, the power switch utilizes the 3V3_VBUS supply. This bit only has meaning if the device is currently operating on 3V3_ALW and the VBUS supply is present.<br><br>This bit disables the auto-switch mechanism of the power switch. | R/W  | 0b      |

# UPD350

## 12.4.2 POWER SWITCH STATUS REGISTER (PWR\_SW\_STS)

Address: 1C01h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:6  | <b>RESERVED</b>   | RO   | -       |
| 5    | <b>3V3_ALW POR (3V3_ALW_RDY)</b><br>POR output from the main VBAT external supply. Active high when the supply is above 2.85V. Active low when the supply drops below 2.7V. | RO   | 0b      |
| 4    | <b>3V3_VBUS POR (VBUS_RDY)</b><br>POR output from the VBUS external supply. Active high when the supply is above 4V. Active low when the supply drops below 2.7V.           | RO   | 0b      |
| 3    | <b>RESERVED</b>   | RO   | -       |
| 2    | <b>PWR_RDY</b><br>Indicates power ready on VSW and VDD18 supplies.  | RO   | 1b      |
| 1    | <b>3V3_ALW Switch Gate Off (3V3_ALW_SW_OKB)</b><br>Indicates state of VSW with respect to 3V3_ALW.<br><br>0: VSW < 3V3_ALW<br>1: VSW > 3V3_ALW                              | RO   | 0b      |
| 0    | <b>VBUS Switch Gate Off (VBUS_SW_OKB)</b><br>Indicates state of VSW with respect to VBUS.<br><br>0: VSW < VBUS<br>1: VSW > VBUS   | RO   | 0b      |



## 12.4.3 POWER SWITCH INTERRUPT STATUS REGISTER (PWR\_INT\_STS)

Address: 1C02h Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:6  | <b>RESERVED</b>  | RO   | -       |
| 5    | <p><b>3V3_ALW to VBUS Switch Interrupt (3V3_ALW2VBUS_INTR)</b><br/>           This interrupt asserts after the power switch automatically transitions from selecting 3V3_ALW to selecting VBUS as the power source.</p> <p>Write a '1' to clear this bit. Writes of '0' have no effect.</p> <p><b>Note:</b> Assertion of the <a href="#">VBUS Switch Enable Override (VBUS_SW_EN_OVR)</a> bit causes this interrupt to assert.</p>   | R/WC | 0b      |
| 4    | <p><b>VBUS to 3V3_ALW Switch Interrupt POR (VBUS23V3_ALW_INTR)</b><br/>           This interrupt asserts after the power switch automatically transitions from selecting VBUS to selecting 3V3_ALW as the power source.</p> <p>Write a '1' to clear this bit. Writes of '0' have no effect.</p> <p><b>Note:</b> Assertion of the <a href="#">VBUS Switch Enable Override (VBUS_SW_EN_OVR)</a> bit prevents assertion of this interrupt when VBUS is lost and 3V3_ALW is present.</p> | R/WC | 0b      |
| 3    | <p><b>3V3_ALW Lost Interrupt (3V3_ALW_LOST_INTR)</b><br/>           This interrupt asserts when <a href="#">3V3_ALW POR (3V3_ALW_RDY)</a> transitions from 1 to 0. It indicates that the 3V3_ALW supply has been lost.</p> <p>Write a '1' to clear this bit. Writes of '0' have no effect.</p>   | R/WC | 0b      |
| 2    | <p><b>3V3_ALW Ready Interrupt (3V3_ALW_RDY_INTR)</b><br/>           This interrupt asserts when <a href="#">3V3_ALW POR (3V3_ALW_RDY)</a> transitions from 0 to 1. It indicates that a 3V3_ALW supply has been detected.</p> <p>Write a '1' to clear this bit. Writes of '0' have no effect.</p>   | R/WC | 0b      |
| 1    | <p><b>VBUS Lost Interrupt (VBUS_LOST_INTR)</b><br/>           This interrupt asserts when <a href="#">3V3_VBUS POR (VBUS_RDY)</a> transitions from 1 to 0. It indicates that the VBUS supply has been lost.</p> <p>Write a '1' to clear this bit. Writes of '0' have no effect.</p>  | R/WC | 0b      |
| 0    | <p><b>VBUS Ready Interrupt (VBUS_RDY_INTR)</b><br/>           This interrupt asserts when <a href="#">3V3_VBUS POR (VBUS_RDY)</a> transitions from 0 to 1. It indicates that a VBUS supply has been detected.</p> <p>Write a '1' to clear this bit. Writes of '0' have no effect.</p>  | R/WC | 0b      |

# UPD350

## 12.4.4 POWER SWITCH INTERRUPT ENABLE REGISTER (PWR\_INT\_EN)

Address: 1C03h Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:6  | <b>RESERVED</b>  | RO   | -       |
| 5    | <b>3V3_ALW2VBUS_EN</b><br>When '0', prevents the generation of this interrupt. | R/W  | 0b      |
| 4    | <b>VBUS23V3_ALW_EN</b><br>When '0', prevents the generation of this interrupt. | R/W  | 0b      |
| 3    | <b>3V3_ALW_LOST_EN</b><br>When '0', prevents the generation of this interrupt. | R/W  | 0b      |
| 2    | <b>3V3_ALW_RDY_EN</b><br>When '0', prevents the generation of this interrupt.  | R/W  | 0b      |
| 1    | <b>VBUS_LOST_EN</b><br>When '0', prevents the generation of this interrupt.    | R/W  | 0b      |
| 0    | <b>VBUS_RDY_EN</b><br>When '0', prevents the generation of this interrupt.     | R/W  | 0b      |

## 12.4.5 POWER SWITCH STATE STATUS REGISTER (PWR\_SW\_STATE\_STS)

This register indicates the current state of the 3V3\_ALW and 3V3\_VBUS switches.

Address: 1C04h Size: 8 bits

| Bits | Description  | Type | Default |
|------|--|------|---------|
| 7:2  | <b>RESERVED</b>  | RO   | -       |
| 1    | <b>VBUS Switch State (3V3_VBUS_STATE)</b><br>0 = 3V3_VBUS switch is disabled.<br>1 = 3V3_VBUS switch is enabled. | RO   | 0b      |
| 0    | <b>3V3_ALW Switch State (3V3_ALW_STATE)</b><br>0 = 3V3_ALW switch is disabled.<br>1 = 3V3_ALW switch is enabled. | RO   | 0b      |

## 13.0 HDMI/DISPLAYPORT HOT PLUG DETECT (HPD)

### 13.1 Overview

The device provides hardware offload support for detecting the state of a Display Port compliant **HPD** input/output pin to the device. This pin may also be used to implement HDMI alternate mode.

The USB Type-C® DisplayPort Alternate Mode Specification defines the **HPD** state in terms of two status flags:

- **HPD\_STATE**: Indicates whether the HPD's logical state is high or low (denoted as HPD\_HIGH or HPD\_LOW, respectively). For the purposes of communicating the HPD state over USB, the logical state of HPD is considered as remaining high while receiving an IRQ\_HPDP, and is low during the time that HPD is being de-bounced on a new mechanical connection. The logical state of HPD transitions from high to low when a low level on the HPD link has been detected for 2ms (i.e., longer than the maximum IRQ\_HPDP pulse detection time). The logical state of HPD is unchanged during glitches (as specified in DP v1.3) on the HPD link.
- **IRQ\_HPDP**: Indicates an IRQ\_HPDP (i.e., a high-to-low transition on HPD followed by a low-to-high transition) was detected between 250us and 2ms later, as specified in DP v1.3).

**Note:** The **HPD** pin is configured as an input in DisplayPort Source applications, and configured as a push/pull driver in DisplayPort Sink applications.

**Note:** HDMI alternate mode requires a 5V level shifter to generate the HPD output. Since the **HPD** pin is 5V tolerant, it can safely be connected directly to HPD when operating as a receiver.

### 13.2 HPD Receiver

The device provides HPD detection (input) via the **HPD** pin. HPD detection is enabled by setting **HPD Enable** bit and configuring the **HPD** pin to be an input via **HPD Configuration** in **HPD Control Register (HPD\_CTL)**. Upon setting this bit, the device continuously monitors the state of the **HPD** pin as follows:

- When an IRQ\_HPDP event occurs, the **IRQ\_HPDP** interrupt bit in **HPD Interrupt Status Register (HPD\_INT\_STS)** will assert. IRQ\_HPDP is detected when **HPD** is initially high and de-asserts for a time greater than or equal to the value in the **IRQ\_HPDP Minimum Time Register (IRQ\_HPDP\_MIN\_TIME)** and less than or equal to the value in the **IRQ\_HPDP Maximum Time Register (IRQ\_HPDP\_MAX\_TIME)**.
- When a Low to High transition is debounced and detected, the **HPD\_HIGH** interrupt bit in **HPD Interrupt Status Register (HPD\_INT\_STS)** will assert. HPD\_HIGH is detected when the **HPD** pin is initially low and asserts for a time greater than or equal to the value in the **HPD High Detect Time Register (HPD\_HIGH\_DET\_TIME)**.
- When a High to Low transition is debounced and detected, the **HPD\_LOW** interrupt bit in **HPD Interrupt Status Register (HPD\_INT\_STS)** will assert. HPD\_LOW is detected when **HPD** pin is initially high and asserts for a time greater than or equal to the value in the **HPD Low Detect Time Register (HPD\_LOW\_DET\_TIME)**.

**APPLICATION NOTE:** The **HPD Interrupt Status Register (HPD\_INT\_STS)** contents are reset to 00h when **HPD Enable** is cleared.

**APPLICATION NOTE:** Enabled and asserted interrupts trigger the **HPD\_INT** interrupt in the **Interrupt Status Register (INT\_STS)**.

A mechanism has been added via the **HPD Event Queue Register (HPD\_QUEUE)** to record up to four **HPD** events. This function is enabled when **HPD Enable** is set and **HPD Configuration** indicates the **HPD** pin is operating as an input. See [Section 13.4.4, "HPD Event Queue Register \(HPD\\_QUEUE\)," on page 191](#) for additional details.

**APPLICATION NOTE:** The state of the **HPD** pin is available by reading **HPD State** in **HPD Control Register (HPD\_CTL)**.

This feature is used as follows:

1. Software configures **IRQ\_HPDP Minimum Time Register (IRQ\_HPDP\_MIN\_TIME)**, **IRQ\_HPDP Maximum Time Register (IRQ\_HPDP\_MAX\_TIME)**, **HPD High Detect Time Register (HPD\_HIGH\_DET\_TIME)** and **HPD Low Detect Time Register (HPD\_LOW\_DET\_TIME)**. To comply with the DisplayPort specification for IRQ\_HPDP, the **IRQ\_HPDP Minimum Time Register (IRQ\_HPDP\_MIN\_TIME)** and **IRQ\_HPDP Maximum Time Register (IRQ\_HPDP\_**

# UPD350

[MAX\\_TIME](#)) should be configured to 250 us and 2 ms, respectively. Likewise, [HPD Low Detect Time Register \(HPD\\_LOW\\_DET\\_TIME\)](#) should be configured to greater than 2 ms.

2. If desired, interrupts may be enabled by asserting the respective bits in the [HPD Interrupt Enable Register \(HPD\\_INT\\_EN\)](#).
3. [HPD Enable](#) is set and [HPD Configuration](#) is cleared in the [HPD Control Register \(HPD\\_CTL\)](#).
4. When an Hot Plug event occurs, the [HPD Event Queue Register \(HPD\\_QUEUE\)](#) is updated and an interrupt will assert if configured.
5. HPD state changes are reflected by assertion of [QUEUE\\_NOT\\_EMPTY](#), [HPD\\_HIGH](#), [HPD\\_LOW](#) and [IRQ\\_HPDP](#) bits in [HPD Interrupt Status Register \(HPD\\_INT\\_STS\)](#). They may cause assertion of [HPD\\_INT](#) in the [Interrupt Status Register \(INT\\_STS\)](#), if enabled.
6. Software reads the [HPD Event Queue Register \(HPD\\_QUEUE\)](#) to determine the Hot Plug events received.
7. Software writes to the [HPD Event Queue Register \(HPD\\_QUEUE\)](#) and clears the valid entries.

## 13.3 HPD Transmission

The device provides HPD transmission (output) via the [HPD](#) pin. This is done via the [HPD Control Register \(HPD\\_CTL\)](#) by setting both [HPD Configuration](#) and [HPD Enable](#) to “1”. The value driven on the HPD pin is controlled by [HPD Output Value](#).

Support is also provided for generating an [IRQ\\_HPDP](#). This is accomplished by programming the deassertion time in [HPD IRQ Generation Time Register \(HPD\\_IRQ\\_GEN\)](#) and then setting [Generate IRQ](#) in [HPD Control Register \(HPD\\_CTL\)](#). [Generate IRQ](#) self clears after the interrupt pulse is issued.

This feature is used as follows:

1. Configure the [HPD](#) pin as an output by setting [HPD Configuration](#) and [HPD Enable](#) in [HPD Control Register \(HPD\\_CTL\)](#). The value for [HPD](#) is defined by the value programmed in [HPD Output Value](#).
2. If it is desired to generate an [IRQ\\_HPDP](#), the [HPD IRQ Generation Time Register \(HPD\\_IRQ\\_GEN\)](#) must be programmed with the desired HPD deassertion time.
3. If it is desired to receive an interrupt upon generation of [IRQ\\_HPDP](#), the respective bit in the [HPD Interrupt Enable Register \(HPD\\_INT\\_EN\)](#) should be enabled.
4. Software requests [IRQ\\_HPDP](#) generation by setting [Generate IRQ](#) in the [HPD Control Register \(HPD\\_CTL\)](#). [HPD Output Value](#) must also be set to 1b. or the request will have no meeting.
5. Upon generating the [IRQ\\_HPDP](#) interrupt, the [Generate IRQ](#) bit will self clear.
6. The [IRQ\\_HPDP](#) bit asserts in the [HPD Interrupt Status Register \(HPD\\_INT\\_STS\)](#) and shall cause assertion of the [HPD\\_INT](#) interrupt in the [Interrupt Status Register \(INT\\_STS\)](#), if enabled.

## 13.4 DisplayPort HPD Registers

This section details the DisplayPort HPD registers. For an overview of the entire device register map, refer to [Section 4.0, "Register Map," on page 18](#).

**TABLE 13-1: DISPLAYPORT HPD REGISTER MAP**

| Address       | Register Name (Symbol)   |
|---------------|--|
| 0C00h         | <a href="#">HPD Control Register (HPD_CTL)</a>                     |
| 0C01h         | <a href="#">HPD Interrupt Status Register (HPD_INT_STS)</a>        |
| 0C02h         | <a href="#">HPD Interrupt Enable Register (HPD_INT_EN)</a>         |
| 0C03h         | <a href="#">HPD Event Queue Register (HPD_QUEUE)</a>               |
| 0C04h         | <a href="#">IRQ_HPDP Minimum Time Register (IRQ_HPDP_MIN_TIME)</a> |
| 0C05h         | <a href="#">IRQ_HPDP Maximum Time Register (IRQ_HPDP_MAX_TIME)</a> |
| 0C06h         | <a href="#">HPD High Detect Time Register (HPD_HIGH_DET_TIME)</a>  |
| 0C08h         | <a href="#">HPD Low Detect Time Register (HPD_LOW_DET_TIME)</a>    |
| 0C0Ah         | <a href="#">HPD IRQ Generation Time Register (HPD_IRQ_GEN)</a>     |
| 0C0Bh – 0FFFh | Reserved for future expansion                                      |

**Note:** RESERVED address space must not be written under any circumstances. Failure to heed this warning may result in untoward operation and unexpected results.

## 13.4.1 HPD CONTROL REGISTER (HPD\_CTL)

Address: 0C00h      Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7    | <p><b>HPD State</b><br/>Provides the state of the <b>HPD</b> pin.<br/>This bit resets to 0b when <a href="#">HPD Enable</a> is cleared.</p> <p><b>Note:</b> An <a href="#">IRQ_HP</a> event is recorded as an <a href="#">HPD_HIGH</a> state.</p> <p><b>Note:</b> This bit is valid when <a href="#">HP</a> is configured as an input or output.</p>  | RO   | -       |
| 6:4  | <b>RESERVED</b>   | RO   | -       |
| 3    | <p><b>HPD Output Value</b><br/>This bit only has meaning when the <b>HPD</b> pin is configured as an output per <a href="#">HPD Configuration</a>. Otherwise, it will always read 0b.</p>   | R/W  | 0b      |
| 2    | <p><b>Generate IRQ</b><br/>When set, the <b>HPD</b> pin generates an <a href="#">HPD IRQ</a> by deasserting <b>HPD</b> for the amount of time defined in the <a href="#">HPD IRQ Generation Time Register (HPD_IRQ_GEN)</a>.</p> <p>This bit only has meaning when the <b>HPD</b> pin is configured as an output per <a href="#">HPD Configuration</a>. Otherwise, it will always read 0b.</p> <p><b>Note:</b> <a href="#">HPD Output Value</a> must be set to 1b before using this feature.</p> <p><b>Note:</b> Software may not change the state of this bit while <a href="#">HPD Enable</a> is set to 1b.</p> | R/SC | 0b      |
| 1    | <p><b>HPD Configuration</b><br/>0: <b>HPD</b> is configured as an input<br/>1: <b>HPD</b> is configured as an output</p> <p><b>Note:</b> Software may not change the state of this bit while <a href="#">HPD Enable</a> is set to 1b.</p>   | R/W  | 0b      |
| 0    | <p><b>HPD Enable</b><br/>When set, the <b>HPD</b> pin is enabled.</p>   | R/W  | 0b      |

# UPD350

## 13.4.2 HPD INTERRUPT STATUS REGISTER (HPD\_INT\_STS)

Address: 0C01h Size: 8 bits

The contents of this register reset to 00h when the [HPD Enable](#) bit in the [HPD Control Register \(HPD\\_CTL\)](#) is cleared.

| BITS | DESCRIPTION  | TYPE | DEFAULT |
|------|--|------|---------|
| 7:4  | <b>RESERVED</b>  | RO   | -       |
| 3    | <b>QUEUE_NOT_EMPTY</b><br>Indicates that the <a href="#">HPD Event Queue Register (HPD_QUEUE)</a> is not empty.<br><b>Note:</b> This interrupt is cleared after <a href="#">HPD Event Queue Register (HPD_QUEUE)</a> is read.<br><b>Note:</b> This bit only has meaning when the <b>HPD</b> pin is configured as an input.   | RO   | 0b      |
| 2    | <b>HPD_HIGH</b><br>When set, indicates that an <b>HPD</b> Low to High transition has been detected.<br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.<br><b>Note:</b> This bit only has meaning when the <b>HPD</b> pin is configured as an input.   | R/WC | 0b      |
| 1    | <b>HPD_LOW</b><br>When set, indicates that an <b>HPD</b> High to Low transition has been detected.<br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.<br><b>Note:</b> This bit only has meaning when the <b>HPD</b> pin is configured as an input.  | R/WC | 0b      |
| 0    | <b>IRQ_HPDP</b><br>When set, indicates that an HPD IRQ has been detected.<br><b>Note:</b> The source of this input is a pulse and does not persist after being cleared.<br><b>Note:</b> When the <b>HPD</b> pin is configured as an input, this bit indicates that an IRQ_HPDP has been detected. When the <b>HPD</b> pin is configured as an output, this pin indicates that the request to generate an IRQ_HPDP has completed. | R/WC | 0b      |

## 13.4.3 HPD INTERRUPT ENABLE REGISTER (HPD\_INT\_EN)

Address: [0C02h](#) Size: 8 bits

| BITS | DESCRIPTION   | TYPE | DEFAULT |
|------|---|------|---------|
| 7:4  | <b>RESERVED</b>   | RO   | 0h      |
| 3:0  | <b>HPD Interrupt Enable</b><br>When "0", prevents generation of the respective interrupt. | R/W  | 0h      |

## 13.4.4 HPD EVENT QUEUE REGISTER (HPD\_QUEUE)

Address: [0C03h](#) Size: 8 bits

This register implements a circular queue that records HPD events detected by the device.

As an event is detected, it is written into the next HPD Event status field that is available and initially starts at HPD Event 0 out of reset.

After this register is read, any entries with a valid HPD event field are cleared when software writes 01b into the respective locations. The device will keep track of the last valid entry and store the next received event into the next entry. For example, if entries 0 and 1 are valid, the device will always place the next event into location 2, regardless of whether or not entries 0 and 1 have been cleared by software.

The device will only add entries to empty fields. After writing to HPD Event 3, the device will write the next event into HPD Event 0, if available.

Each field is encoded as follows.

- 00b: HPD event field is empty
- 01b: HPD\_HIGH Detected
- 10b: HPD\_LOW Detected
- 11b: HPD\_IRQ Detected

When [HPD Enable](#) is set to 0b and/or [HPD Configuration](#) is set to 1b, this register will always read 00h.

After four HPD events are recorded, any future HPD events shall be ignored until HPD event locations are freed up by software.

| BITS | DESCRIPTION        | TYPE | DEFAULT |
|------|--------------------|------|---------|
| 7:6  | <b>HPD Event 3</b> | R/WC | 00b     |
| 5:4  | <b>HPD Event 2</b> | R/WC | 00b     |
| 3:2  | <b>HPD Event 1</b> | R/WC | 00b     |
| 1:0  | <b>HPD Event 0</b> | R/WC | 00b     |

# UPD350

## 13.4.5 IRQ\_HPDP MINIMUM TIME REGISTER (IRQ\_HPDP\_MIN\_TIME)

Address: 0C04h Size: 8 bits

| BITS | DESCRIPTION  | TYPE | DEFAULT |
|------|--|------|---------|
| 7:0  | <p><b>IRQ HPD Minimum Time</b><br/>This field defines the minimum amount of time that <b>HPD</b> must be deasserted for an IRQ event to be recognized. De-assertions for less than this amount of time shall be ignored.</p> <p>The programmed time is <math>(50 \text{ us} * \text{IRQ\_HPDP\_MIN\_TIME}) + 100 \text{ us}</math>.</p> <p><b>Note:</b> Software may not change the state of this register while <b>HPD Enable</b> is set to 1b.</p> | R/W  | 0h      |

## 13.4.6 IRQ\_HPDP MAXIMUM TIME REGISTER (IRQ\_HPDP\_MAX\_TIME)

Address: 0C05h Size: 8 bits

| BITS | DESCRIPTION  | TYPE | DEFAULT |
|------|--|------|---------|
| 7:0  | <p><b>IRQ HPD Maximum Time</b><br/>This field defines the maximum amount of time that <b>HPD</b> shall be deasserted for an IRQ event to be recognized. Assertions for more than this amount of time shall not be determined to be an HPD interrupt event.</p> <p>The programmed time is <math>(50 \text{ us} * \text{IRQ\_HPDP\_MAX\_TIME}) + 100 \text{ us}</math>.</p> <p><b>Note:</b> Software may not change the state of this register while <b>HPD Enable</b> is set to 1b.</p> | R/W  | 0h      |

## 13.4.7 HPD HIGH DETECT TIME REGISTER (HPD\_HIGH\_DET\_TIME)

Address: 0C06h Size: 16 bits

| BITS | DESCRIPTION   | TYPE | DEFAULT |
|------|---|------|---------|
| 15:0 | <p><b>HPD High Detect Time</b><br/>This field defines the amount of time that <b>HPD</b> must be asserted, after initially being low, in order to detect an HPD_HIGH event.</p> <p>The programmed time is <math>(50 \text{ us} * \text{HPD\_HIGH\_DET\_TIME}) + 100 \text{ us}</math>.</p> <p><b>Note:</b> Software may not change the state of this register while <b>HPD Enable</b> is set to 1b.</p> | R/W  | 0h      |



## 13.4.8 HPD LOW DETECT TIME REGISTER (HPD\_LOW\_DET\_TIME)

Address: [0C08h](#) Size: 16 bits

| BITS | DESCRIPTION   | TYPE | DEFAULT |
|------|---|------|---------|
| 15:0 | <p><b>HPD Low Detect Time</b><br/>This field defines the amount of time that <b>HPD</b> must be deasserted, after initially being high, in order to detect an <b>HPD_LOW</b> event.</p> <p>The programmed time is <math>(50 \text{ us} * \text{HPD\_LOW\_DET\_TIME}) + 100 \text{ us}</math>.</p> <p><b>Note:</b> Software may not change the state of this register while <a href="#">HPD Enable</a> is set to 1b.</p> | R/W  | 0h      |

## 13.4.9 HPD IRQ GENERATION TIME REGISTER (HPD\_IRQ\_GEN)

Address: [0C0Ah](#) Size: 8 bits

| BITS | DESCRIPTION   | TYPE | DEFAULT |
|------|---|------|---------|
| 7:0  | <p><b>HPD IRQ Generation Time</b></p> <p>This field defines the amount of time, in units of 50 us, that <b>HPD</b> shall be deasserted after the <a href="#">Generate IRQ</a> bit in the <a href="#">HPD Control Register (HPD_CTL)</a> is set.</p> <p>After this amount of time, the <b>HPD</b> pin will be returned to the state defined in <a href="#">HPD Output Value</a>.</p> <p><b>Note:</b> Software may not change the state of this register while <a href="#">HPD Enable</a> is set to 1b.</p> | R/W  | 0h      |

# UPD350

---

## 14.0 WATCHDOG TIMER (WDT)

### 14.1 General Description

The function of the Watchdog Timer (WDT) is to provide a mechanism to detect if the device has failed.

When enabled, the Watchdog Timer circuit will generate a WDT initiated system reset if the user program fails to reload the WDT within a specified length of time known as the [WDT Interval](#).

The Watchdog timer operates off of the 20 KHz Keep Alive Oscillator or 48 MHz Relaxation Oscillator depending on the resolution selected by [WDT\\_UNITS](#) bit in [Watchdog Control Register \(WDT\\_CTL\)](#).

A watchdog timer initiated system reset is indicated by assertion of the [WDT\\_INT](#) bit in the [Interrupt Enable Register \(INT\\_EN\)](#). In order to clear the [WDT\\_INT](#) bit, the [WDT\\_STS](#) bit in [Watchdog Control Register \(WDT\\_CTL\)](#) must be cleared.

### 14.2 WDT Operation

#### 14.2.1 WDT ACTIVATION MECHANISM

The WDT is activated by the following sequence of operations during normal operation:

1. Clear the [WDT\\_EN](#) bit of [Watchdog Control Register \(WDT\\_CTL\)](#).
2. Load the [Watchdog Load Register \(WDT\\_LOAD\)](#) with the count value.
3. Set the [WDT\\_EN](#) bit of [Watchdog Control Register \(WDT\\_CTL\)](#).

The [WDT Activation Mechanism](#) starts the WDT decrementing counter.

#### 14.2.2 WDT DEACTIVATION MECHANISM

The WDT is deactivated by clearing the [WDT\\_EN](#) bit in the [Watchdog Control Register \(WDT\\_CTL\)](#). The [WDT Reload Mechanism](#) places the WDT in a low power state in which clocks are gated and the counter stops decrementing.

#### 14.2.3 WDT RELOAD MECHANISM

If the WDT is not reloaded within periods that are shorter than the programmed watchdog interval, the WDT will underflow, a WDT reset will be generated, and the [WDT\\_STS](#) bit will be set in the [Watchdog Control Register \(WDT\\_CTL\)](#).

It is the responsibility of software to continually execute sections of code which reload the watchdog timer (WDT), causing the counter to be reloaded via the [WDT Activation Mechanism](#) or writing to the [Watchdog Kick Register \(WDT\\_KICK\)](#).

#### 14.2.4 WDT INTERVAL

The [WDT Interval](#) is the time it takes for the WDT to decrements from the [Watchdog Load Register \(WDT\\_LOAD\)](#) value to 0h.

### 14.3 I2C/SPI Writes

When a watchdog interrupt is pending, all write operations are blocked until the interrupt [WDT\\_STS](#) bit in the [Watchdog Control Register \(WDT\\_CTL\)](#) is cleared.

## 14.4 Watchdog Timer Registers

This section details the watchdog timer registers. For an overview of the entire device register map, refer to [Section 4.0, "Register Map,"](#) on page 18.

**TABLE 14-1: WATCHDOG TIMER REGISTER MAP**

| Address       | Register Name (Symbol)                              |
|---------------|---|
| 3000h         | <a href="#">Watchdog Control Register (WDT_CTL)</a> |
| 3002h         | <a href="#">Watchdog Kick Register (WDT_KICK)</a>   |
| 3004h         | <a href="#">Watchdog Count Register (WDT_COUNT)</a> |
| 3008h         | <a href="#">Watchdog Load Register (WDT_LOAD)</a>   |
| 300Ch – 33FFh | Reserved for future expansion                       |

**Note:** RESERVED address space must not be written under any circumstances. Failure to heed this warning may result in untoward operation and unexpected results.

### 14.4.1 WATCHDOG CONTROL REGISTER (WDT\_CTL)

Address: [3000h](#) Size: 16 bits

| Bits | Description   | Type | Default                   |
|------|---|------|---------------------------|
| 15:4 | <b>RESERVED</b>   | RO   | 0h                        |
| 3    | <b>WDT_UNITS</b><br>0: Units of 1 ms are used.<br>1: Units of 1 us are used.<br><b>Note:</b> When units of 1 us are used, the 48 MHz Relaxation Oscillator must be enabled and device current consumption will increase by over 400 uA. Otherwise, when units are 1 ms, the 20 KHz Keep Alive Oscillator is used. | R/W  | 0b                        |
| 2    | <b>WDT_SIM</b><br>Used for speeding up the watchdog timer for simulation. Watchdog operates off of a 1 MHz clock when set.<br>When this bit is set, <a href="#">WDT_UNITS</a> shall be set to 1b.   | R/W  | 0b                        |
| 1    | <b>WDT_STS</b><br>WDT Status is set by hardware if the last reset of the device was caused by an underflow of the WDT. This bit must be cleared by software writing a '1' to this bit. Writing a '0' to this bit has no effect.   | R/WC | <a href="#">Note 14-1</a> |
| 0    | <b>WDT_EN</b><br>When set, the watchdog timer is enabled. Clearing this bit disables the watchdog timer.<br><b>Note:</b> Due to clock domain synchronization, several clock cycles may elapse before this takes affect and the WDT counter begins to decrement.   | R/W  | 0b                        |

**Note 14-1** Default value depends on whether a WDT initiated reset occurred, in which the case the value is 1b. Otherwise the value is 0b.

# UPD350

## 14.4.2 WATCHDOG KICK REGISTER (WDT\_KICK)

Address: 3002h Size: 8 bits

| Bits | Description   | Type | Default |
|------|---|------|---------|
| 7:1  | <b>RESERVED</b>   | RO   | 0h      |
| 0    | <b>KICK</b><br><br>Writes of any value to this register shall cause the watchdog timer to be immediately reloaded with the value defined in <a href="#">Watchdog Load Register (WDT_LOAD)</a> and start decrementing when the <a href="#">WDT_EN</a> bit in the <a href="#">Watchdog Control Register (WDT_CTL)</a> is set to 1b. Writes to this register when <a href="#">WDT_EN</a> is 0b have no affect.<br><br><b>Note:</b> Reads of this register always return 0h.<br><b>Note:</b> Due to clock domain synchronization, several clock cycles may elapse before this takes affect and the counter reloads. | R/W  | 0h      |

## 14.4.3 WATCHDOG COUNT REGISTER (WDT\_COUNT)

Address: 3004h Size: 32 bits

| Bits | Description   | Type | Default    |
|------|---|------|------------|
| 31:0 | <b>WDT_COUNT</b><br><br>This read only register provides a snapshot of the current state of the timer.<br><br>The lower byte shall always be read first. Reading of the lower order byte results in a snapshot of the counter taken. This ensures that when the upper bytes are read the state of the counter is remains in sync. | RO   | FFFF_FFFFh |

WDT\_COUNT[7:0] = 0x4h

WDT\_COUNT[15:8] = 0x5h

WDT\_COUNT[23:16] = 0x6h

WDT\_COUNT[31:24] = 0x7h

## 14.4.4 WATCHDOG LOAD REGISTER (WDT\_LOAD)

Address: [3008h](#) Size: 32 bits

| Bits | Description  | Type | Default    |
|------|--|------|------------|
| 31:0 | <b>WDT_LOAD</b><br>Writing this register reloads the Watch Dog Timer counter. This register can be programmed only when <a href="#">WDT_EN</a> = 0.<br>Zero is not a valid load value. | R/W  | FFFF_FFFFh |

WDT\_LOAD[7:0] = 0x8h

WDT\_LOAD[15:8] = 0x9h

WDT\_LOAD[23:16] = 0xAh

WDT\_LOAD[31:24] = 0xBh

# UPD350

## 15.0 OPERATIONAL CHARACTERISTICS

### 15.1 Absolute Maximum Ratings\*

|   |                                |
|---|--------------------------------|
| Supply Voltage (VS) (Note 15-1)   | -0.3 V to +6.0 V               |
| Supply Voltage (VDD33IO, 3V3_VBUS, 3V3_ALW, VDD_12C, VDD18) (Note 15-1) | 0 V to +4.0 V                  |
| Positive voltage on input signal pins, with respect to ground           | +6.0 V                         |
| Negative voltage on input signal pins, with respect to ground           | -0.5 V                         |
| Storage Temperature   | -55°C to +150°C                |
| Lead Temperature Range  | Refer to JEDEC Spec. J-STD-020 |
| HBM ESD Performance   | +/-8 kV                        |

**Note 15-1** When powering this device from laboratory or system power supplies, it is important that the absolute maximum ratings not be exceeded or device failure can result. Some power supplies exhibit voltage spikes on their outputs when AC power is switched on or off. In addition, voltage transients on the AC power line may appear on the DC output. If this possibility exists, it is suggested to use a clamp circuit.

\*Stresses exceeding those listed in this section could cause permanent damage to the device. This is a stress rating only. Exposure to absolute maximum rating conditions for extended periods may affect device reliability. Functional operation of the device at any condition exceeding those indicated in [Section 15.2, "Operating Conditions\\*\\*"](#), [Section 15.5, "DC Characteristics"](#), or any other applicable section of this specification is not implied.


### 15.2 Operating Conditions\*\*

|  |                           |
|--|---------------------------|
| Supply Voltage (VS)  | +4.75 V to +5.25 V        |
| Supply Voltage (VDD33IO, 3V3_VBUS, 3V3_ALW)  | +3.1 V to +3.47 V         |
| Supply Voltage (VDD_12C)   | <a href="#">Note 15-2</a> |
| Supply Voltage (VDD18)   | +1.62 V to +1.98 V        |
| Positive voltage on input signal pins, with respect to ground                                  | +3.3 V                    |
| Negative voltage on input signal pins, with respect to ground                                  | -0.3 V                    |
| Power Supply Rise Time Max (T <sub>RT</sub> ) ( <a href="#">Figure 15-1</a> )                  | 100ms                     |
| Commercial Ambient Operating Temperature in Still Air (T <sub>A</sub> )                        | 0°C to +70°C              |
| Industrial and Grade 3 Automotive Ambient Operating Temperature in Still Air (T <sub>A</sub> ) | -40°C to +85°C            |

**Note 15-2** To operate the I<sup>2</sup>C interface at 1.8 V, connect to 1.8 V (+/-10%), to operate the I<sup>2</sup>C interface at 3.3 V, connect to 3.3 V (+/-10%)

\*\*Proper operation of the device is guaranteed only within the ranges specified in this section.

**FIGURE 15-1: SUPPLY RISE TIME MODEL**

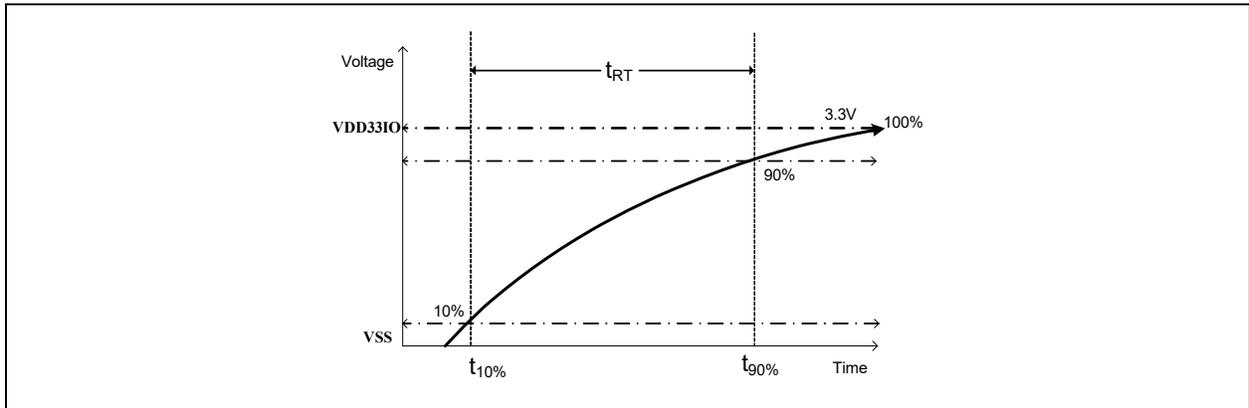

## 15.3 Package Thermal Specifications

**TABLE 15-1: PACKAGE THERMAL PARAMETERS**

| Parameter                                     | Symbol        | °C/W |
|---|---------------|------|
| Thermal Resistance Junction to Ambient        | $\Theta_{JA}$ | 49   |
| Thermal Resistance Junction to Top of Case    | $\Theta_{JC}$ | 6    |
| Thermal Resistance Junction to Board          | $\Theta_{JB}$ | 29   |
| Thermal Resistance Junction to Bottom of Case | $\Psi_{JT}$   | 0.7  |

**Note:** Thermal parameters are measured or estimated for devices in a multi-layer 2S2P PCB per JESDN51.

**TABLE 15-2: POWER DISSIPATION**

| Parameter         | Symbol    | Max | Units |
|-------------------|-----------|-----|-------|
| Power Dissipation | $P_{dis}$ | 55  | mW    |

**Note:** This is the worst-case power dissipation as a consequence of maximum loading (before current-limiting protections take effect) upon the internal VBUS power switch, VCONN power switch, 3.3V power-ORing switch, analog blocks, and core digital logic.

# UPD350

## 15.4 Current Consumption

TABLE 15-3: DEVICE CURRENT CONSUMPTION

| Power State                          | Supply Current |      |       |
|--------------------------------------|----------------|------|-------|
|                                      | Typical        | Max  | Units |
| RESET                                | 110            | -    | μA    |
| SLEEP                                | 15             | -    | μA    |
| HIBERNATE                            | 80             | -    | μA    |
| STANDBY                              | 1.20           | -    | mA    |
| ATTACHED IDLE (FRS Enabled)          | 1.40           | -    | mA    |
| ATTACHED IDLE (FRS Disabled)         | 1.25           | -    | mA    |
| ACTIVE (with PD packet transmitting) | -              | 15.0 | mA    |

**Note 1:** This table details the power consumption of the UPD350 device as measured during various modes of operation. Refer to [Section 7.2, "Power States"](#) for additional information. Power dissipation is determined by temperature, supply voltage, and external source/sink requirements. Maximum values represent very short bursts of activity over a small amount of time. Typical values represent averaged current consumption over time.

**2:** SLEEP power state is achieved with PWR\_DN pin asserted

**3:** STANDBY is equivalent to USB Type-C® specification's Unattached.SRC/Unattached.SNK

**4:** Currents measured with all 3.3V rails tied together.

## 15.5 DC Characteristics

TABLE 15-4: DC ELECTRICAL CHARACTERISTICS

| Parameter   | Symbol           | Min           | Typ  | Max | Units | Notes                   |
|---|------------------|---------------|------|-----|-------|-------------------------|
| <b>IS Type Input Buffer</b>                                       |                  |               |      |     |       |                         |
| Low Input Level   | V <sub>ILI</sub> | -0.3          |      | 0.8 | V     |                         |
| High Input Level  | V <sub>IHI</sub> | 2.0           |      | 3.6 | V     |                         |
| Negative-Going Threshold  | V <sub>ILT</sub> | 1.21          | 1.33 | 1.8 | V     | Schmitt trigger         |
| Positive-Going Threshold  | V <sub>IHT</sub> | 1.31          | 1.58 | 1.8 | V     | Schmitt trigger         |
| Schmitt Trigger Hysteresis (V <sub>IHT</sub> - V <sub>ILT</sub> ) | V <sub>HYS</sub> | 100           | 133  | 200 | mV    |                         |
| Input Leakage (V <sub>IN</sub> = VSS or VDDIO)                    | I <sub>IH</sub>  | -10           |      | 10  | μA    | Note 15-3               |
| Input Capacitance   | C <sub>IN</sub>  |               |      | 3   | pF    |                         |
| <b>O8 Type Output Buffer</b>                                      |                  |               |      |     |       |                         |
| Low Output Level  | V <sub>OL</sub>  |               |      | 0.4 | V     | I <sub>OL</sub> = -8 mA |
| High Output Level   | V <sub>OH</sub>  | VDD33IO - 0.4 |      |     | V     | I <sub>OH</sub> = 8 mA  |



**TABLE 15-4: DC ELECTRICAL CHARACTERISTICS (CONTINUED)**

| Parameter                     | Symbol   | Min | Typ | Max | Units | Notes                     |
|-------------------------------|----------|-----|-----|-----|-------|---------------------------|
| <b>OD8 Type Output Buffer</b> |          |     |     |     |       |                           |
| Low Output Level              | $V_{OL}$ |     |     | 0.4 | V     | $I_{OL} = -8 \text{ mA}$  |
| <b>I2C Type Buffer</b>        |          |     |     |     |       | <a href="#">Note 15-4</a> |

**Note 15-3** This specification applies to all inputs and tri-stated bi-directional pins. Internal pull-down and pull-up resistors add +/- 50  $\mu\text{A}$  per-pin (typical).

**Note 15-4** The I2C type buffer conforms to the NXP *I<sup>2</sup>C-Bus Specification* (UM10204, Rev. 6). Refer to the *I<sup>2</sup>C-Bus Specification* for additional information.

**TABLE 15-5: VCONN SOURCE DC PARAMETERS**

| Parameter     | Symbol           | Min | Typ | Max | Units            | Notes    |
|---------------|------------------|-----|-----|-----|------------------|----------|
| ILIM          | $I_{LIM\_VCONN}$ |     | 600 |     | mA               | $V_S=5V$ |
| On Resistance | $R_{ON\_VCONN}$  |     | 270 |     | $\text{m}\Omega$ |          |

**TABLE 15-6: POWER SWITCH DC PARAMETERS**

| Parameter      | Symbol         | Min | Typ | Max | Units    | Notes                       |
|----------------|----------------|-----|-----|-----|----------|-----------------------------|
| VSW Load       | $V_{SW\_Load}$ |     |     | 100 | mA       | $3V3\_ALW/3V3\_VBUS = 3.3V$ |
| VSW Resistance | $R_{VSW}$      |     | 500 |     | $\Omega$ |                             |


## 15.6 AC Characteristics and Timing

This section details the various AC timing specifications of the device.

### 15.6.1 RESET\_N TIMING

Figure 15-2 illustrates the **RESET\_N** timing requirements. Assertion of **RESET\_N** is not a requirement. However, if used, it must be asserted for the minimum period specified

**FIGURE 15-2: RESET\_N TIMING**

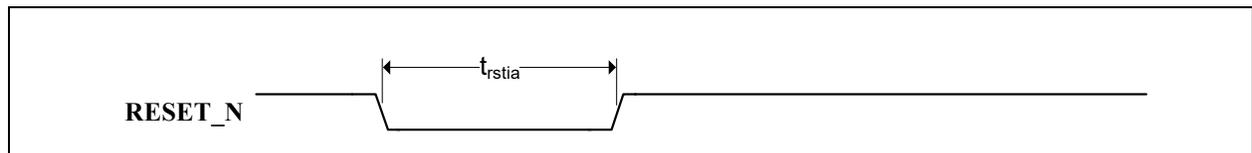

**TABLE 15-7: RESET\_N TIMING VALUES**


| Symbol      | Description                         | Min | Typ | Max | Units         |
|-------------|-------------------------------------|-----|-----|-----|---------------|
| $t_{rstia}$ | <b>RESET_N</b> input assertion time | 1   |     |     | $\mu\text{s}$ |

# UPD350

## 15.6.2 I<sup>2</sup>C SLAVE INTERFACE (UPD350-A/UPD350-C ONLY)

Figure 15-3 illustrates the I<sup>2</sup>C slave interface timing requirements. The I<sup>2</sup>C slave interface can operate in Standard Mode, Fast Mode, or Fast Mode Plus. Refer to Section 5.0, "I<sup>2</sup>C Slave Controller (UPD350-A/UPD350-C Only)," on page 19 for additional information.

**FIGURE 15-3: I<sup>2</sup>C SLAVE TIMING**

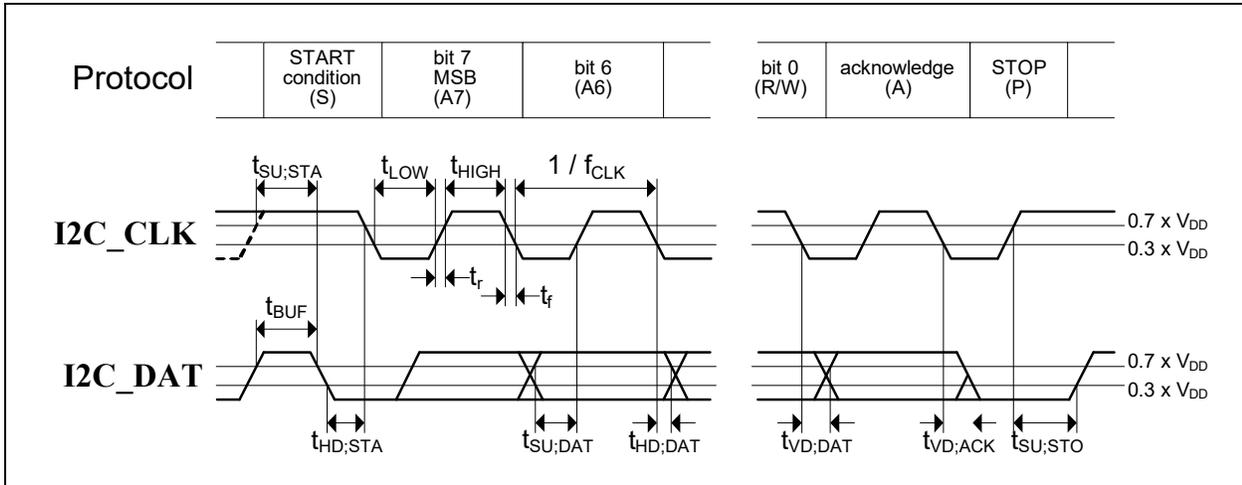

**TABLE 15-8: I<sup>2</sup>C SLAVE TIMING VALUES**

| Symbol       | Description   | Min  | Max  | Units   |
|--------------|---|------|------|---------|
| $f_{CLK}$    | I <sup>2</sup> C_CLK clock frequency  | 0    | 1000 | kHz     |
| $t_{BUF}$    | Bus free time between a STOP and START condition                                  | 0.5  |      | $\mu$ s |
| $t_{HD:STA}$ | Hold time (repeated) START condition  | 0.26 |      | $\mu$ s |
| $t_{SU:STA}$ | Setup time for repeated START condition   | 0.26 |      | $\mu$ s |
| $t_{SU:STO}$ | Setup time for STOP condition   | 0.26 |      | $\mu$ s |
| $t_{HD:DAT}$ | Data hold time  | 0    |      | ns      |
| $t_{VD:ACK}$ | Data valid acknowledge time (Note 15-5)   | 0.05 | 0.45 | $\mu$ s |
| $t_{VD:DAT}$ | Data valid time (Note 15-6)   | 50   | 450  | ns      |
| $t_{SU:DAT}$ | Data setup time   | 50   |      | ns      |
| $t_{LOW}$    | LOW period of the I <sup>2</sup> C_CLK clock                                      | 0.5  |      | $\mu$ s |
| $t_{HIGH}$   | HIGH period of the I <sup>2</sup> C_CLK clock                                     | 0.26 |      | $\mu$ s |
| $t_f$        | Fall time of I <sup>2</sup> C_CLK and I <sup>2</sup> C_DAT (Note 15-7)(Note 15-8) |      | 120  | ns      |
| $t_r$        | Rise time of I <sup>2</sup> C_CLK and I <sup>2</sup> C_DAT (Note 15-7)(Note 15-8) |      | 120  | ns      |
| $t_{SP}$     | Pulse width of spikes that must be suppressed by the input filter (Note 15-9)     |      | 50   | ns      |

**Note 15-5**  $t_{VD:ACK}$  = time for Acknowledgment signal from I<sup>2</sup>C\_CLK LOW to I<sup>2</sup>C\_DAT (out) LOW.

**Note 15-6**  $t_{VD:DAT}$  = minimum time for I<sup>2</sup>C\_DAT data out to be valid following I<sup>2</sup>C\_CLK LOW.

**Note 15-7** A master device must internally provide a hold time of at least 300 ns for the I<sup>2</sup>C\_DAT signal (refer to the  $V_{IL}$  of the I<sup>2</sup>C\_CLK signal) in order to bridge the undefined region I<sup>2</sup>C\_CLK's falling edge.


**Note 15-8** The maximum  $t_f$  for the I<sup>2</sup>C\_DAT and I<sup>2</sup>C\_CLK bus lines is specified at 300 ns. The maximum fall time for the I<sup>2</sup>C\_DAT output stage  $t_f$  is specified at 250 ns. This allows series protection resistors to be connected between the I<sup>2</sup>C\_DAT and I<sup>2</sup>C\_CLK pins and the respective bus lines without exceeding the maximum specified  $t_f$ .

**Note 15-9** Input filters on the I2C\_DAT and I2C\_CLK inputs suppress noise spikes less than 50 ns.


## 15.6.3 SPI SLAVE INTERFACE (UPD350-B/UPD350-D ONLY)

Figure 15-4 and Figure 15-5 illustrate the SPI slave interface input and output timing requirements, respectively. Refer to Section 6.0, "SPI Slave Controller (UPD350-B/UPD350-D Only)," on page 25 for additional information.

**FIGURE 15-4: SPI SLAVE INPUT TIMING**

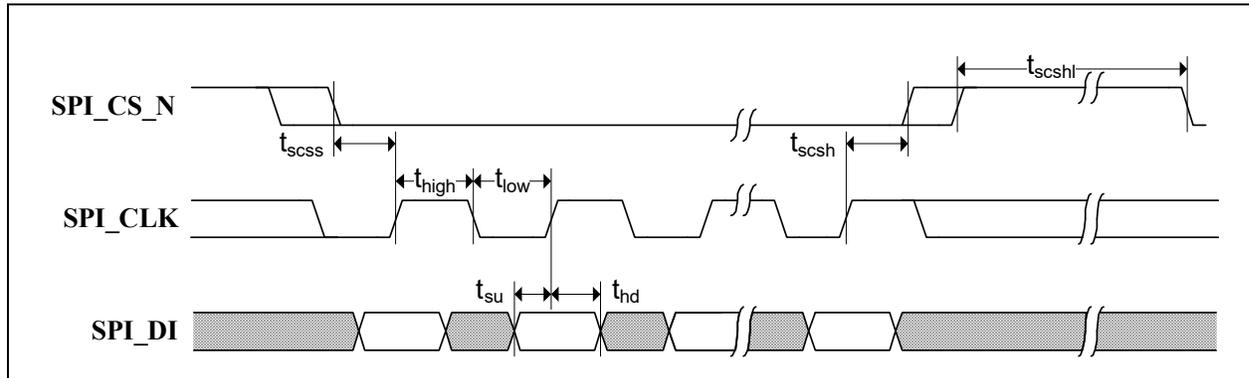

**FIGURE 15-5: SPI SLAVE OUTPUT TIMING**

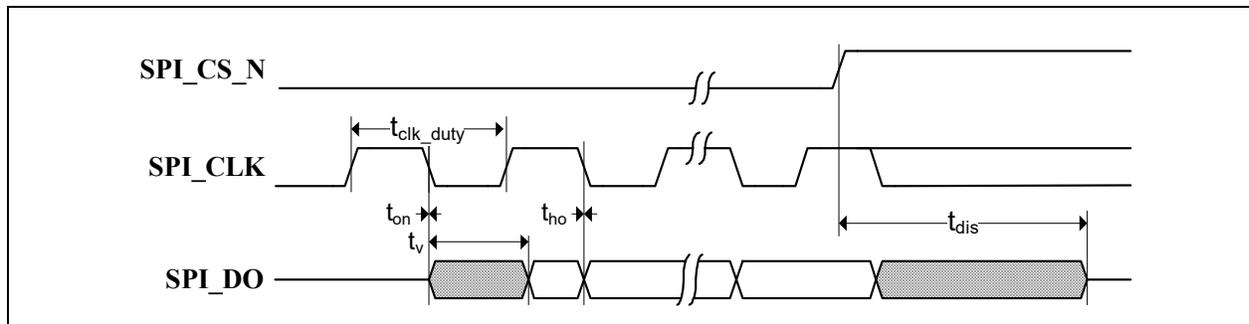

**TABLE 15-9: SPI TIMING VALUES**

| Symbol          | Description                                     | Min | Typ | Max        | Units |
|-----------------|---|-----|-----|------------|-------|
| $f_{sck}$       | SPI_CLK clock frequency                         |     |     | 25         | MHz   |
| $t_{clk\_duty}$ | SPI_CLK high/low duty cycle                     | 40  |     | 60         | %     |
| $t_{scss}$      | SPI_CS_N setup time to SPI_CLK                  | 5   |     |            | ns    |
| $t_{scsh}$      | SPI_CS_N hold time from SPI_CLK                 | 5   |     |            | ns    |
| $t_{scshl}$     | SPI_CS_N inactive time                          | 100 |     |            | ns    |
| $t_{su}$        | Data input setup time to SPI_CLK                | 10  |     |            | ns    |
| $t_{hd}$        | Data input hold time from SPI_CLK               | 4   |     |            | ns    |
| $t_{on}$        | Data output turn on time from SPI_CLK           | 0   |     |            | ns    |
| $t_v$           | Data output valid time from SPI_CLK             |     |     | Note 15-10 | ns    |
| $t_{ho}$        | Data output hold time from SPI_CLK              | 0   |     |            | ns    |
| $t_{dis}$       | Data output disable time from SPI_CS_N inactive |     |     | 20         | ns    |


**Note 15-10** 8.5 or 8.0, depending on loading of 30pF or 10pF, respectively.

# UPD350

## 16.0 PACKAGE INFORMATION

**Note:** For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>


**FIGURE 16-1: PACKAGE MARKING INFORMATION**

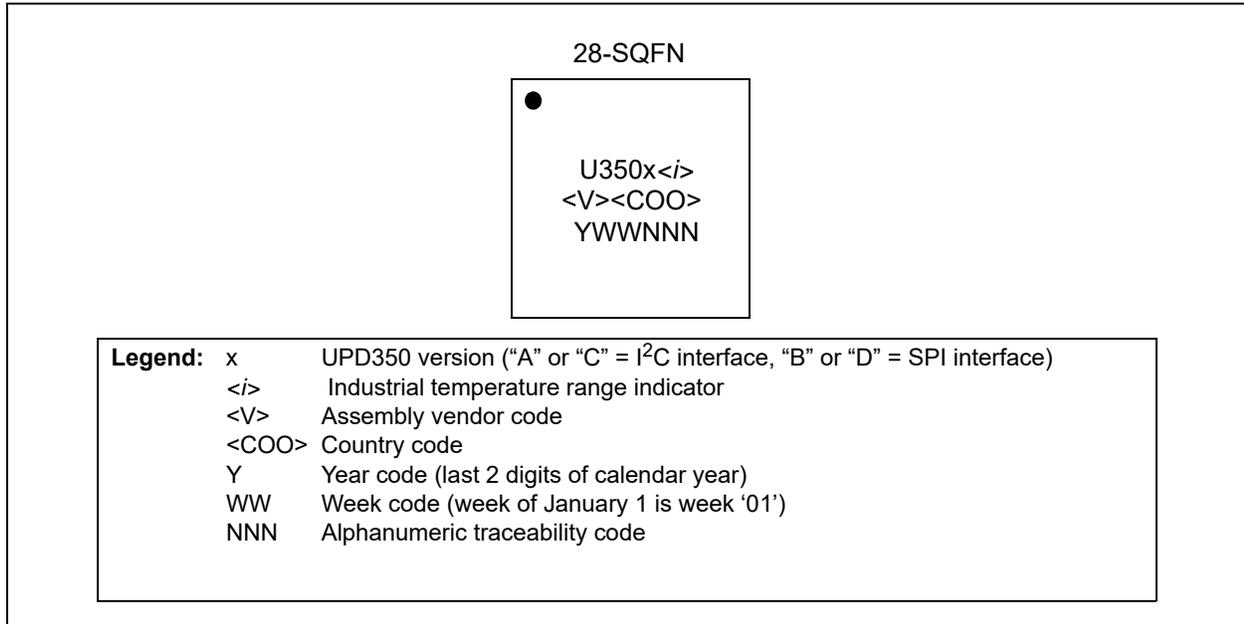

**Note:** For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>.

**FIGURE 16-2: 28-QFN PACKAGE (DRAWING & DIMENSIONS)**

**28-Lead Plastic Quad Flat, No Lead Package (MK) – 4x4x0.9 mm Body [QFN]**

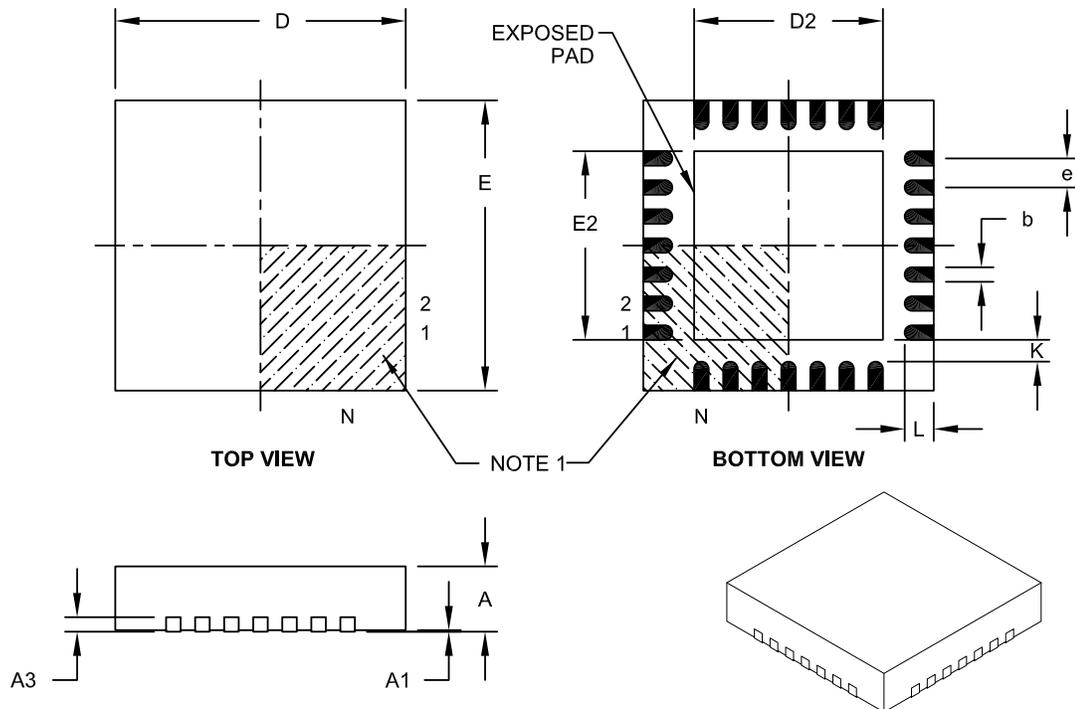

| Dimension Limits       | Units | MILLIMETERS |      |      |
|------------------------|-------|-------------|------|------|
|                        |       | MIN         | NOM  | MAX  |
| Number of Pins         | N     | 28          |      |      |
| Pitch                  | e     | 0.40 BSC    |      |      |
| Overall Height         | A     | 0.80        | 0.85 | 0.90 |
| Standoff               | A1    | 0.00        | 0.02 | 0.05 |
| Contact Thickness      | A3    | 0.20 REF    |      |      |
| Overall Width          | E     | 4.00 BSC    |      |      |
| Exposed Pad Width      | E2    | 2.50        | 2.60 | 2.70 |
| Overall Length         | D     | 4.00 BSC    |      |      |
| Exposed Pad Length     | D2    | 2.50        | 2.60 | 2.70 |
| Contact Width          | b     | 0.17        | 0.20 | 0.25 |
| Contact Length         | L     | 0.30        | 0.40 | 0.50 |
| Contact-to-Exposed Pad | K     | 0.20        | -    | -    |

**Notes:**

- Pin 1 visual index feature may vary, but must be located within the hatched area.
- Package is saw singulated.
- Dimensioning and tolerancing per ASME Y14.5M.  
 BSC: Basic Dimension. Theoretically exact value shown without tolerances.  
 REF: Reference Dimension, usually without tolerance, for information purposes only.


Microchip Technology Drawing C04-144A

# UPD350

**Note:** For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>.

**FIGURE 16-3: 28-QFN PACKAGE (LAND PATTERN)**

28-Lead Plastic Quad Flat, No Lead Package (MK) – 4x4x0.9 mm Body [QFN]

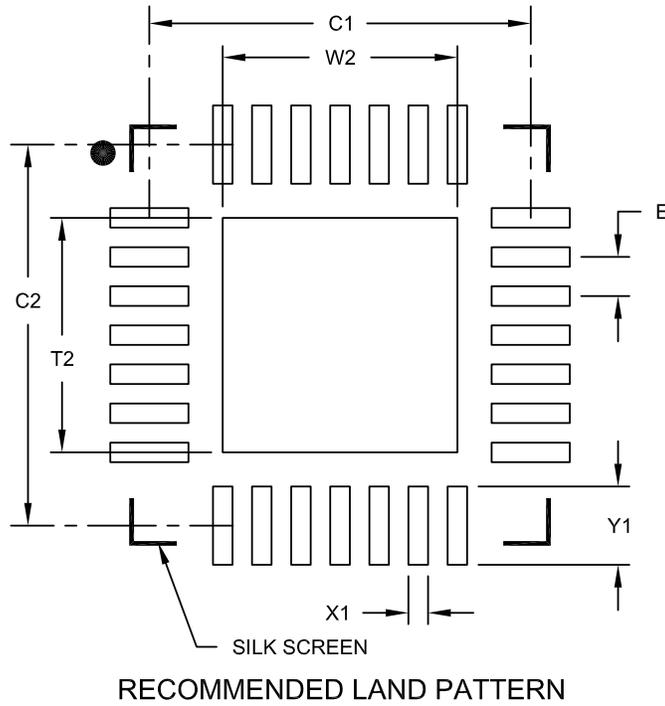

| Units                      |    | MILLIMETERS |      |      |
|----------------------------|----|-------------|------|------|
| Dimension Limits           |    | MIN         | NOM  | MAX  |
| Contact Pitch              | E  | 0.40 BSC    |      |      |
| Optional Center Pad Width  | W2 |             |      | 2.40 |
| Optional Center Pad Length | T2 |             |      | 2.40 |
| Contact Pad Spacing        | C1 |             | 3.90 |      |
| Contact Pad Spacing        | C2 |             | 3.90 |      |
| Contact Pad Width          | X1 |             |      | 0.20 |
| Contact Pad Length         | Y1 |             |      | 0.80 |

Notes:

1. Dimensioning and tolerancing per ASME Y14.5M

BSC: Basic Dimension. Theoretically exact value shown without tolerances.

Microchip Technology Drawing No. C04-2144A

## APPENDIX A: DATA SHEET REVISION HISTORY

TABLE A-1: REVISION HISTORY

| Revision               | Section/Figure/Entry  | Correction   |
|------------------------|---|--|
| DS00002643C (01-27-20) | Cover   | Added "Automotive" to list of Target Applications.   |
|                        | All   | Added hyperlinks to registers and register settings throughout document.   |
|                        | <a href="#">Section 2.0, "Introduction," on page 7</a>                          | Added information for Standalone DFP mode to <a href="#">UPD350 Family Differences</a> .   |
|                        | <a href="#">Figure 2-1</a>  | Diagram modified to include VBUS power circuitry. Wording of I <sup>2</sup> C/SPI connected device modified to include USB Smart Hub.  |
|                        | <a href="#">Section 3.0, "Pin Descriptions and Configuration," on page 9</a>    | Added information for Standalone DFP mode to <a href="#">UPD350-A / UPD350-C Alternate GPIO Functions in Standalone DFP/UFP Mode</a> and <a href="#">Section 3.2, "Pin Descriptions," on page 13</a> .   |
|                        | <a href="#">Section 3.2, "Pin Descriptions," on page 13</a>                     | <ul style="list-style-type: none"> <li>Corrected GPO4 note: "The GPO4 general purpose signal must be augmented with a weak pull-down in order to prevent the device from entering a test mode on start-up."</li> <li>Updated GPIO note: "In companion mode, these signals should be tied to ground when unused."</li> </ul>  |
|                        | <a href="#">Section 4.0, "Register Map," on page 18</a>                         | Added new chapter.   |
|                        | <a href="#">Section 7.0, "Clocks, Resets, and Power Management," on page 30</a> | Added <a href="#">Clocks and Power Management Registers</a> section.   |
|                        | <a href="#">Section 8.0, "System Control," on page 35</a>                       | Added <a href="#">System Interrupts</a> section.   |
|                        |   | Expansion of <a href="#">General Purpose I/O</a> , <a href="#">External Overcurrent Detection</a> , <a href="#">General Purpose Timer</a> , <a href="#">System Control Registers</a> sections to include additional feature detail and register control information.   |
|                        | <a href="#">Section 9.0, "Cable Plug Orientation and Detection," on page 67</a> | Expansion of <a href="#">CC Comparator</a> , <a href="#">DFP Operation</a> , <a href="#">DRP Operation (Legacy)</a> , <a href="#">DRP Offload</a> , <a href="#">Collision Avoidance</a> , <a href="#">Fast Role Swap (FRS)</a> , <a href="#">VCONN Operation</a> , <a href="#">VBUS Detection</a> , and <a href="#">Back-Drive Detection</a> sections to include additional feature detail and register control information. |
|                        |   | Added <a href="#">Standalone DFP (UPD350-A/UPD350-C Only)</a> section.   |
|                        | <a href="#">Section 10.0, "Baseband CC Interface (BCI)," on page 108</a>        | Added <a href="#">Baseband CC Interface Registers</a> section.   |

# UPD350

**TABLE A-1: REVISION HISTORY (CONTINUED)**

| Revision               | Section/Figure/Entry  | Correction   |
|------------------------|---|--|
|                        | Section 10.3.1, "CC RX DAC Control Register (CC_RX_DAC_CTL)," on page 110, Section 10.3.4, "BB TX Risex Registers (BB_TX_RISEx)," on page 111, Section 10.3.5, "BB TX Fallx Registers (BB_TX_FALLx)," on page 112 | Added recommended field values.  |
|                        | Section 11.0, "Power Delivery MAC," on page 113   | Expansion of <a href="#">PD MAC Transmitter</a> , <a href="#">PD MAC Receiver</a> , <a href="#">PD MAC BIST</a> , sections to include additional feature detail and register control information.<br>Added <a href="#">Power Delivery MAC Registers</a> section. |
|                        | Section 12.0, "Power Switch," on page 173   | Expansion of <a href="#">Power Switch</a> to include additional feature details<br>Added <a href="#">Software Override</a> , <a href="#">Power Switch Interrupts</a> , <a href="#">Power Switch Registers</a> sections.  |
|                        | Section 13.0, "HDMI/DisplayPort Hot Plug Detect (HPD)," on page 187   | Added <a href="#">HPD Receiver</a> , <a href="#">HPD Transmission</a> , <a href="#">DisplayPort HPD Registers</a> sections.  |
|                        | Section 14.0, "Watchdog Timer (WDT)," on page 194   | Expansion of <a href="#">General Description</a> to include additional feature details<br>Added <a href="#">WDT Operation</a> , <a href="#">I2C/SPI Writes</a> , <a href="#">Watchdog Timer Registers</a> sections.  |
|                        | Table 15-4, "DC Electrical Characteristics"   | Max value for Schmitt Trigger Hysteresis changed from "0" to "200".  |
| DS00002643B (06-19-18) | Cover   | Added new highlight bullet: "Companion PD Controller for Microchip USB Hub / SoC".   |
|                        | Section 2.0, "Introduction," on page 7  | Edited first paragraph and added new content.  |
| DS00002643A (03-26-18) | Initial Document Release  |  |



## THE MICROCHIP WEB SITE

Microchip provides online support via our WWW site at [www.microchip.com](http://www.microchip.com). This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

## CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at [www.microchip.com](http://www.microchip.com). Under "Support", click on "Customer Change Notification" and follow the registration instructions.

## CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

**Technical support is available through the web site at: <http://www.microchip.com/support>**

# UPD350

## PRODUCT IDENTIFICATION SYSTEM

To order or obtain information, e.g., on pricing or delivery, refer to the factory or the listed sales office.

| <u>PART NO.</u>              | <u>X</u> | <u>[X]<sup>(1)</sup></u>   | <u>[X]</u>  | <u>/XXX</u> | <u>Vxx</u>      |
|------------------------------|----------|--|-------------|-------------|-----------------|
| Device                       | Version  | Tape & Reel Option   | Temp. Range | Package     | Automotive Code |
| <b>Device:</b>               | UPD350   |  |             |             |                 |
| <b>Version:</b>              | A        | = +1.8V-3.3V I <sup>2</sup> C Interface, Dead battery support    |             |             |                 |
|                              | B        | = SPI Interface, Dead battery support                            |             |             |                 |
|                              | C        | = +1.8V-3.3V I <sup>2</sup> C Interface, No dead battery support |             |             |                 |
|                              | D        | = SPI Interface, No dead battery support                         |             |             |                 |
| <b>Tape and Reel Option:</b> | Blank    | = Standard packaging (tray)                                      |             |             |                 |
|                              | T        | = Tape and Reel ( <a href="#">Note 1</a> )                       |             |             |                 |
| <b>Temperature Range:</b>    | Blank    | = 0°C to +70°C (Commercial)                                      |             |             |                 |
|                              | -I       | = -40°C to +85°C (Industrial and Grade 3 Automotive)             |             |             |                 |
| <b>Package:</b>              | Q8X      | = 28-pin QFN   |             |             |                 |
| <b>Automotive Code:</b>      | Vxx      | = 3 character code with "V" prefix, specifying automotive part   |             |             |                 |

**Examples:**

- a) UPD350A/Q8X  
I<sup>2</sup>C Interface, Dead battery support  
Standard packaging,  
Commercial temperature,  
28-pin QFN package
- b) UPD350BT/Q8X  
SPI Interface, Dead battery support  
Tape and Reel,  
Commercial temperature,  
28-pin QFN package
- c) UPD350B-I/Q8XVAA  
SPI Interface, Dead Battery support  
Standard packaging,  
Industrial Temperature,  
28-pin QFN package, Automotive
- d) UPD350C/Q8X  
I<sup>2</sup>C Interface, No dead battery support  
Standard packaging,  
Commercial temperature,  
28-pin QFN package
- e) UPD350DT-I/Q8X  
SPI Interface, No dead battery support  
Tape and Reel,  
Industrial temperature,  
28-pin QFN package

**Note 1:** Tape and Reel identifier only appears in the catalog part number description. This identifier is used for ordering purposes and is not printed on the device package. Check with your Microchip Sales Office for package availability with the Tape and Reel option.

**Note the following details of the code protection feature on Microchip devices:**

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as “unbreakable.”

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

---

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

**Trademarks**

The Microchip name and logo, the Microchip logo, Adaptec, AnyRate, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, chipKIT, chipKIT logo, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Klear, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PackeTime, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TempTracker, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, FlashTec, Hyper Speed Control, HyperLight Load, IntelliMOS, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, Vite, WinPath, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BlueSky, BodyCom, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, INICnet, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQR, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2018-2020, Microchip Technology Incorporated, All Rights Reserved.

ISBN: 9781522454076

*For information regarding Microchip's Quality Management Systems, please visit [www.microchip.com/quality](http://www.microchip.com/quality).*



# MICROCHIP

## Worldwide Sales and Service

### AMERICAS

**Corporate Office**  
2355 West Chandler Blvd.  
Chandler, AZ 85224-6199  
Tel: 480-792-7200  
Fax: 480-792-7277  
Technical Support:  
<http://www.microchip.com/support>  
Web Address:  
[www.microchip.com](http://www.microchip.com)

#### Atlanta

Duluth, GA  
Tel: 678-957-9614  
Fax: 678-957-1455

#### Austin, TX

Tel: 512-257-3370

#### Boston

Westborough, MA  
Tel: 774-760-0087  
Fax: 774-760-0088

#### Chicago

Itasca, IL  
Tel: 630-285-0071  
Fax: 630-285-0075

#### Dallas

Addison, TX  
Tel: 972-818-7423  
Fax: 972-818-2924

#### Detroit

Novi, MI  
Tel: 248-848-4000

#### Houston, TX

Tel: 281-894-5983

#### Indianapolis

Noblesville, IN  
Tel: 317-773-8323  
Fax: 317-773-5453  
Tel: 317-536-2380

#### Los Angeles

Mission Viejo, CA  
Tel: 949-462-9523  
Fax: 949-462-9608  
Tel: 951-273-7800

#### Raleigh, NC

Tel: 919-844-7510

#### New York, NY

Tel: 631-435-6000

#### San Jose, CA

Tel: 408-735-9110  
Tel: 408-436-4270

#### Canada - Toronto

Tel: 905-695-1980  
Fax: 905-695-2078

### ASIA/PACIFIC

**Australia - Sydney**  
Tel: 61-2-9868-6733

**China - Beijing**  
Tel: 86-10-8569-7000

**China - Chengdu**  
Tel: 86-28-8665-5511

**China - Chongqing**  
Tel: 86-23-8980-9588

**China - Dongguan**  
Tel: 86-769-8702-9880

**China - Guangzhou**  
Tel: 86-20-8755-8029

**China - Hangzhou**  
Tel: 86-571-8792-8115

**China - Hong Kong SAR**  
Tel: 852-2943-5100

**China - Nanjing**  
Tel: 86-25-8473-2460

**China - Qingdao**  
Tel: 86-532-8502-7355

**China - Shanghai**  
Tel: 86-21-3326-8000

**China - Shenyang**  
Tel: 86-24-2334-2829

**China - Shenzhen**  
Tel: 86-755-8864-2200

**China - Suzhou**  
Tel: 86-186-6233-1526

**China - Wuhan**  
Tel: 86-27-5980-5300

**China - Xian**  
Tel: 86-29-8833-7252

**China - Xiamen**  
Tel: 86-592-2388138

**China - Zhuhai**  
Tel: 86-756-3210040

### ASIA/PACIFIC

**India - Bangalore**  
Tel: 91-80-3090-4444

**India - New Delhi**  
Tel: 91-11-4160-8631

**India - Pune**  
Tel: 91-20-4121-0141

**Japan - Osaka**  
Tel: 81-6-6152-7160

**Japan - Tokyo**  
Tel: 81-3-6880-3770

**Korea - Daegu**  
Tel: 82-53-744-4301

**Korea - Seoul**  
Tel: 82-2-554-7200

**Malaysia - Kuala Lumpur**  
Tel: 60-3-7651-7906

**Malaysia - Penang**  
Tel: 60-4-227-8870

**Philippines - Manila**  
Tel: 63-2-634-9065

**Singapore**  
Tel: 65-6334-8870

**Taiwan - Hsin Chu**  
Tel: 886-3-577-8366

**Taiwan - Kaohsiung**  
Tel: 886-7-213-7830

**Taiwan - Taipei**  
Tel: 886-2-2508-8600

**Thailand - Bangkok**  
Tel: 66-2-694-1351

**Vietnam - Ho Chi Minh**  
Tel: 84-28-5448-2100

### EUROPE

**Austria - Wels**  
Tel: 43-7242-2244-39  
Fax: 43-7242-2244-393

**Denmark - Copenhagen**  
Tel: 45-4450-2828  
Fax: 45-4485-2829

**Finland - Espoo**  
Tel: 358-9-4520-820

**France - Paris**  
Tel: 33-1-69-53-63-20  
Fax: 33-1-69-30-90-79

**Germany - Garching**  
Tel: 49-8931-9700

**Germany - Haan**  
Tel: 49-2129-3766400

**Germany - Heilbronn**  
Tel: 49-7131-72400

**Germany - Karlsruhe**  
Tel: 49-721-625370

**Germany - Munich**  
Tel: 49-89-627-144-0  
Fax: 49-89-627-144-44

**Germany - Rosenheim**  
Tel: 49-8031-354-560

**Israel - Ra'anana**  
Tel: 972-9-744-7705

**Italy - Milan**  
Tel: 39-0331-742611  
Fax: 39-0331-466781

**Italy - Padova**  
Tel: 39-049-7625286

**Netherlands - Drunen**  
Tel: 31-416-690399  
Fax: 31-416-690340

**Norway - Trondheim**  
Tel: 47-7288-4388

**Poland - Warsaw**  
Tel: 48-22-3325737

**Romania - Bucharest**  
Tel: 40-21-407-87-50

**Spain - Madrid**  
Tel: 34-91-708-08-90  
Fax: 34-91-708-08-91

**Sweden - Gothenberg**  
Tel: 46-31-704-60-40

**Sweden - Stockholm**  
Tel: 46-8-5090-4654

**UK - Wokingham**  
Tel: 44-118-921-5800  
Fax: 44-118-921-5820